



COMBINATION METER


FROM POWER SOURCE SYSTEM (SEE PAGE 40)

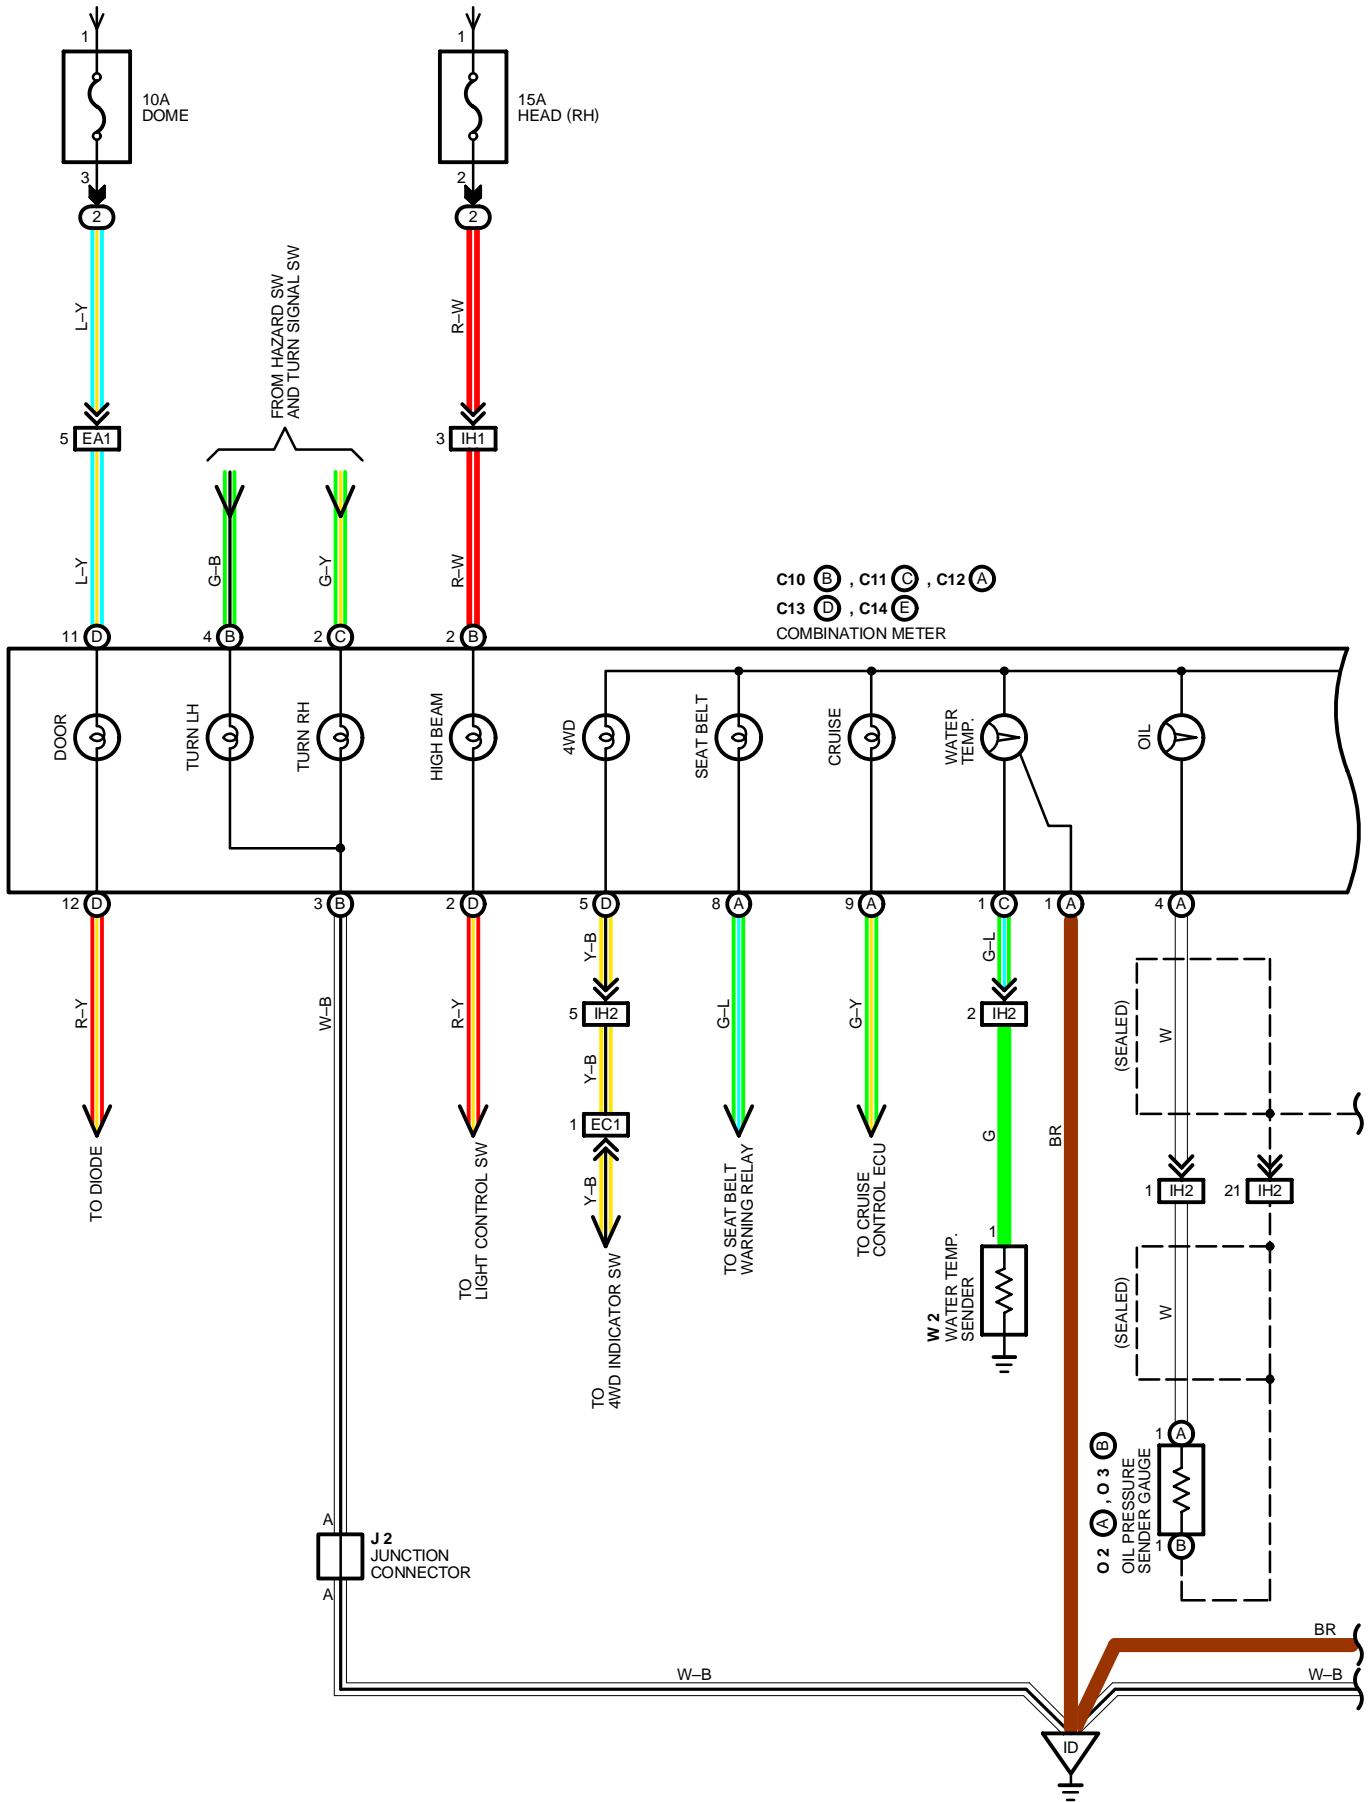

FROM POWER SOURCE SYSTEM (SEE PAGE 40)

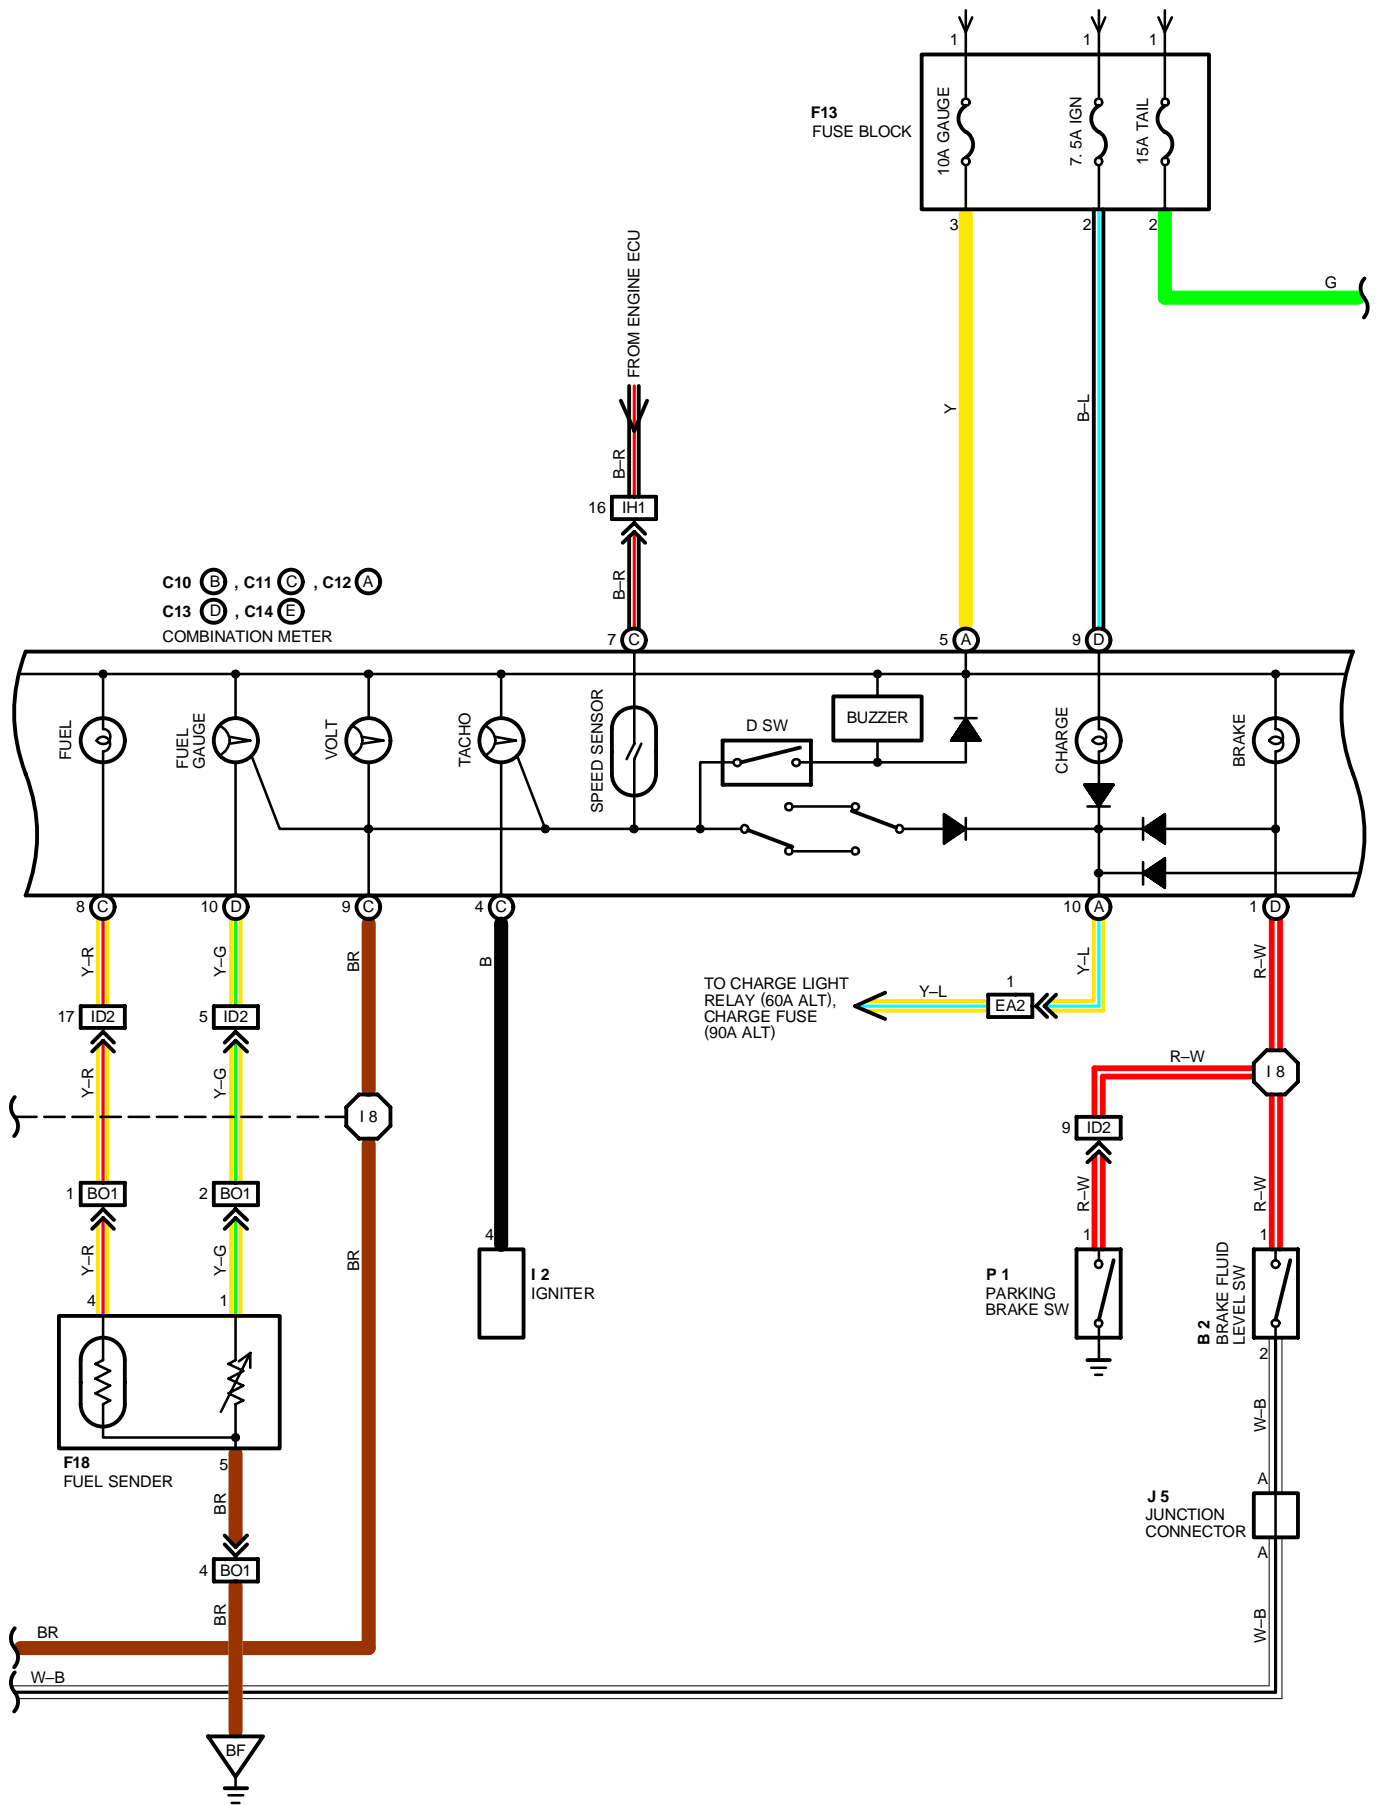

COMBINATION METER

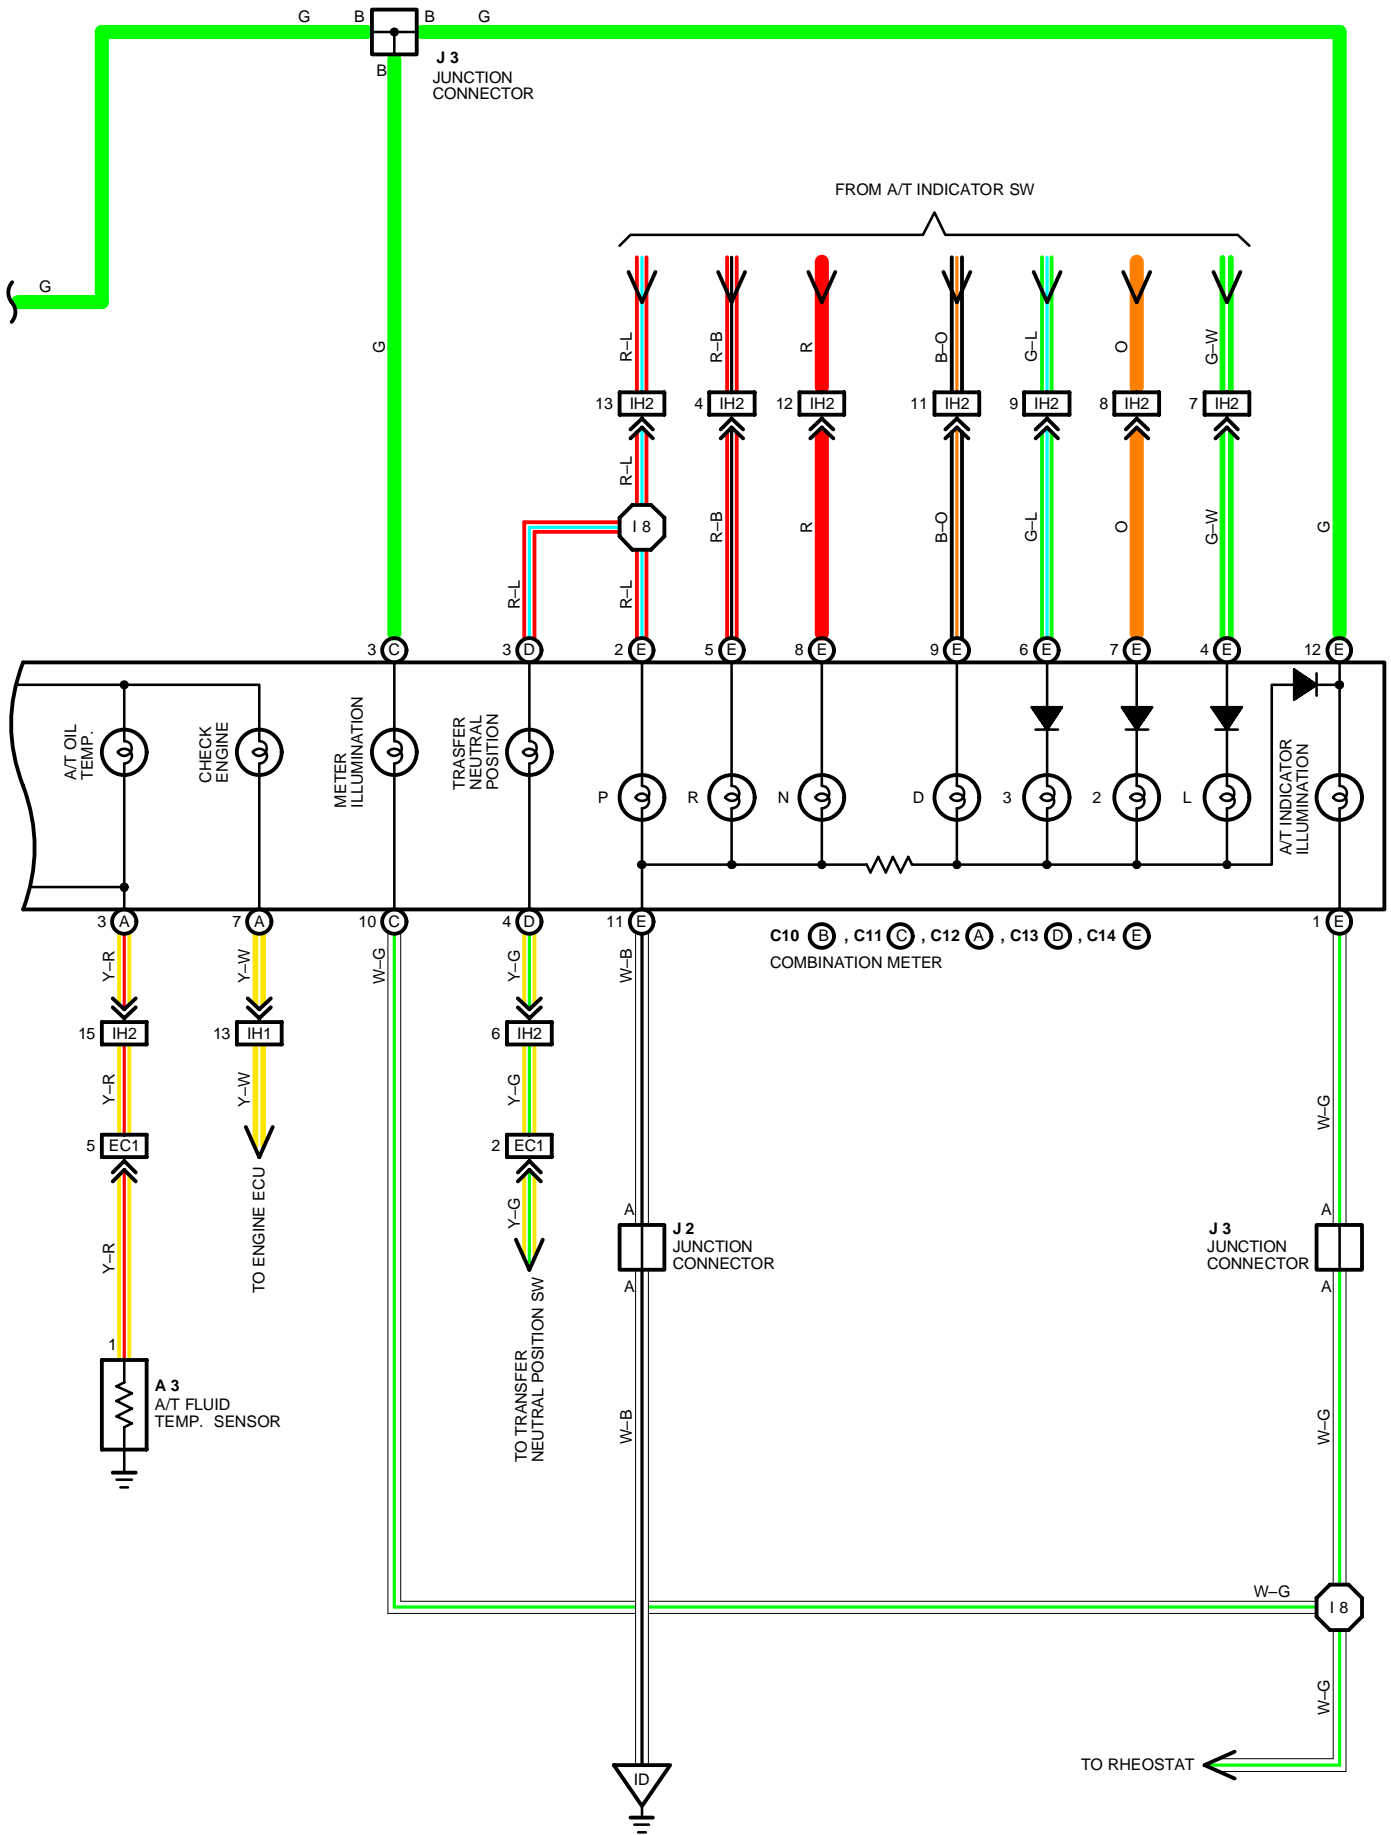

SERVICE HINTS

B 2 BRAKE FLUID LEVEL SW

1-2 : CLOSED WITH FLOAT DOWN

C10(B), C12(A), C13(D), C14(E) COMBINATION METER

(D)11-GROUND: ALWAYS APPROX. 12 VOLTS

(A)5, (D)9-GROUND: APPROX. 12 VOLTS WITH IGNITION SW AT ON POSITION

(A)1, (B)3, (C)9, (E)11-GROUND: ALWAYS CONTINUITY

P 1 PARKING BRAKE SW

1-GROUND : CLOSED WITH PARKING BRAKE LEVER PULLED UP

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 3	19	C14	E 20	J 5	20
B 2	19	F13	20	O 2	A 19
C10	B 20	F18	21	O 3	B 19
C11	C 20	I 2	19	P 1	21
C12	A 20	J 2	20	W 2	19
C13	D 20	J 3	20		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	16	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	22	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2		
EC1	22	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
ID2	24	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IH1	24	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IH2		
BO1	26	FLOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 2 WIRE (BESIDE THE FUEL TANK)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	24	LEFT KICK PANEL
BF	26	UNDER THE CENTER CONSOLE BOX

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 8	24	COWL WIRE			

COMBINATION METER

A 3




B 2 GRAY




C10 (B) BROWN




C11 (C) GRAY

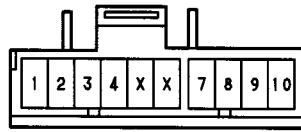


C12 (A) BROWN

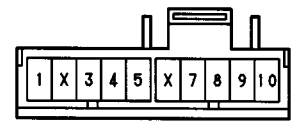

C13 (D) BLUE

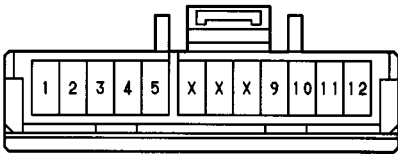


C14 (E)

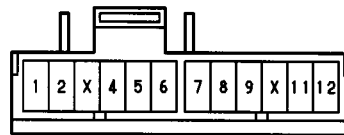

F13

(SEE PAGE 18)

F18 BLACK

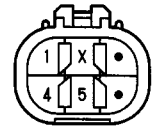

I 2 BLACK

 


J 2, J 5



(HINT:SEE PAGE 7)

J 3 ORANGE



(HINT:SEE PAGE 7)

O 2 (A)



O 3 (B)



P 1



W 2 GRAY

