 


[Engine & Cooling](#)
[Fuel](#)
[Ignition](#)
[Electrical](#)
[Running gear](#)
[Torque settings](#)
[Capacities](#)
[Notes & Illustrations](#)


# Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

[MENU](#)
[HELP](#)

## Engine and cooling system Range Rover 4.0 1994 to 1997

Type	4.0 V8 OHV 142kW	
Capacity (cm <sup>3</sup> ) / number of cylinders	3947 / 8	
Compression ratio / pressure	bar	9.35 / ≥9.3
Oil pressure	bar	[2.1 to 2.8]
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
Valve clearance - exhaust	mm	0: Hyd.
Firing order	1-8-4-3-6-5-7-2	
No 1 cylinder position	FL	
Thermostat opening temperature	°C	88
Radiator cap pressure	bar	1.00

## Fuel system Range Rover 4.0 1994 to 1997

Idle speed - manual [auto]	rpm	700±20
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	1.5±0.5
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO <sub>2</sub> @ idle speed [3000 rpm] - see page VI	%	—
O <sub>2</sub> @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection	Sagem/Lucas	
Type / ref	GEMS8	
Main jet / needle	—	
Injection pressure	bar	—
Pump pressure	bar	—
Octane rating	RON	95[U]

## Ignition system Range Rover 4.0 1994 to 1997

Type	Direct electronic	
Ignition coil	Lucas 2DIS2	
Primary resistance	ohms	—
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor	—	
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation	—	
Ignition timing - basic [static V = Vacuum NV = No Vacuum]	° Crankshaft @ rpm	Computer control N/A
Total ignition advance	° Crankshaft @ rpm	Computer control
Centrifugal check.	° Crankshaft @ rpm	Computer control
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs	Champion	
Type	RN11YCC	
Electrode gap	mm	0.90 to 1.00

## Electrical system Range Rover 4.0 1994 to 1997

Battery	V / CC / RC	—
Alternator voltage / full load current / engine rpm	13.6 to 14.4 / 100, 105, 120 /	
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

## Running gear Range Rover 4.0 1994 to 1997

<b>Brakes -</b>		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	2.0
<b>Tyres</b>		
Saloon	Size	—
Estate / Van	Size	235/70x16: 255/70x16
Pressure - front / rear - Saloon	bar	—
- Estate / Van	bar	1.7 / 1.7
<b>Front suspension / wheel alignment</b>		
Toe-in (+) / Toe-out (-)	mm [°]	-0.6 to -1.8
Camber	0	
Castor	+4°	
King pin inclination	+8°	
<b>Rear suspension / wheel alignment</b>		
Toe-in (+) / Toe-out (-)	mm [°]	—
Camber	—	


## Torque wrench settings Range Rover 4.0 1994 to 1997

Cylinder head - stage 1	Nm	20
- stage 2	Nm	+ 90°
Cylinder head - stage 3	Nm	+ 90°
- stage 4	Nm	—
Big-end bearings	Nm	20 + 80°
Main bearings	Nm	14 then 72. Side: 14 then 45
Clutch cover	Nm	40
Flywheel [driveplate]	Nm	78
Front hubs	Nm	260
Rear hubs	Nm	—
Wheel nuts / bolts	Nm	108
Spark plugs	Nm	20

## Capacities Range Rover 4.0 1994 to 1997

Engine oil & filter	litres	6.6
Gearbox - 4-speed [5-speed]	litres	2.7. Transfer: 2.4
Automatic transmission - refill	litres	9.7. Transfer: 2.4
Final drive	litres	Front & rear: 1.7
Cooling system	litres	11.3
Fuel tank	litres	100

## Notes and Illustrations

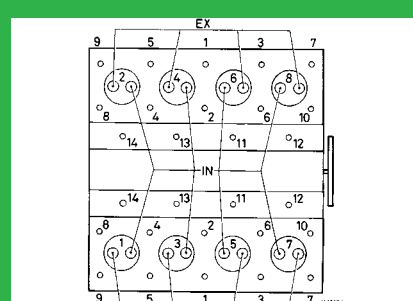

3947 cm<sup>3</sup>