


Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------

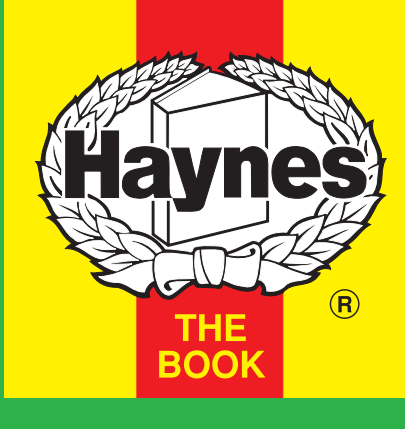

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU	HELP
------	------

Engine and cooling systemEspace 2.2i (J117)1991

Type		J7T-7-70
Capacity (cm³) / number of cylinders		2165 / 4
Compression ratio / pressure	bar	9.2 / _
Oil pressure	bar	≥0.8 [3.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.10 to 0.15
Valve clearance - exhaust	mm	0.20 to 0.25
Firing order		1-3-4-2
No 1 cylinder position		FE
Thermostat opening temperature	°C	81
Radiator cap pressure	bar	1.2

Fuel systemEspace 2.2i (J117)1991

Idle speed - manual [auto]	rpm	800±50 N/A
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200
CO2 @ idle speed [3000 rpm] - see page VI	%	_
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		Bendix
Type / ref		Renix MPI
Main jet / needle		_
Injection pressure	bar	2.0±0.2
Pump pressure	bar	2.5±0.2
Octane rating	RON	95[E 95 RON]

Ignition systemEspace 2.2i (J117)1991

Type		Computerized
Ignition coil		Renix
Primary resistance	ohms	0.4 to 0.8
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		Renix
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control
V = Vacuum NV = No Vacuum		_
Total ignition advance	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		AC/Champion
Type		C41CLTS / S7YC
Electrode gap	mm	0.75 to 0.85

Electrical systemEspace 2.2i (J117)1991

Battery	V / CC / RC	12 / 210 / 65
Alternator voltage / full load current / engine rpm		13.5 to 14.8 / _ / 3000
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	400 / _

Running gearEspace 2.2i (J117)1991

Brakes -		
Front (min. friction material thickness)	mm	6.0 with backing
Rear (min. friction material thickness)	mm	2.5 with backing

Tyres		
Saloon	Size	_
Estate / Van	Size	195/65x14
Pressure - front / rear - Saloon	bar	_
- Estate / Van	bar	1.9 / 1.7

Front suspension / wheel alignment

Toe-in (+) / Toe-out (-)	mm [°]	-4.0±2.0
Camber		+20'±30' N/A
Castor		+3°25'±20'
King pin inclination		+13°±30' N/A

Rear suspension / wheel alignment

Toe-in (+) / Toe-out (-)	mm [°]	+1.0 to 4.0 N/A
Camber		0±30' N/A


Torque wrench settingsEspace 2.2i (J117)1991

Cylinder head - stage 1	Nm	50
- stage 2	Nm	80
Cylinder head - stage 3	Nm	- 180°
- stage 4	Nm	88 to 98
Big-end bearings	Nm	60 to 65
Main bearings	Nm	88 to 98
Clutch cover	Nm	25
Flywheel [driveplate]	Nm	60
Front hubs	Nm	250
Rear hubs	Nm	160
Wheel nuts / bolts	Nm	90
Spark plugs	Nm	_

CapacitiesEspace 2.2i (J117)1991

Engine oil & filter	litres	6.2
Gearbox - 4-speed [5-speed]	litres	2.2
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	7.2
Fuel tank	litres	63

Notes and Illustrations

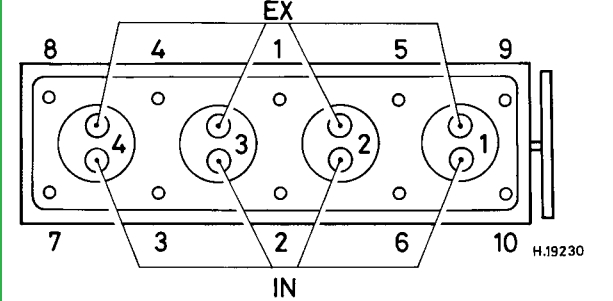

2165 cm³, 8V