 


Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------

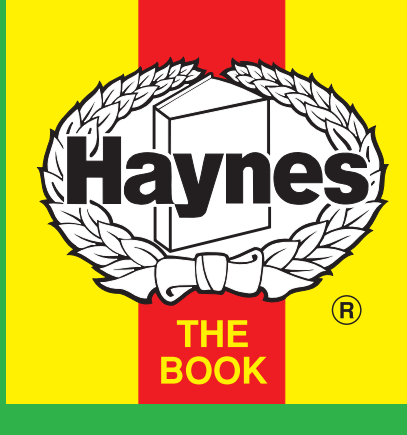

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemXT Turbo Coupé1989 to 1991

Type		EA82 OHC
Capacity (cm³) / number of cylinders		1781 / 4
Compression ratio / pressure	bar	7.7 / ≥7.2
Oil pressure	bar	0.98 [2.9]
Oil temperature	°C	75 to 85
Valve clearance - inlet	mm	0: Hyd.
- exhaust	mm	0: Hyd.
Firing order		1-3-2-4
No 1 cylinder position		FR
Thermostat opening temperature	°C	83.5 to 86.5
Radiator cap pressure	bar	0.88±0.10

Fuel systemXT Turbo Coupé1989 to 1991

Idle speed - manual [auto]	rpm	900±50
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	1.0±0.5
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Subaru
Type / ref		MPFI + Turbo
Main jet / needle		—
Injection pressure	bar	2.3 to 2.5
Pump pressure	bar	4.2 to 4.9
Octane rating	RON	91[R]

Ignition systemXT Turbo Coupé1989 to 1991

Type		Computerized
Ignition coil		Hitachi E12-116
Primary resistance	ohms	0.84 to 1.02
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Hitachi
Points gap (air gap)	mm	[0.30 to 0.50]
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Anticlockwise
Ignition timing - basic [static	° Crankshaft @ rpm	22±2 BTDC @ 900
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK/Champion
Type		BPR7ES / RN7YC
Electrode gap	mm	0.70 to 0.80

Electrical systemXT Turbo Coupé1989 to 1991

Battery	V / CC / RC	12 / 306 / 78 or 420 / 111
Alternator voltage / full load current / engine rpm		14.2 to 14.8 / _ / 2500
Starter motor current / voltage - cranking	A / V	280 to 370 / 8.0
- locked	A / V	780 to 980 / 4.0

Running gearXT Turbo Coupé1989 to 1991

Brakes -		
Front (min. friction material thickness)	mm	—
Rear (min. friction material thickness)	mm	—

Tyres		
Saloon	Size	185/70x13: 185/60x14
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.0 / 2.0
- Estate / Van	bar	—

Front suspension / wheel alignment

Toe-in (+) / Toe-out (–)	mm [°]	+2.0±1.0
Camber		+40’±45’
Castor		+3°25’±45’
King pin inclination		+14°

Rear suspension / wheel alignment

Toe-in (+) / Toe-out (–)	mm [°]	0±3.0
Camber		0±30’

Torque wrench settingsXT Turbo Coupé1989 to 1991

Cylinder head - stage 1	Nm	29
- stage 2	Nm	59
- stage 3	Nm	64
- stage 4	Nm	—
Big-end bearings	Nm	41
Main bearings	Nm	39 to 47
Clutch cover	Nm	14 to 17
Flywheel [driveplate]	Nm	69 to 75
Front hubs	Nm	196
Rear hubs	Nm	196
Wheel nuts / bolts	Nm	78 to 98
Spark plugs	Nm	20 to 29


CapacitiesXT Turbo Coupé1989 to 1991

Engine oil & filter	litres	4.0
Gearbox - 4-speed [5-speed]	litres	3.5
Automatic transmission - refill	litres	9.5
Final drive	litres	AT: 1.2¹
Cooling system	litres	5.5
Fuel tank	litres	60


Notes and Illustrations

¹Rear: 0.8

 
1: Idle speed 2: CO / Mixture

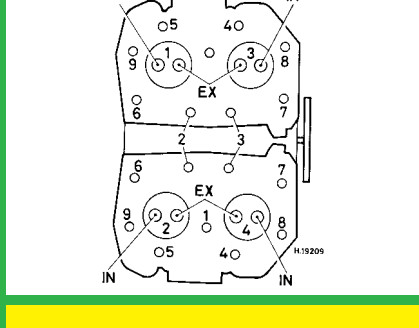


1781 cm³

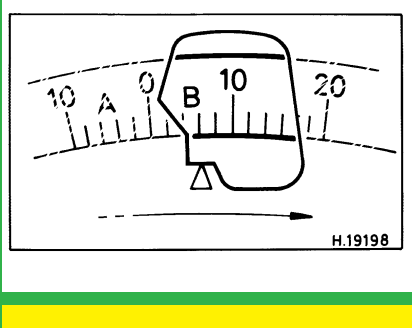 

1781 cm³

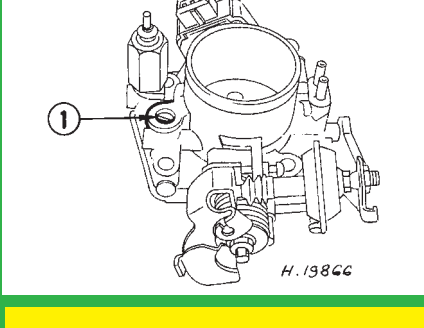 

MPFi

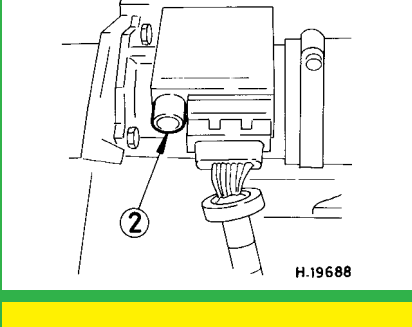 

MPFi