

TOYOTA

Corolla 1.6 Exec. (AE92)

1987 to 1992

Engine & Cooling

Fuel

Ignition


Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

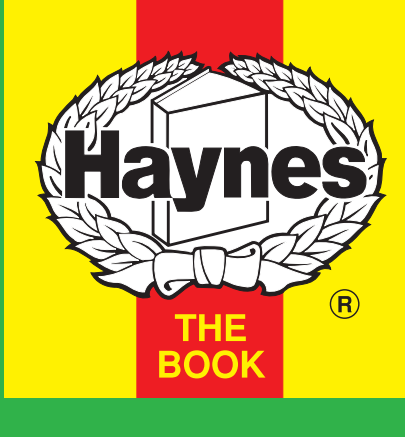

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system		Corolla 1.6 Exec. (AE92)	1987 to 1992
Type		4A-F (DOHC 16V)	
Capacity (cm ³) / number of cylinders		1587 / 4	
Compression ratio / pressure	bar	9.5 / ≥9.8	
Oil pressure	bar	[2.5 to 5.0]	
Oil temperature	°C	80	
Valve clearance - inlet	mm	0.15 to 0.25	
- exhaust	mm	0.20 to 0.30	
Firing order		1-3-4-2	
No 1 cylinder position		TBE	
Thermostat opening temperature	°C	80 to 84	
Radiator cap pressure	bar	0.74 to 1.03	

Fuel system		Corolla 1.6 Exec. (AE92)	1987 to 1992
Idle speed - manual [auto]	rpm	800 [800. PAS: 900]	
Fast idle speed - manual [auto]	rpm	3000±200	
CO @ idle speed [3000 rpm] - see page VI	%	1.0 to 2.5. 90 ►: 1.0 to 2.0	
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200	
CO2 @ idle speed [3000 rpm] - see page VI	%	—	
O2 @ idle speed [3000 rpm] - see page VI	%	—	
Carburettor / fuel injection		Aisan	
Type / ref		2V, 21100-16300	
Main jet / needle		—	
Injection pressure	bar	—	
Pump pressure	bar	—	
Octane rating	RON	95[E 95 RON]	

Ignition system		Corolla 1.6 Exec. (AE92)	1987 to 1992
Type		Electronic	
Ignition coil		—	
Primary resistance	ohms	1.3 to 1.5	
Ballast resistor	ohms	—	
Voltage - Tmnl 15(+) to earth	V	—	
Distributor		—	
Points gap (air gap)	mm	[0.20 to 0.40]	
Dwell angle	° (%)	—	
Condenser capacity	µF	—	
Rotation		—	
Ignition timing - basic [static	° Crankshaft @ rpm	10 BTDC @ 900	
V = Vacuum NV = No Vacuum		NV	
Total ignition advance	° Crankshaft @ rpm	—	
	° Crankshaft @ rpm	—	
	° Crankshaft @ rpm	—	
Centrifugal check.	° Crankshaft @ rpm	0 to 3 @ 1600 ¹	
	° Crankshaft @ rpm	11.4 to 14.4 @ 3300 ¹	
	° Crankshaft @ rpm	19.4 to 23.4 @ 6600 ¹	
Vacuum range check	mbar	133 to 560 ²	
Maximum vacuum advance	° Crankshaft	13 to 17 ²	
Spark plugs		NGK/Champion	
Type		BCRE 527Y / RC9YCC	
Electrode gap	mm	0.80	

Electrical system		Corolla 1.6 Exec. (AE92)	1987 to 1992
Battery	V / CC / RC	12 / 50Ah	
Alternator voltage / full load current / engine rpm		13.5 to 15.1 / _ / 3000	
Starter motor current / voltage - cranking	A / V	—	
- locked	A / V	—	

Running gear		Corolla 1.6 Exec. (AE92)	1987 to 1992
Brakes -			
Front (min. friction material thickness)	mm	1.0	
Rear (min. friction material thickness)	mm	1.0	
Tyres			
Saloon	Size	175/70x13	
Estate / Van	Size	—	
Pressure - front / rear - Saloon	bar	1.8 / 1.8	
- Estate / Van	bar	—	

Front suspension / wheel alignment			
Toe-in (+) / Toe-out (–)	mm [°]	+1.0±1.0 ³	
Camber		-10'±45'	
Castor		+1°20±45'	
King pin inclination		+12°40'±45'	
Rear suspension / wheel alignment			
Toe-in (+) / Toe-out (–)	mm [°]	+4.0±1.0 ⁴	
Camber		-35'±45'	

Torque wrench settings		Corolla 1.6 Exec. (AE92)	1987 to 1992
Cylinder head - stage 1	Nm	60 in several stages	
- stage 2	Nm	—	
- stage 3	Nm	—	
- stage 4	Nm	—	
Big-end bearings	Nm	49	
Main bearings	Nm	60	
Clutch cover	Nm	19	
Flywheel [driveplate]	Nm	78 [64]	
Front hubs	Nm	186 ⁵	
Rear hubs	Nm	WSM	
Wheel nuts / bolts	Nm	103	
Spark plugs	Nm	18	

Capacities		Corolla 1.6 Exec. (AE92)	1987 to 1992
Engine oil & filter	litres	3.3	
Gearbox - 4-speed [5-speed]	litres	2.6	
Automatic transmission - refill	litres	2.5	
Final drive	litres	AT: 1.4	
Cooling system	litres	5.2 [AT: 5.5]	
Fuel tank	litres	50	

Notes and Illustrations

¹Distributor 19020-16110: 0.4 to 3.4 @ 1800, 16 to 19 @ 3700, 26.4 to 30.4 @ 6600


²Distributor 19020-16110: 133 to 573 @ 20 to 24°

³90 ►: +1.0±2.0


⁴90 ►: +4.0±2.0

⁵If noisy, retighten to 273

 
1: Idle speed 2: CO / Mixture

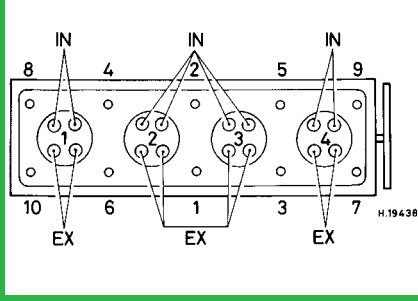

1587 cm³, 16V, to 1992

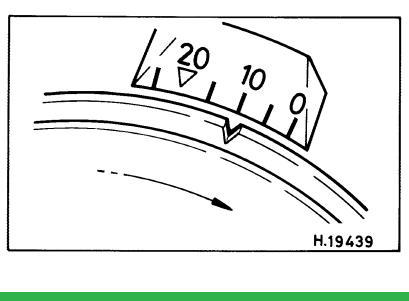 

1587 cm³, 4A-F

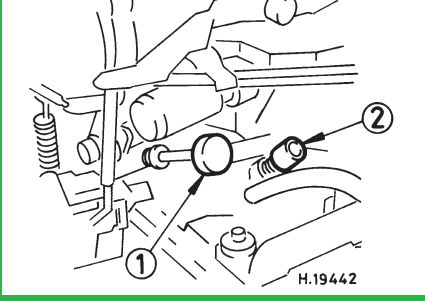 

Aisan 2V