

Engine & Cooling

Fuel

Ignition

 
Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

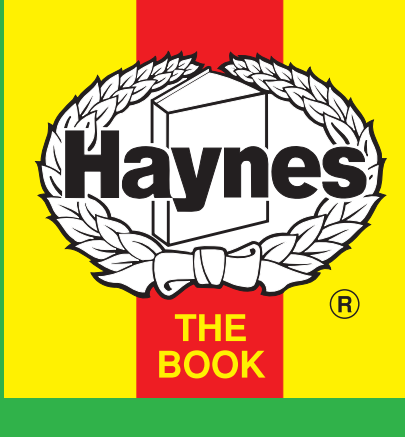

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemCarina E 1.6i (AT190)1992 to 1997

Type		4A-FE Lean-burn (DOHC 16V)
Capacity (cm³) / number of cylinders		1587 / 4
Compression ratio / pressure	bar	9.5 / ≥9.8
Oil pressure	bar	[2.5 to 4.9]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.15 to 0.25
- exhaust	mm	0.25 to 0.35
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	80 to 84
Radiator cap pressure	bar	0.74 to 1.03

Fuel systemCarina E 1.6i (AT190)1992 to 1997

Idle speed - manual [auto]	rpm	750±50 [800±50] N/A
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Toyota
Type / ref		MPI (D-Jetronic) TCCS
Main jet / needle		—
Injection pressure	bar	2.7 to 3.0
Pump pressure	bar	3.9
Octane rating	RON	95[U]

Ignition systemCarina E 1.6i (AT190)1992 to 1997

Type		TCCS - IIA
Ignition coil		—
Primary resistance	ohms	0.36 to 0.55
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	12.0
Distributor		Toyo Denso
Points gap (air gap)	mm	[0.20 to 0.50]
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Anticlockwise
Ignition timing - basic [static	° Crankshaft @ rpm	10 BTDC @ 700±50 ¹
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	14 to 24 BTDC @ 700±50
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK
Type		BKR6EP13
Electrode gap	mm	1.30 to 1.50

Electrical systemCarina E 1.6i (AT190)1992 to 1997

Battery	V / CC / RC	—
Alternator voltage / full load current / engine rpm		14.0 to 15.0 / 70 / 2000
Starter motor current / voltage - cranking	A / V	90 / 11.5
- locked	A / V	—

Running gearCarina E 1.6i (AT190)1992 to 1997

Brakes -		
Front (min. friction material thickness)	mm	1.0
Rear (min. friction material thickness)	mm	1.0

Tyres		
Saloon	Size	175/70x14: 185/65x14:195/60x15
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.3 / 2.3 ²
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	0±2.0
Camber		-20'±45'
Castor		0±45'. PAS: +30'±45'
King pin inclination		+13°25'±45'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+4.0±2.0
Camber		-30'±30'

Torque wrench settingsCarina E 1.6i (AT190)1992 to 1997

Cylinder head - stage 1	Nm	29
- stage 2	Nm	+ 90°
- stage 3	Nm	+ 90°
- stage 4	Nm	—
Big-end bearings	Nm	29 + 90°
Main bearings	Nm	60
Clutch cover	Nm	19
Flywheel [driveplate]	Nm	78 [64]
Front hubs	Nm	226
Rear hubs	Nm	123
Wheel nuts / bolts	Nm	103
Spark plugs	Nm	18


CapacitiesCarina E 1.6i (AT190)1992 to 1997

Engine oil & filter	litres	3.3
Gearbox - 4-speed [5-speed]	litres	2.6
Automatic transmission - refill	litres	3.1
Final drive	litres	WT
Cooling system	litres	5.4 [AT: 5.3]
Fuel tank	litres	60


Notes and Illustrations

¹TE1 & E1 shorted

 ²185/65x14: 2.2 / 2.2. 195/60x15: 2.1 / 2.1

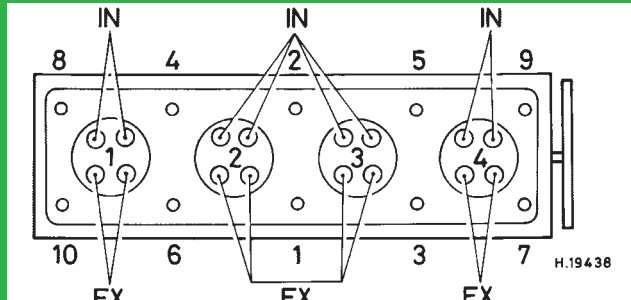

1587 cm³

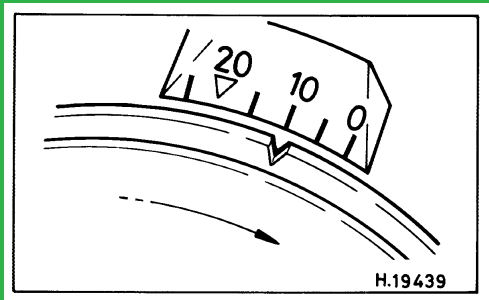 

1587 cm³, 4A-FE