

Fuel Supply System


Fuel Filter

Replacement

⚠ WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

The filter should be replaced : every 2 years or 40,000 km, (24,000 miles), whichever comes first or whenever the fuel pressure drops below the specified value 235–284 kPa, 2.4–2.9 kg/cm², 34–41 psi (Except KQ) [KQ:265–314 kPa (2.7–3.2 kg/cm², 38–46 psi)] with the pressure regulator vacuum hose disconnected after making sure that the fuel pump and the pressure regulator are OK.

1. Place a shop towel under and around the fuel filter.
2. Relieve fuel pressure (page 6-104).
3. Remove the 12 mm banjo bolt and the fuel feed pipe from the filter.
4. Remove the fuel filter clamp and fuel filter.
5. When assembling, use new washers, as shown.

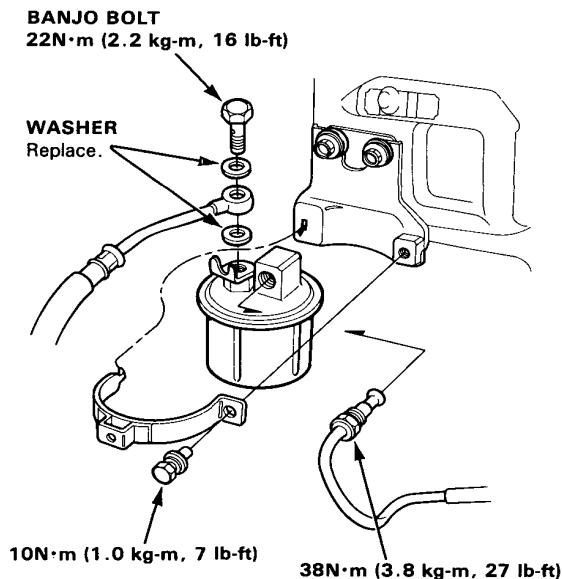

CAUTION: Clean the flared joint of high pressure hoses thoroughly before reconnecting them.