

PGM-CARB Control System

Troubleshooting Flow Chart — Vacuum Switch

- ④ Self-diagnosis LED indicator blinks four times: A problem in the vacuum switch.

—Engine is warm running.
—LED indicates CODE 4.


Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset control unit.

Disconnect the 2P connector on the control box.


Measure resistance between No. 1 terminal and No.2 terminal on the control box.

(To page 6-27)

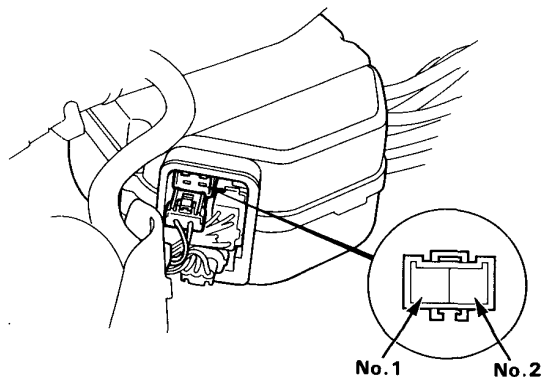



(From page 6-26)

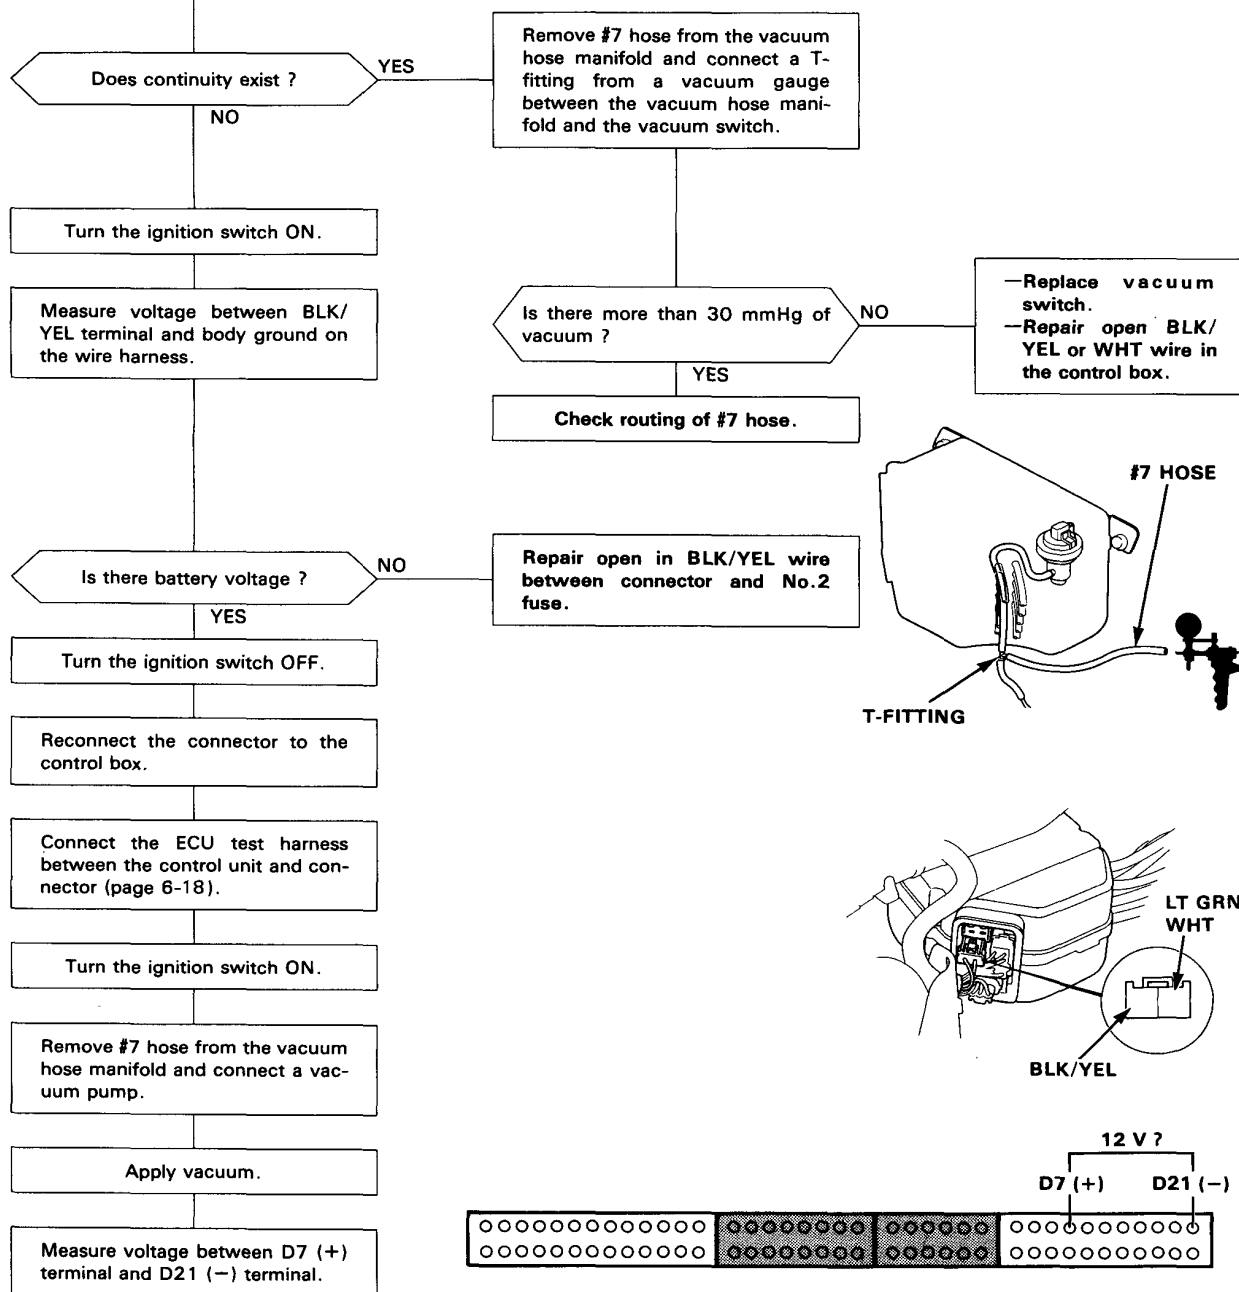

(To page 6-28)

(cont'd)

PGM-CARB Control System

Troubleshooting Flow Chart — Vacuum Switch (cont'd)

