

Front Seat-back Cover



Replacement

CAUTION: Wear gloves to remove and install the seat cover.


NOTE: Take care not to split the seams or damage the cover.

Seat-back cover removal:

1. Remove the seat-back from the seat track and recline adjuster.
2. Remove the headrest from the seat-back.
3. Remove the lumbar support knob and armrest (KB other model).
4. Turn over the seat cover by releasing all the hooks and inside springs.
5. Remove the headrest guides, then remove the seat-back cover.

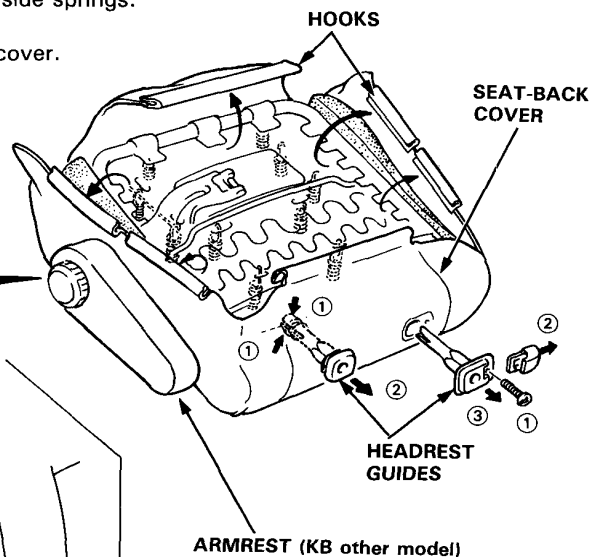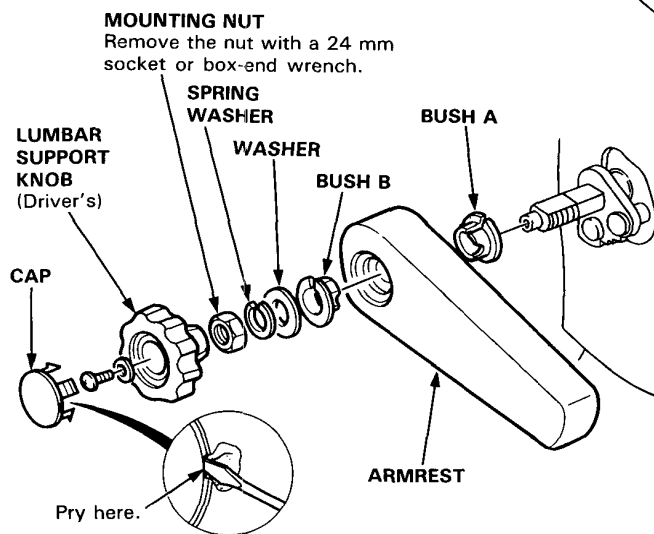

Armrest cover removal:

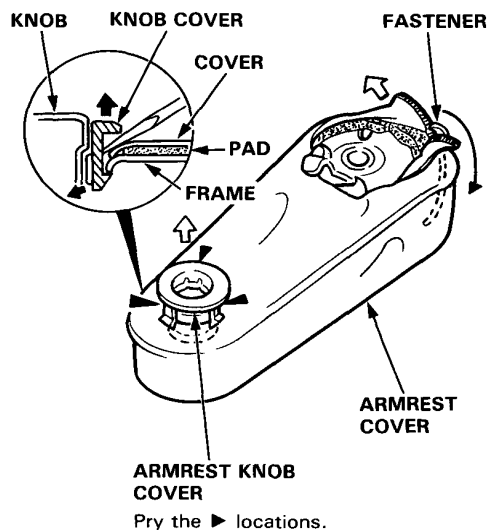

6. Installation is the reverse of the removal procedure.

NOTE:

- To prevent wrinkles, make sure the material is stretched evenly over the frame before securing all the hooks and springs.
- If necessary, replace any damaged springs.