


Airbag Assembly Installation


CAUTION:

- Be sure to install the SRS wiring so that it is not pinched or interfering with other car parts.
- Be sure the battery cables are disconnected.

1. Place the airbag assembly in the steering wheel, and secure it with new TORX® bolts.

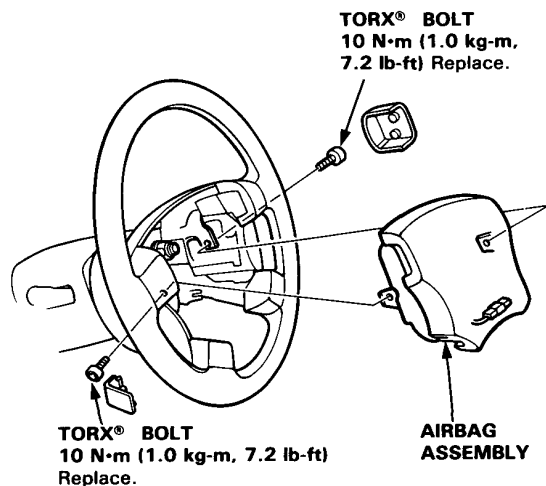

2. Remove the short connector from the airbag connector.

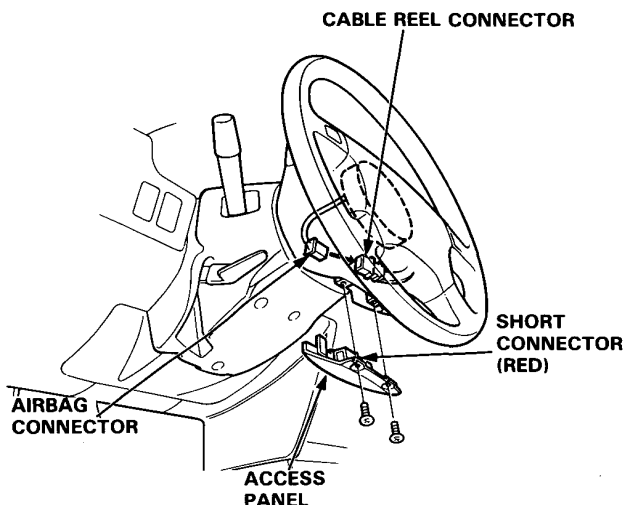

3. Reconnect the airbag connector to the cable reel connector. Attach the short connector to the access panel, then reinstall the panel on the steering wheel.

4. Reconnect the battery positive cable, then the negative cable.

5. After installing the airbag assembly, confirm proper system operation:

- Turn the ignition to II: the instrument panel SRS indicator light should go on for about 6 seconds and then go off.
- Make sure both horn buttons work.
- Take a test drive and make sure the cruise control set/resume switch works (with cruise control).