


Dash Sensor Installation

CAUTION:


- Be sure to install the harness wires so they are not pinched or interfering with other car parts.
- Replace a sensor if it is dented, cracked, or deformed.
- For the SRS to function properly, the right and left sensors must be installed on the proper sides.

1. Be sure the battery cables are disconnected.
2. Install the sensor securely.

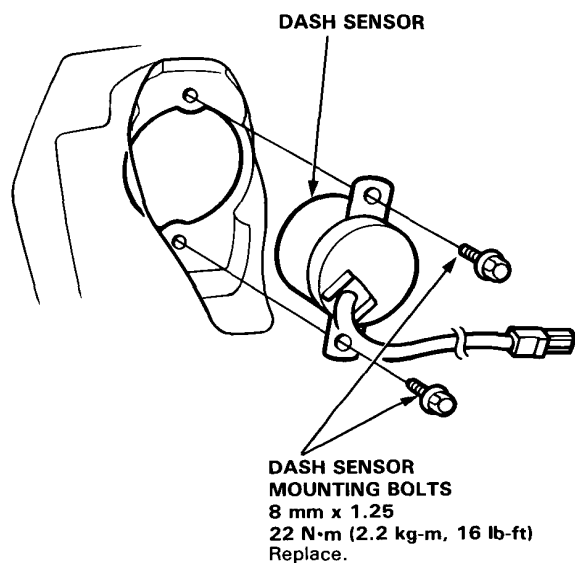

3. Reinstall all other removed parts.

4. Remove the short connector from the airbag. Reconnect the airbag connector to the cable reel connector. Attach the short connector to the access panel, then reinstall the panel.

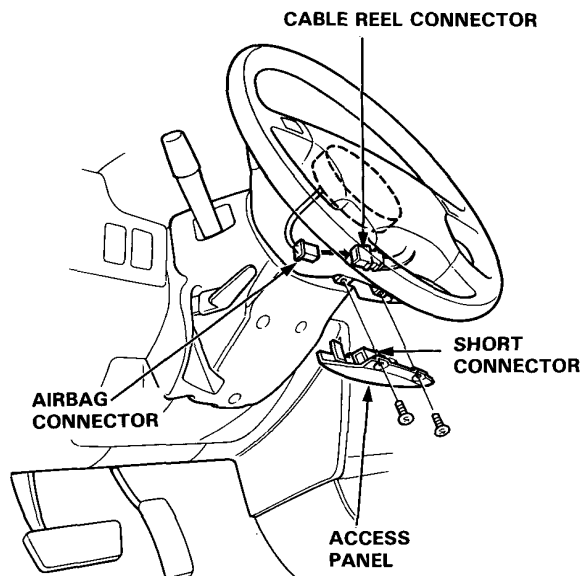

5. Reconnect the battery positive cable, then the negative cable.
6. After installing the dash sensor, confirm proper system operation:
 - Turn the ignition to II: the instrument panel SRS light should go on for about 6 seconds and then go off.