



Slip Ring Installation


1. Install the slip ring on the steering column, then connect the SRS main harness 5-P connector to the slip ring.

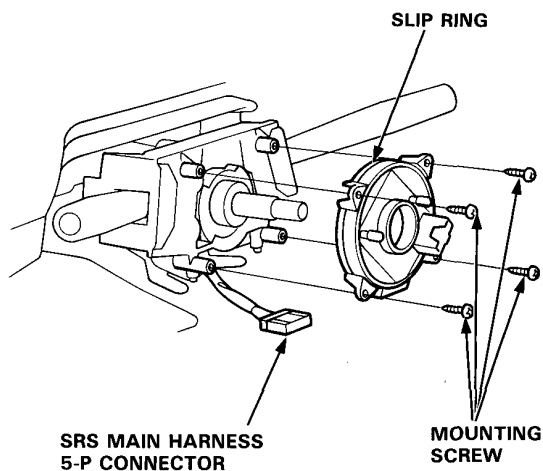

2. Install the steering column upper and lower covers.

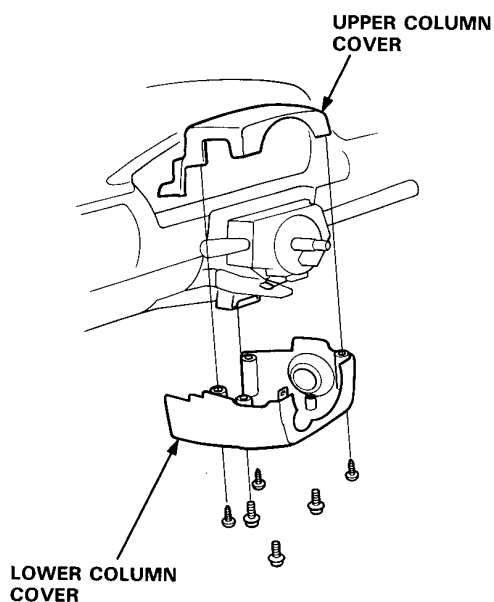

3. Install the steering wheel.

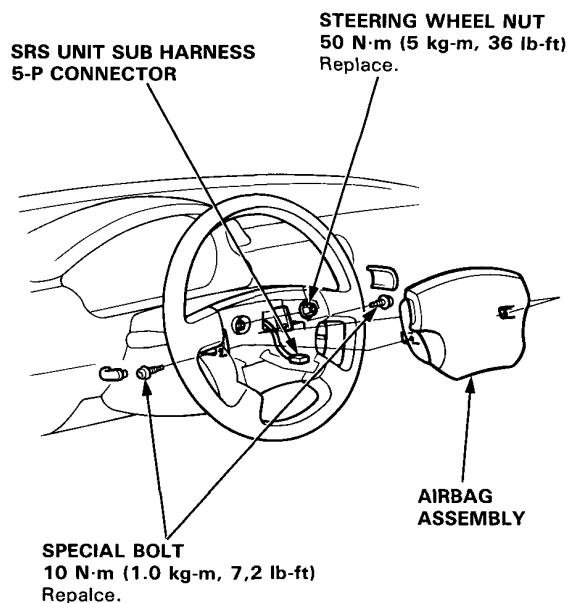

4. Connect the SRS unit sub harness 5-P connector to the SRS unit.
5. Place the airbag assembly into the steering wheel, and secure it with new special bolts.

NOTE: Be sure to torque the bolts as specified.

6. Reconnect the battery positive and negative cables.
7. After installing the slip ring, confirm proper system operation:

- Turn the ignition to ON: the instrument panel SRS indicator light should go on for about 6 seconds and then go off.
- The SRS self diagnosis indicator (LED) should blink one time with the ignition switch ON.