
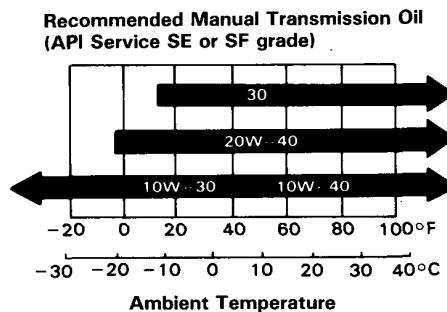


Lubrication Points

For details of lubrication points and types of lubricants to be applied, refer to the illustrated index and various work procedures (such as Assembly/Reassembly, Replacement, Overhaul, Installation, etc.) contained in each section.

No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: SF or SG grade detergent oil only SAE Viscosity: See chart below
2	Transmission Manual Automatic	API Service Grade: SE or SF grade motor oil SAE Viscosity: See chart below Honda Premium Formula Automatic Transmission Fluid or an equivalent DEXRON® II Automatic transmission fluid
3	Brake line	Brake fluid DOT3 or DOT4
4	Clutch line	Brake fluid DOT3 or DOT4
5	Power steering gearbox	Steering grease P/N 08733—B070E
6	Shift lever pivots (Manual)	Silicone grease with molybdenum disulfide
7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22	Steering ball joints Suspension ball joints Steering boots Steering column bushings Select lever (Automatic) Pedal linkage Intermediate shaft Brake master cylinder pushrod Trunk hinges or Tailgate hinges Door hinges upper and lower Door opening detents Fuel filler lid Engine hood hinges Engine hood latch Tilt lever Rear brake shoe linkage	Multi-purpose grease
23	Caliper Piston seal Dust seal Caliper pin Piston	Silicone grease
24	Power steering system	Power steering fluid P/N 08208—99961

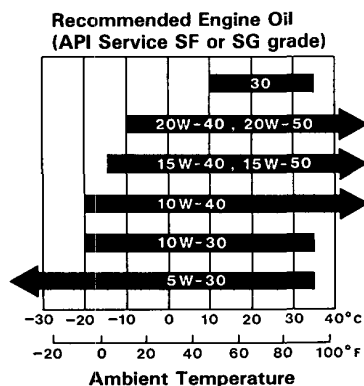

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

