

# Shift Cable

## Adjustment


### ACCORD AERO DECK

SRS wire harness is routed near the gearshift selector.


NOTE: LHD is shown; RHD is similar.

#### CAUTION:


- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

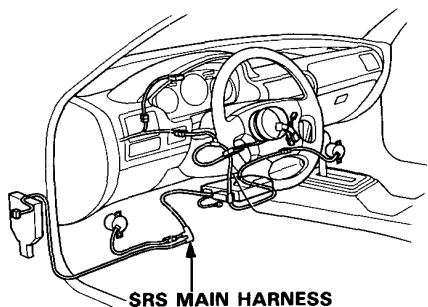

1. Start the engine. Shift to reverse to see if the reverse gear engages. If not, refer to Troubleshooting.
2. With the engine off, remove the console (see Section 14).
3. Shift to **N** position, then remove the lock pin from the cable adjuster.

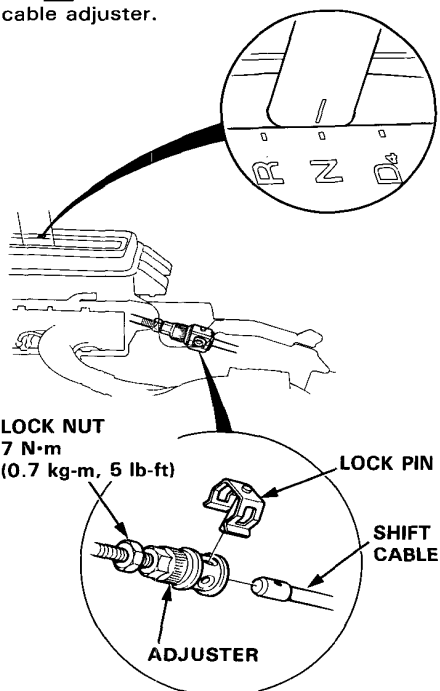

4. Check that the hole in the adjuster is perfectly aligned with the hole in the shift cable.

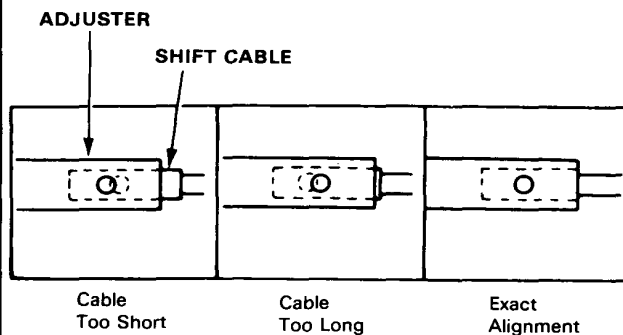

NOTE: There are two holes in the end of the shift cable. They are positioned 90° apart to allow cable adjustments in 1/4 turn increments.

5. If not perfectly aligned, loosen the lock nut on shift cable and adjust as required.
6. Tighten the lock nut.
7. Install the lock pin on the adjuster.

NOTE: If you feel the lock pin binding as you reinstall it, the cable is still out of adjustment and must be readjusted.

8. Start the engine and check the shift lever in all gears. If any gear does not work properly, refer to troubleshooting.



## Removal/Installation




### ACCORD AERO DECK

SRS wire harness is routed near the gearshift selector.

NOTE: LHD is shown; RHD is similar.

#### CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

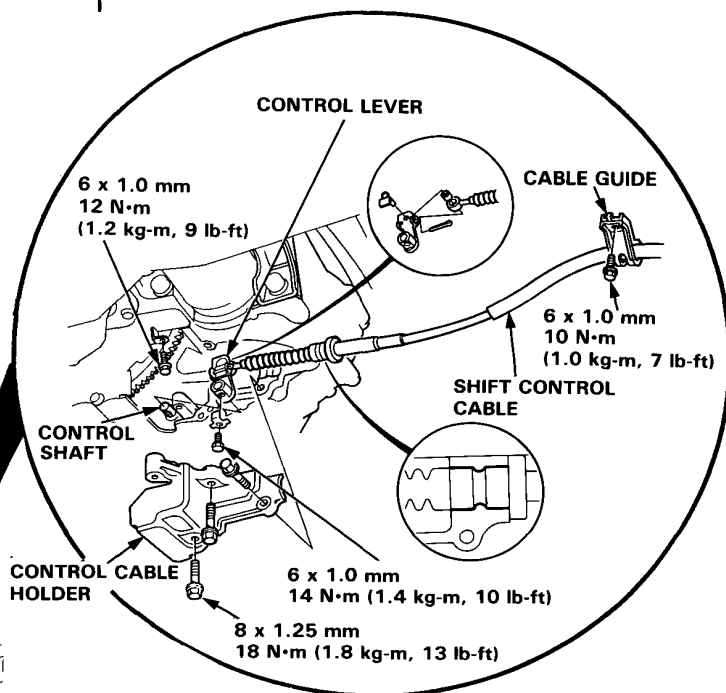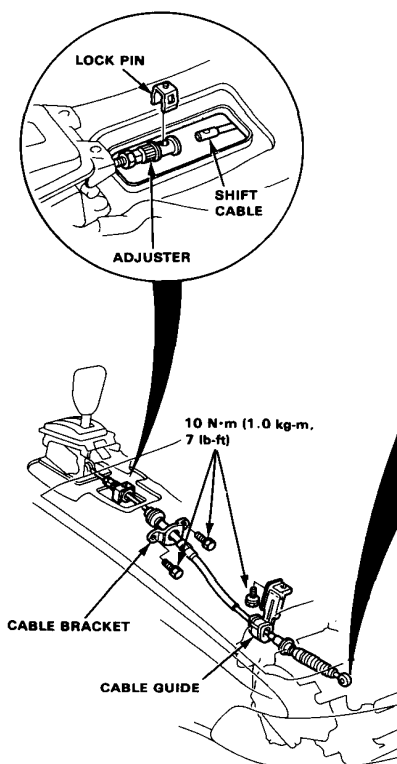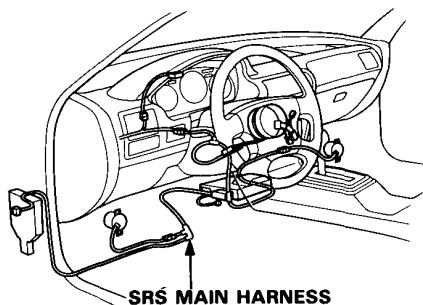

#### WARNING

- Make sure jacks and safety stands are placed properly and hoist brackets are attached to correct positions on the engine.
- Apply parking brake and block rear wheels, so car will not roll off stands and fall on you while working under it.

1. Remove the front console (see Section 14).
2. Remove the lock pin from the cable adjuster.
3. Remove the bolts, then remove the cable bracket and cable guide.
4. Remove the exhaust pipe A and center beam.
5. Remove cable holder.
6. Remove the shift cable with control lever from the control shaft.

**CAUTION:** Take care not to bend the cable when removing it.

7. Install the shift cable in the reverse order or removal.

NOTE: On reassembly, check the cable adjustment (page 9-90).