


# Power Windows


## Master Switch Test

1. Remove the door panel.
2. Remove the master switch from the door panel.
3. Check for continuity between the terminals in each switch position according to the tables.

LHD:

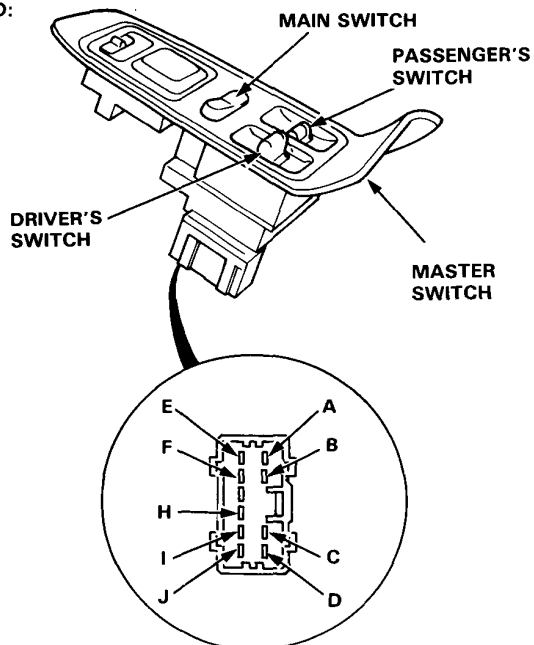

RHD:

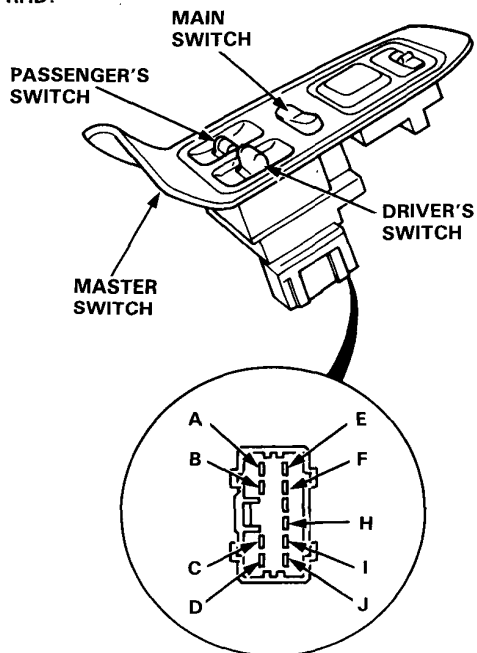

### Driver's Switch

Terminal Position	F	H	I	J
OFF				
UP				
UP (AUTO)				
DOWN				
DOWN (AUTO)				

### Passenger's Switch

Terminal		B	C	D	E
Position	Main switch				
OFF	ON				
	OFF				
UP	ON				
	OFF				
DOWN	ON				
	OFF				