


Wipers/Washer

Wiper/Washer Switch Replacement


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag.

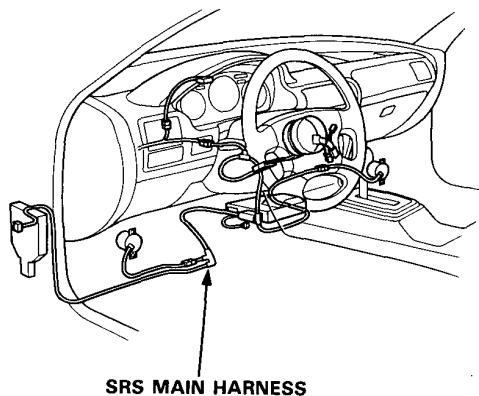


NOTE: LHD type is shown, RHD type is similar.

1. Remove the dashboard lower cover.

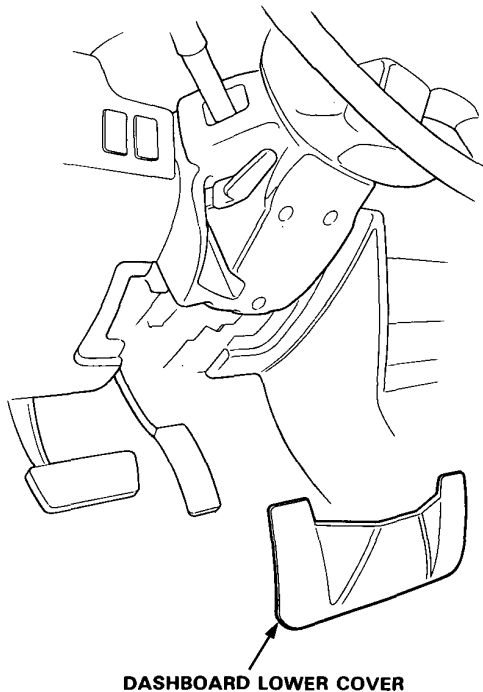

2. Remove the steering column covers.

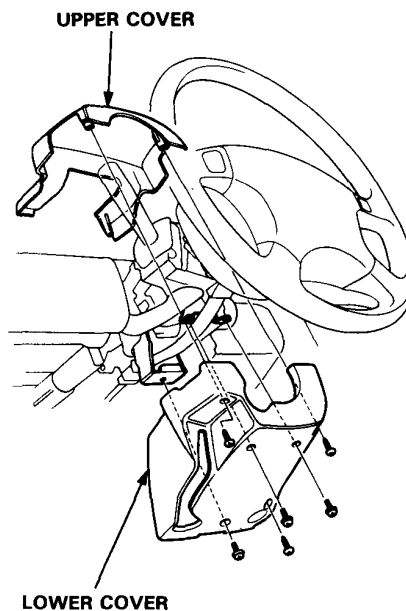

3. Disconnect the 8-P connector from the switch, then remove the two screws and the switch.

