

Maintenance Schedule

Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace I—Inspect After inspection, clean, adjust, repair or replace if necessary *1 Thereafter, replace every 2 years or 40,000 km (24,000 miles), whichever comes first.					
	x 1,000 km	20	40	60	80	100
	x 1,000 miles	12	24	36	48	60
	months	12	24	36	48	60
Idle speed and idle CO	I	I	I	I	I	
Valve clearance	I	I	I	I	I	
Alternator drive belt		I		I		
Timing belt and timing balancer belt						R
Water pump						I
■ Engine oil and oil filter	Replace every 10,000 km (6,000 miles) or 6 months					
■ Transmission oil		R		R		
■ Radiator coolant				R*1		
Cooling system hoses and connections		I		I		
E.G.R. system						I
Air cleaner element		R		R		
Fuel filter		R		R		
Tank, fuel line and connections		I		I		
Evaporative emission control system						I
Ignition timing and control system		I		I		
Spark plugs		R		R		
Distributor cap and rotor		I		I		
Ignition wiring		I		I		
Positive crankcase ventilation valve		I		I		

■: Day to day care (such as oil, coolant check and replenishment) should be done practically according to the owner's manual by the customer.



Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace I —Inspect After inspection, clean, adjust, repair or replace if necessary.					
	x 1,000 km	20	40	60	80	100
	x 1,000 miles	12	24	36	48	60
	months	12	24	36	48	60
Brake hoses and lines (Including ABS hoses and pipes)	I	I	I	I	I	
Brake fluid (Including ABS fluid)		R		R		
Front brake discs and calipers	I	I	I	I	I	
Front brake pads	Inspect every 10,000 km (6,000 miles) or 6 months					
Rear brake discs, calipers and pads		I		I		
Parking brake	I	I		I		
Exhaust pipe and muffler	I	I	I	I	I	
Suspension mounting bolts	I	I	I	I	I	
Front wheel alignment	I	I	I	I	I	
Steering operation, tie rod ends, steering gear box and boots	I	I		I		
ABS high pressure hose				R		
ABS operation	I	I		I		
Power steering system	I	I	I	I	I	
Power steering pump belt		I		I		
Catalytic converter heat shield						I

CAUTION: The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

Severe driving conditions include:

A : Repeated short distance driving

B : Driving in dusty conditions

C : Driving in severe, cold weather

D : Driving in areas using road salt or other corrosive materials

E : Driving on rough and/or muddy roads

F : Towing a trailer

R—Replace.

I— Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A B • • • F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
• • • • • F	Transmission oil	R	Every 20,000 km (12,000 miles) or 12 months
A B • D E F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A B • D E F	Rear brake discs, calipers and pads	I	Every 20,000 km (12,000 miles) or 12 months
• B C • E •	Power steering system	I	Every 10,000 km (6,000 miles) or 6 months

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.