


Position of Parts in Instrument Panel <RHD>

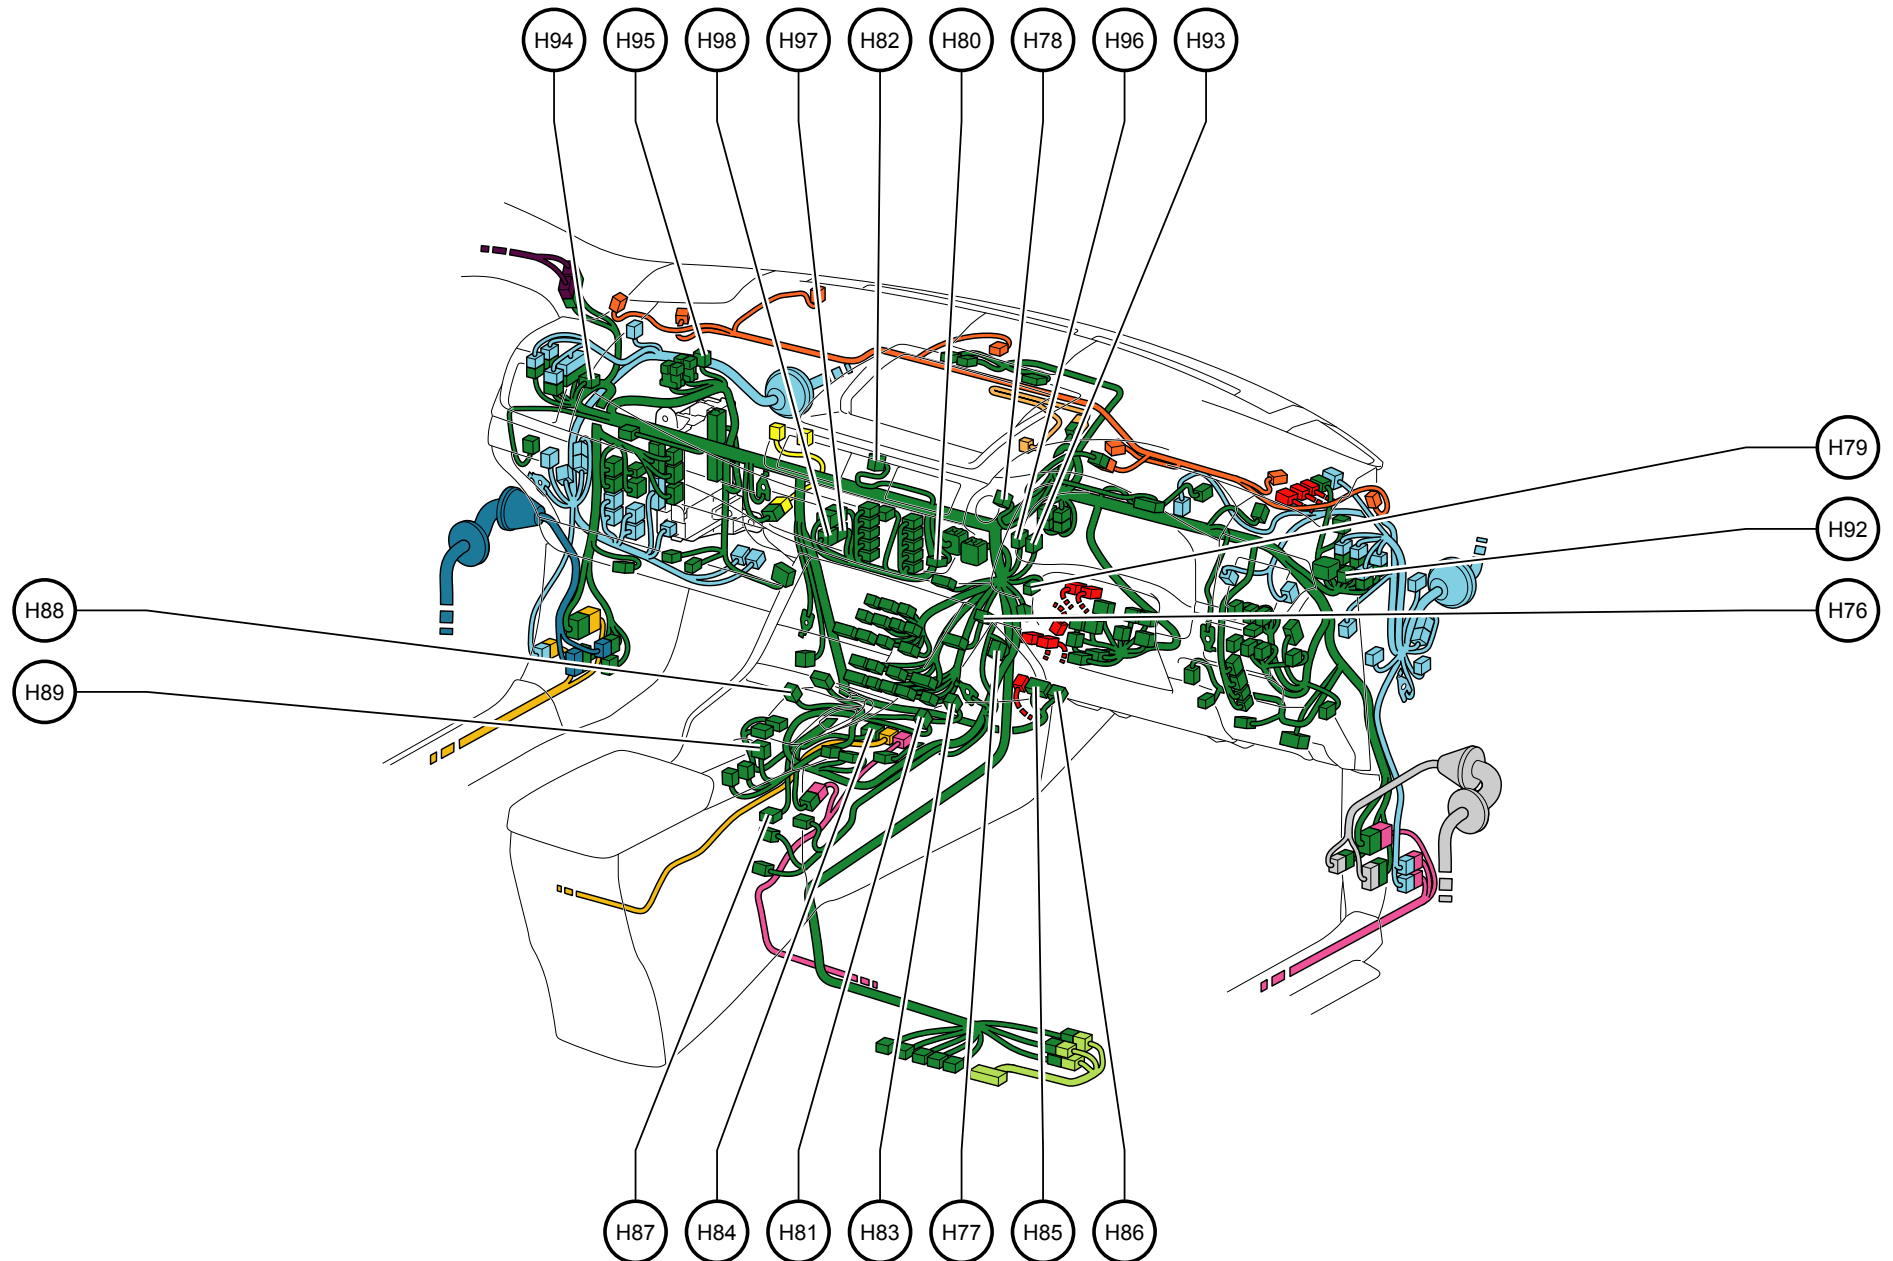

H 76	No. 1 Shift Lever Position Sensor
H 77	No. 2 Shift Lever Position Sensor
H 78	Power Switch
H 79	Room Temperature Sensor
H 80	A/C Control Assembly
H 81	Transmission Shift Main Switch
H 82	Hazard Warning Signal Switch Assembly
H 83	Shift Indicator Light
H 84	Airbag Sensor Assembly
H 85	A/C Amplifier Assembly
H 86	A/C Amplifier Assembly
H 87	Yaw Rate Sensor
H 88	Seat Heater Switch
H 89	Multi-Display Switch
H 92	Junction Connector
H 93	Junction Connector
H 94	Junction Connector
H 95	Junction Connector
H 96	Junction Connector
H 97	Junction Connector
H 98	Junction Connector

Position of Parts in Instrument Panel <RHD>

