


Position of Parts in Seat <LHD w/ Power Seat From Aug. 2012 Production>

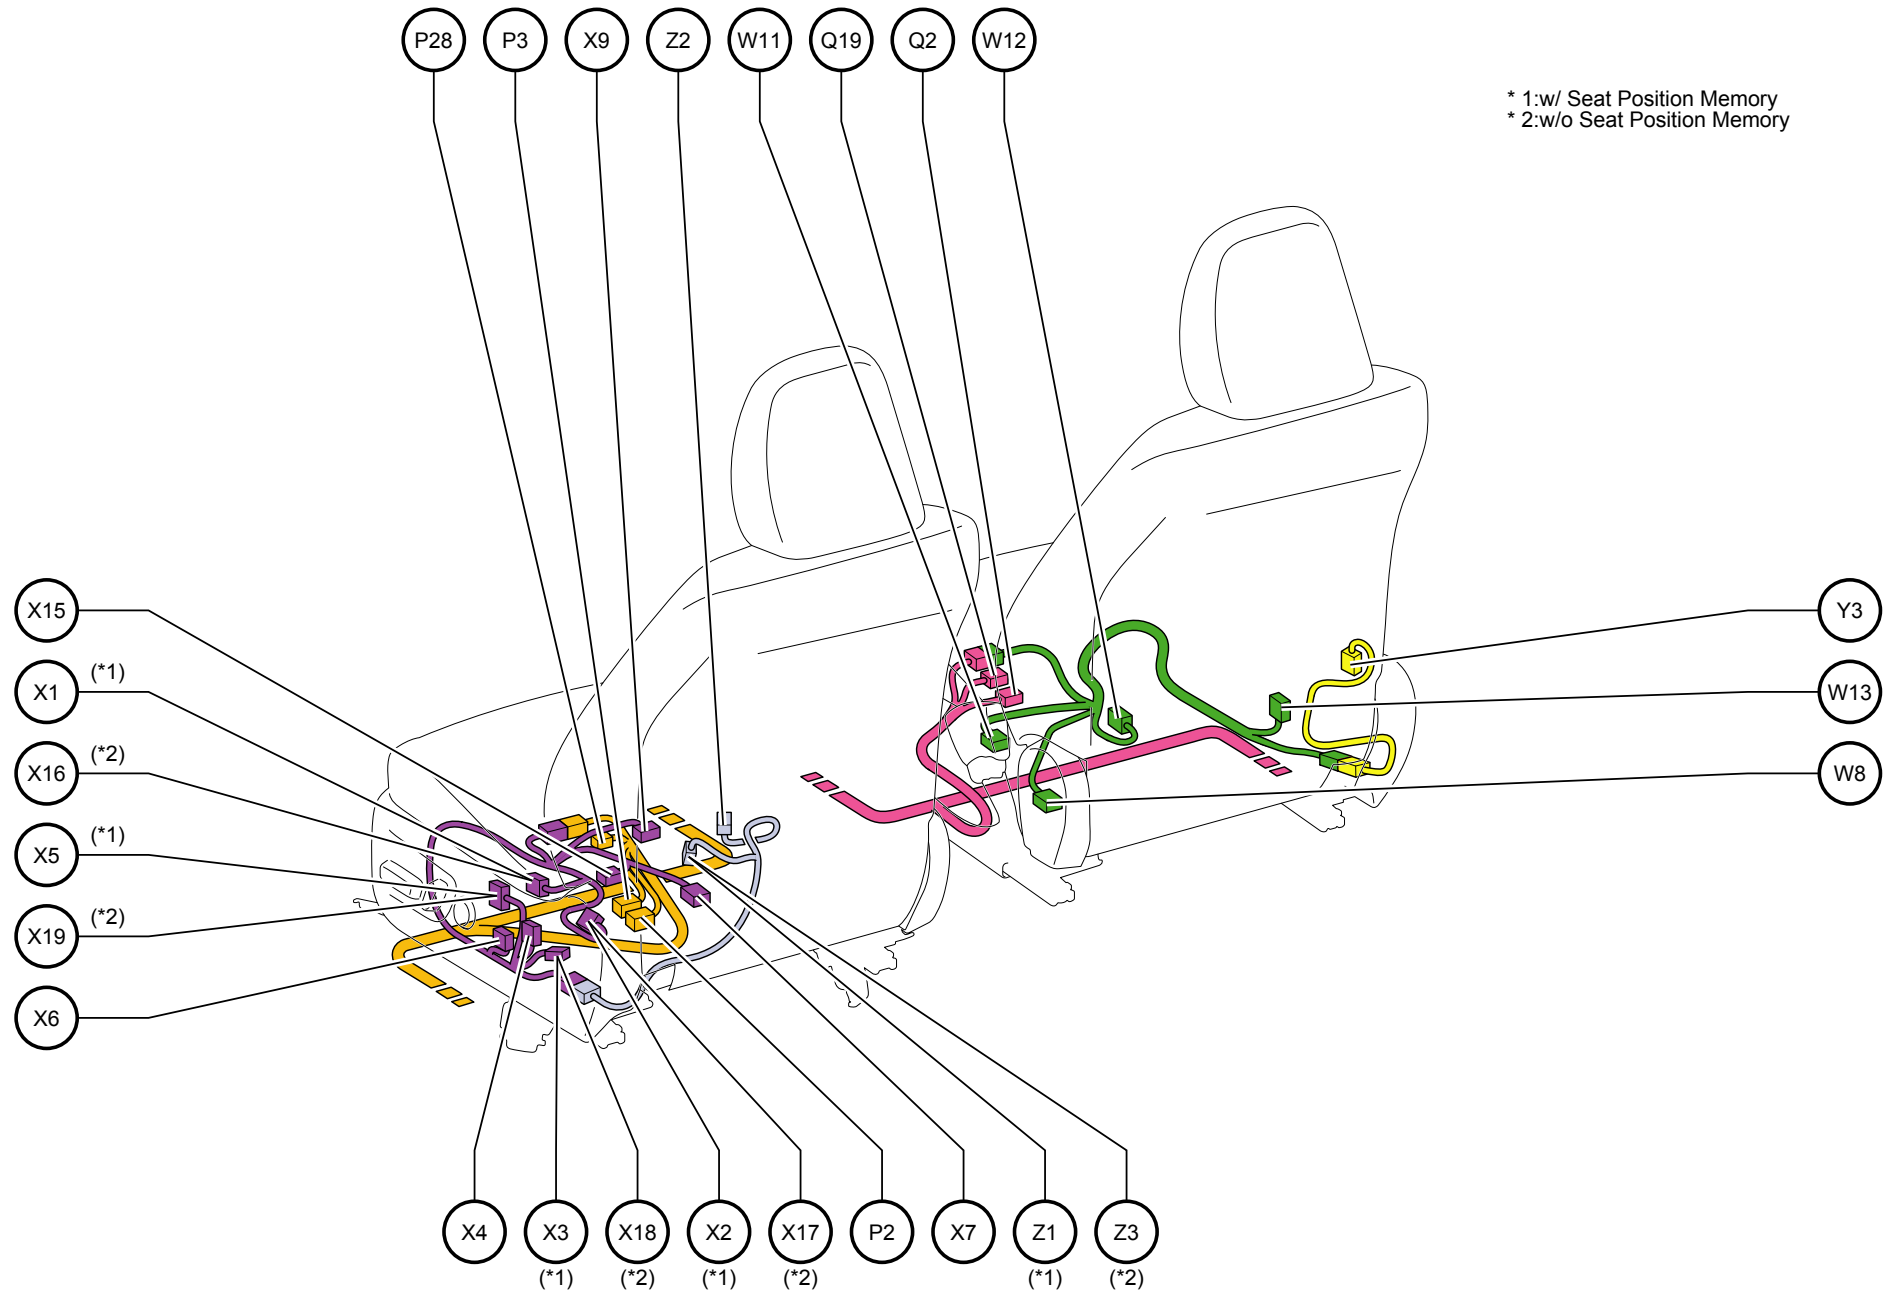

- P 2 Front Seat Airbag Assembly LH
- P 3 Front Seat Inner Belt Assembly LH
- P 28 Front Seat Inner Belt Assembly LH

- Q 2 Front Seat Airbag Assembly RH
- Q 19 Front Seat Inner Belt Assembly RH

- W 8 Seat Heater Control Sub-Assembly RH
- W 11 Junction Connector
- W 12 Front Seat Slide Motor RH
- W 13 Front Power Seat Switch RH

- X 1 Front Seat Slide Motor LH
- X 2 Front Seat Tilt Motor LH
- X 3 Front Seat Lift Motor LH
- X 4 Position Control ECU & Switch Assembly LH
- X 5 Position Control ECU & Switch Assembly LH
- X 6 Lumbar Support Switch LH (Power Seat Switch Assembly LH)
- X 7 Seat Heater Control Sub-Assembly LH
- X 9 Junction Connector
- X 15 Front Seat Inner Belt Assembly LH
- X 16 Front Seat Slide Motor LH
- X 17 Front Seat Tilt Motor LH
- X 18 Front Seat Lift Motor LH
- X 19 Front Power Seat Switch LH

- Y 3 Front Seat Reclining Motor RH

- Z 1 Front Seat Reclining Motor LH
- Z 2 Front Seat Lumbar Support Motor LH
- Z 3 Front Seat Reclining Motor LH

Position of Parts in Seat <LHD w/ Power Seat From Aug. 2012 Production>

