


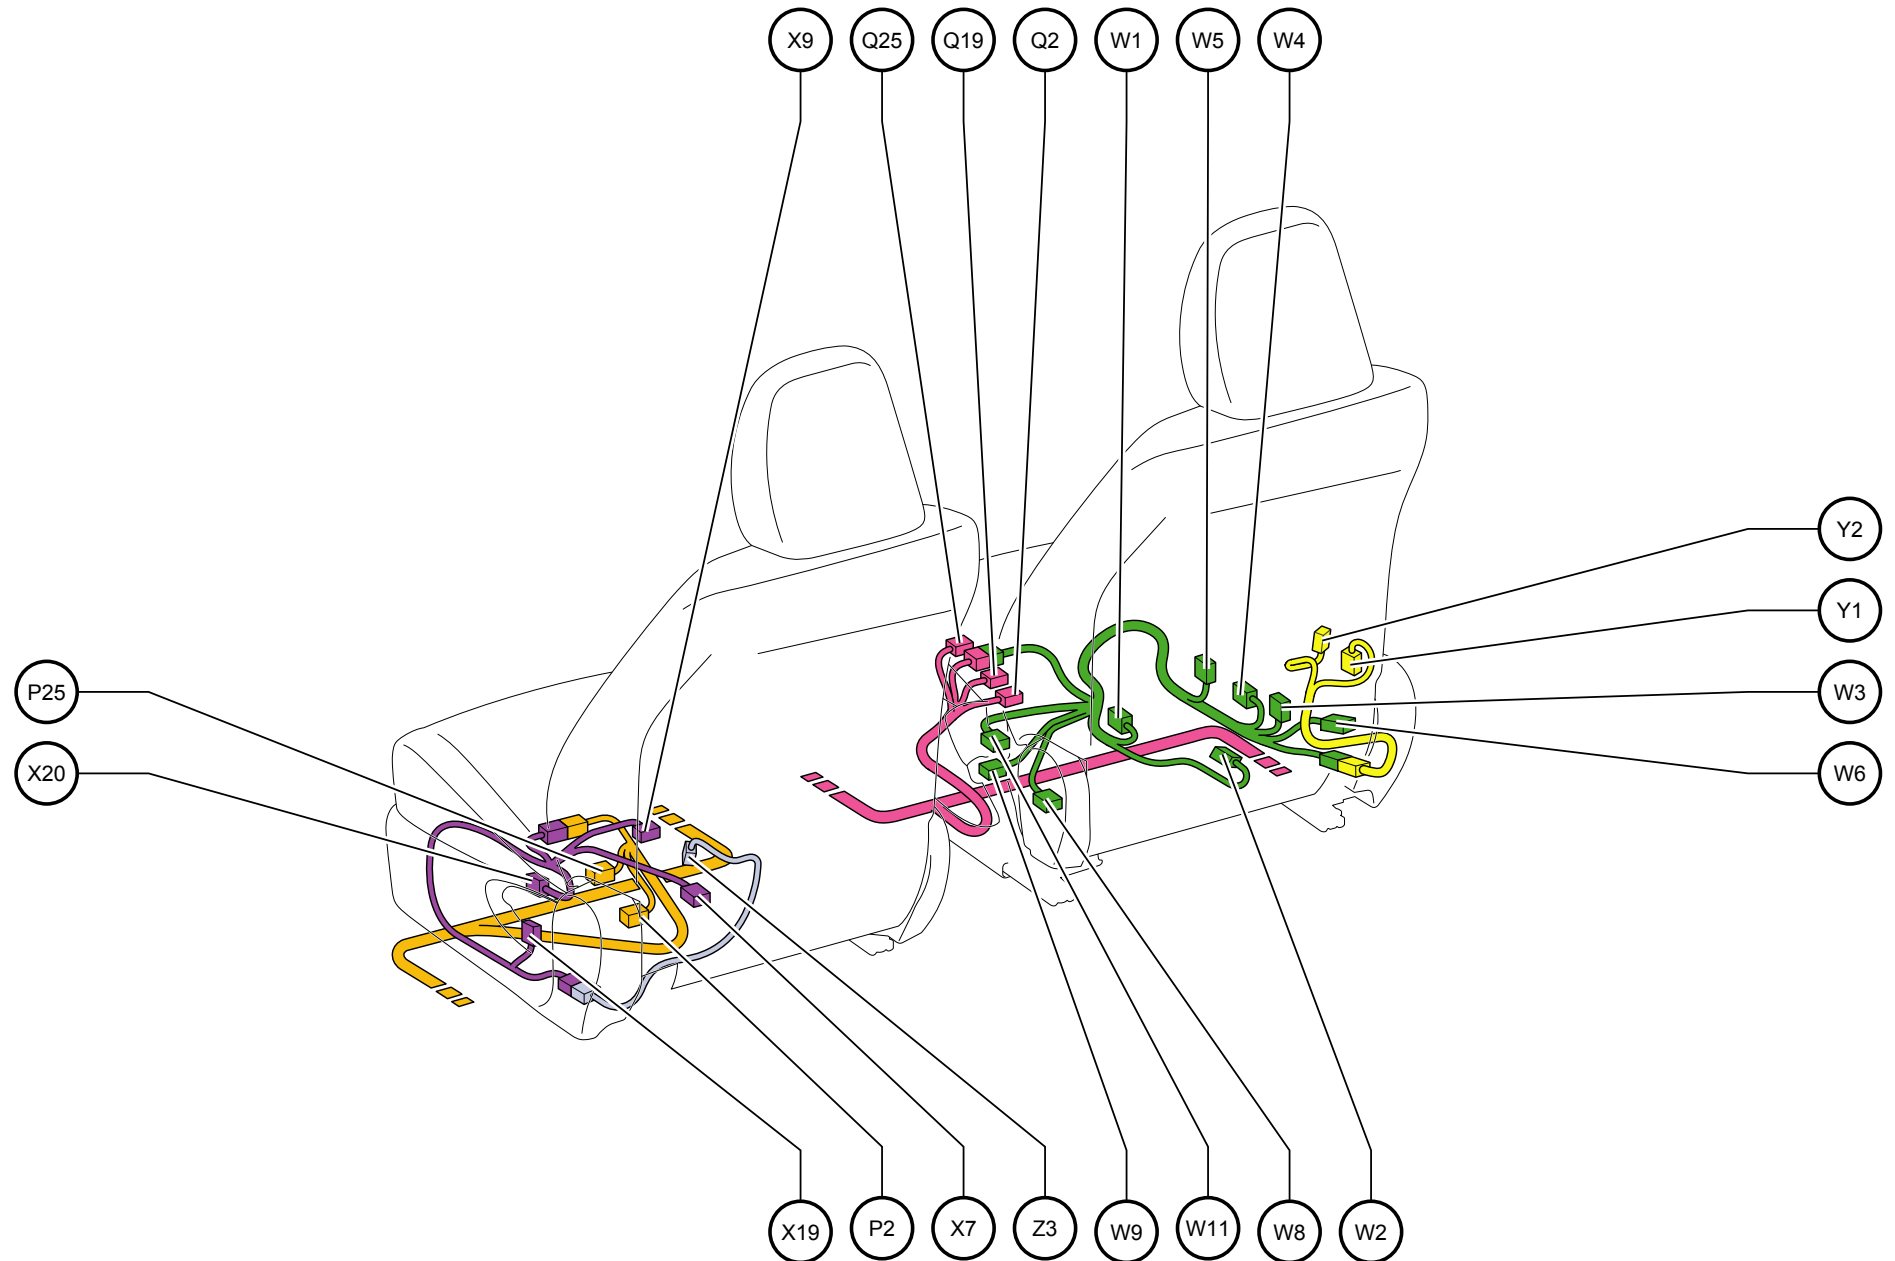

P 2 Front Seat Airbag Assembly LH
P 25 Front Seat Inner Belt Assembly LH

Q 2 Front Seat Airbag Assembly RH
Q 19 Front Seat Inner Belt Assembly RH
Q 25 Front Seat Inner Belt Assembly RH

W 1 Front Seat Slide Motor RH
W 2 Front Seat Tilt Motor RH
W 3 Position Control ECU & Switch Assembly RH
W 4 Position Control ECU & Switch Assembly RH
W 5 Lumbar Support Switch RH (Power Seat Switch Assembly RH)
W 6 Front Seat Lift Motor RH
W 8 Seat Heater Control Sub-Assembly RH
W 9 Front Seat Inner Belt Assembly RH
W 11 Junction Connector

X 7 Seat Heater Control Sub-Assembly LH
X 9 Junction Connector
X 19 Front Power Seat Switch LH
X 20 Front Seat Slide Motor LH

Y 1 Front Seat Reclining Motor RH
Y 2 Front Seat Lumbar Support Motor RH

Z 3 Front Seat Reclining Motor LH

Position of Parts in Seat <RHD w/ Power Seat From Aug. 2012 Production>

