


Position of Parts in Body <LHD>

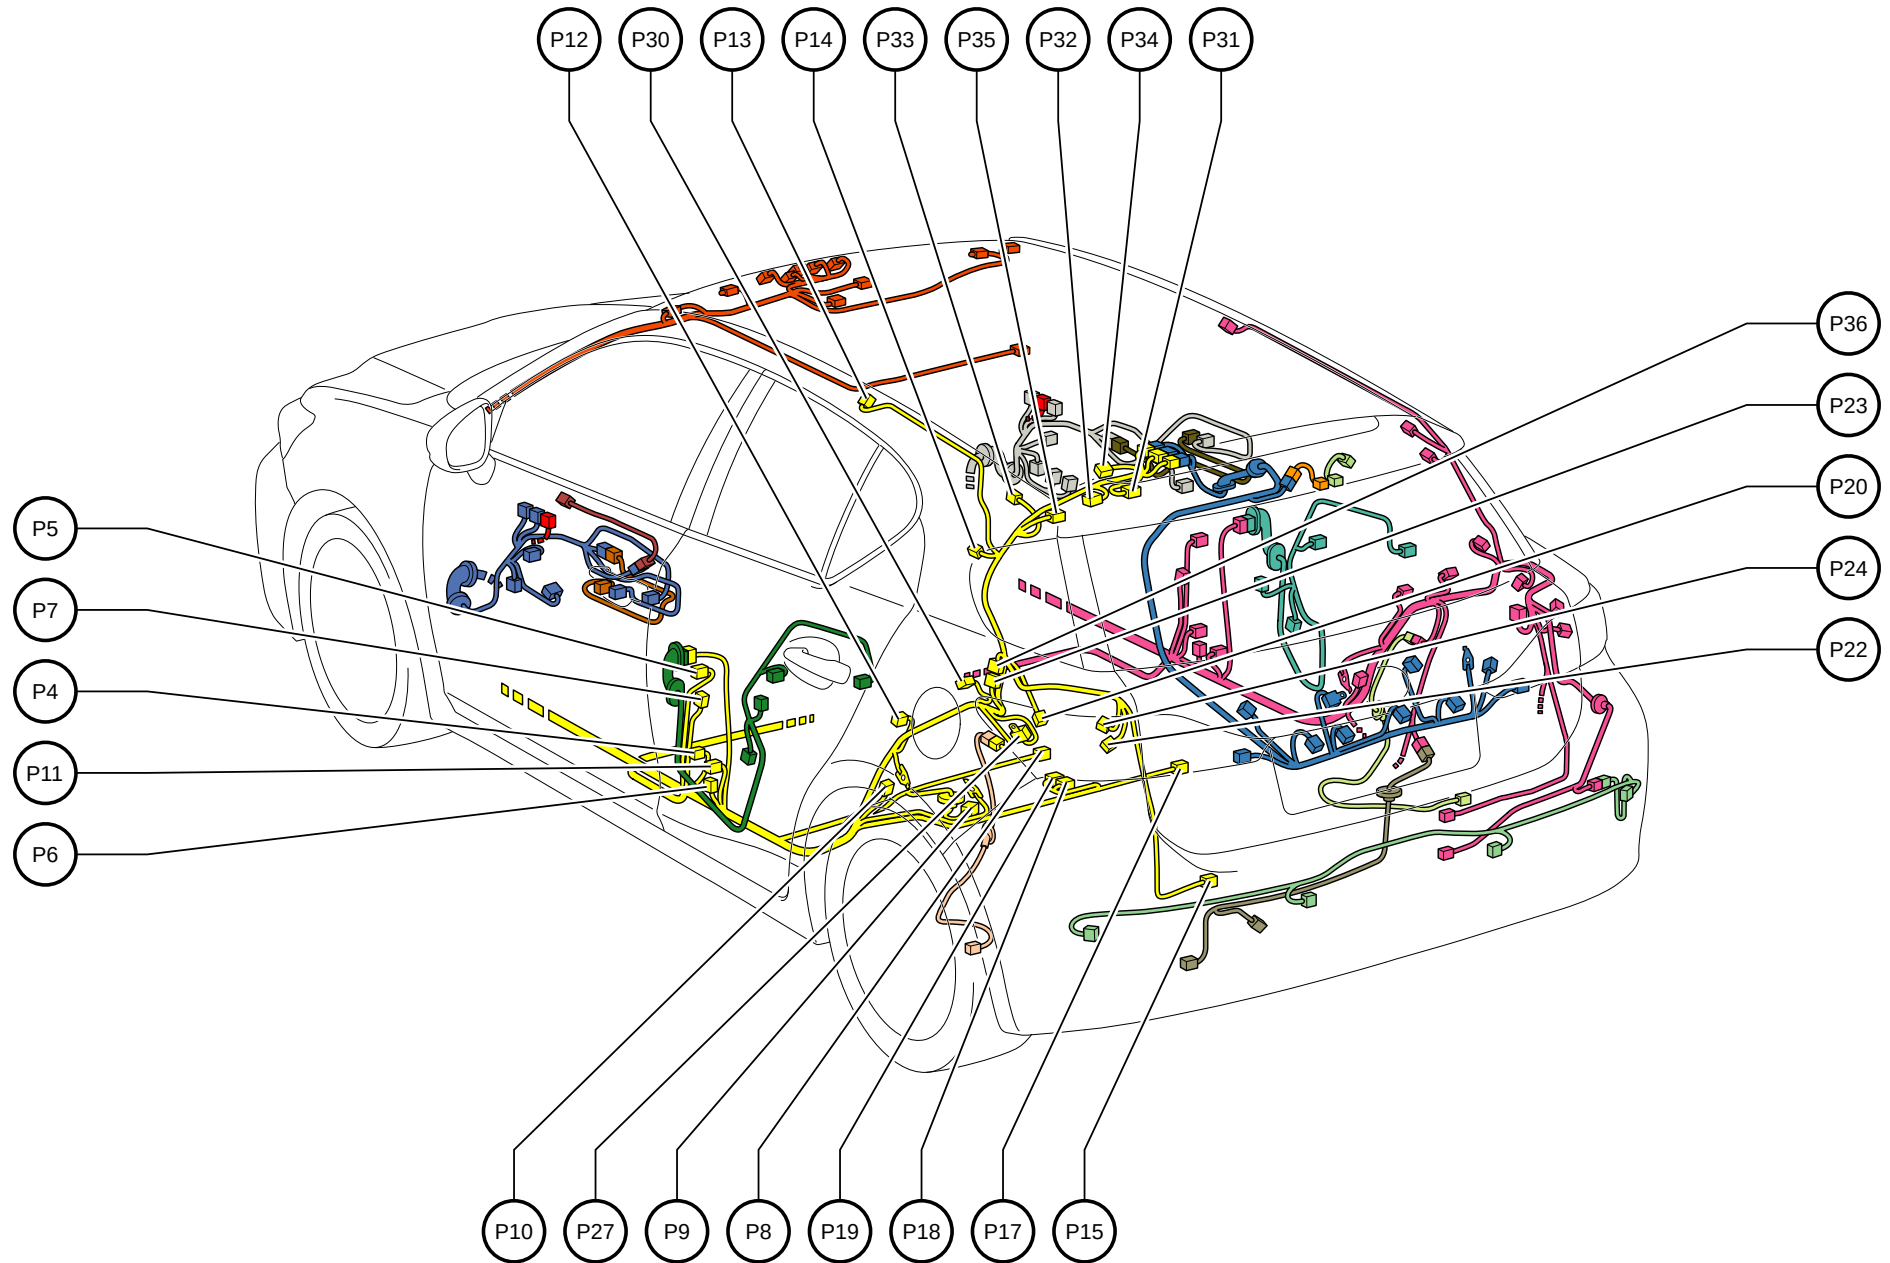

- P 4 Front Seat Outer Belt Assembly LH
- P 5 Front Door Courtesy Light Switch Assembly LH
- P 6 Front Seat Outer Belt Assembly LH
- P 7 Front Side Airbag Sensor Assembly LH
- P 8 No. 2 Indoor Electrical Key Antenna Assembly
- P 9 Fuel Sender Gage Assembly
- P 10 Rear Side Airbag Sensor Assembly LH
- P 11 Front Seat Outer Belt Assembly LH
- P 12 Rear Door Courtesy Light Switch Assembly LH
- P 13 Curtain Shield Airbag Assembly LH
- P 14 Rear No. 2 Speaker Assembly LH
- P 15 No. 1 Box Speaker Assembly
- P 17 Rear Seat Inner Belt Assembly RH
- P 18 Rear Seat Inner Belt Assembly Center
- P 19 Rear Seat Inner Belt Assembly LH
- P 20 Fuel Lid Lock Assembly with Motor
- P 22 Rear Combination Light Assembly LH
- P 23 Junction Connector
- P 24 Junction Connector
- P 27 Noise Filter (Stop Light No. 1)
- P 30 Rear Seat Outer Belt Assembly LH
- P 31 Noise Filter (Stop Light No. 2)
- P 32 Noise Filter (Defogger)
- P 33 Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)
- P 34 Junction Connector
- P 35 Junction Connector
- P 36 Junction Connector

Position of Parts in Body <LHD>

