
 
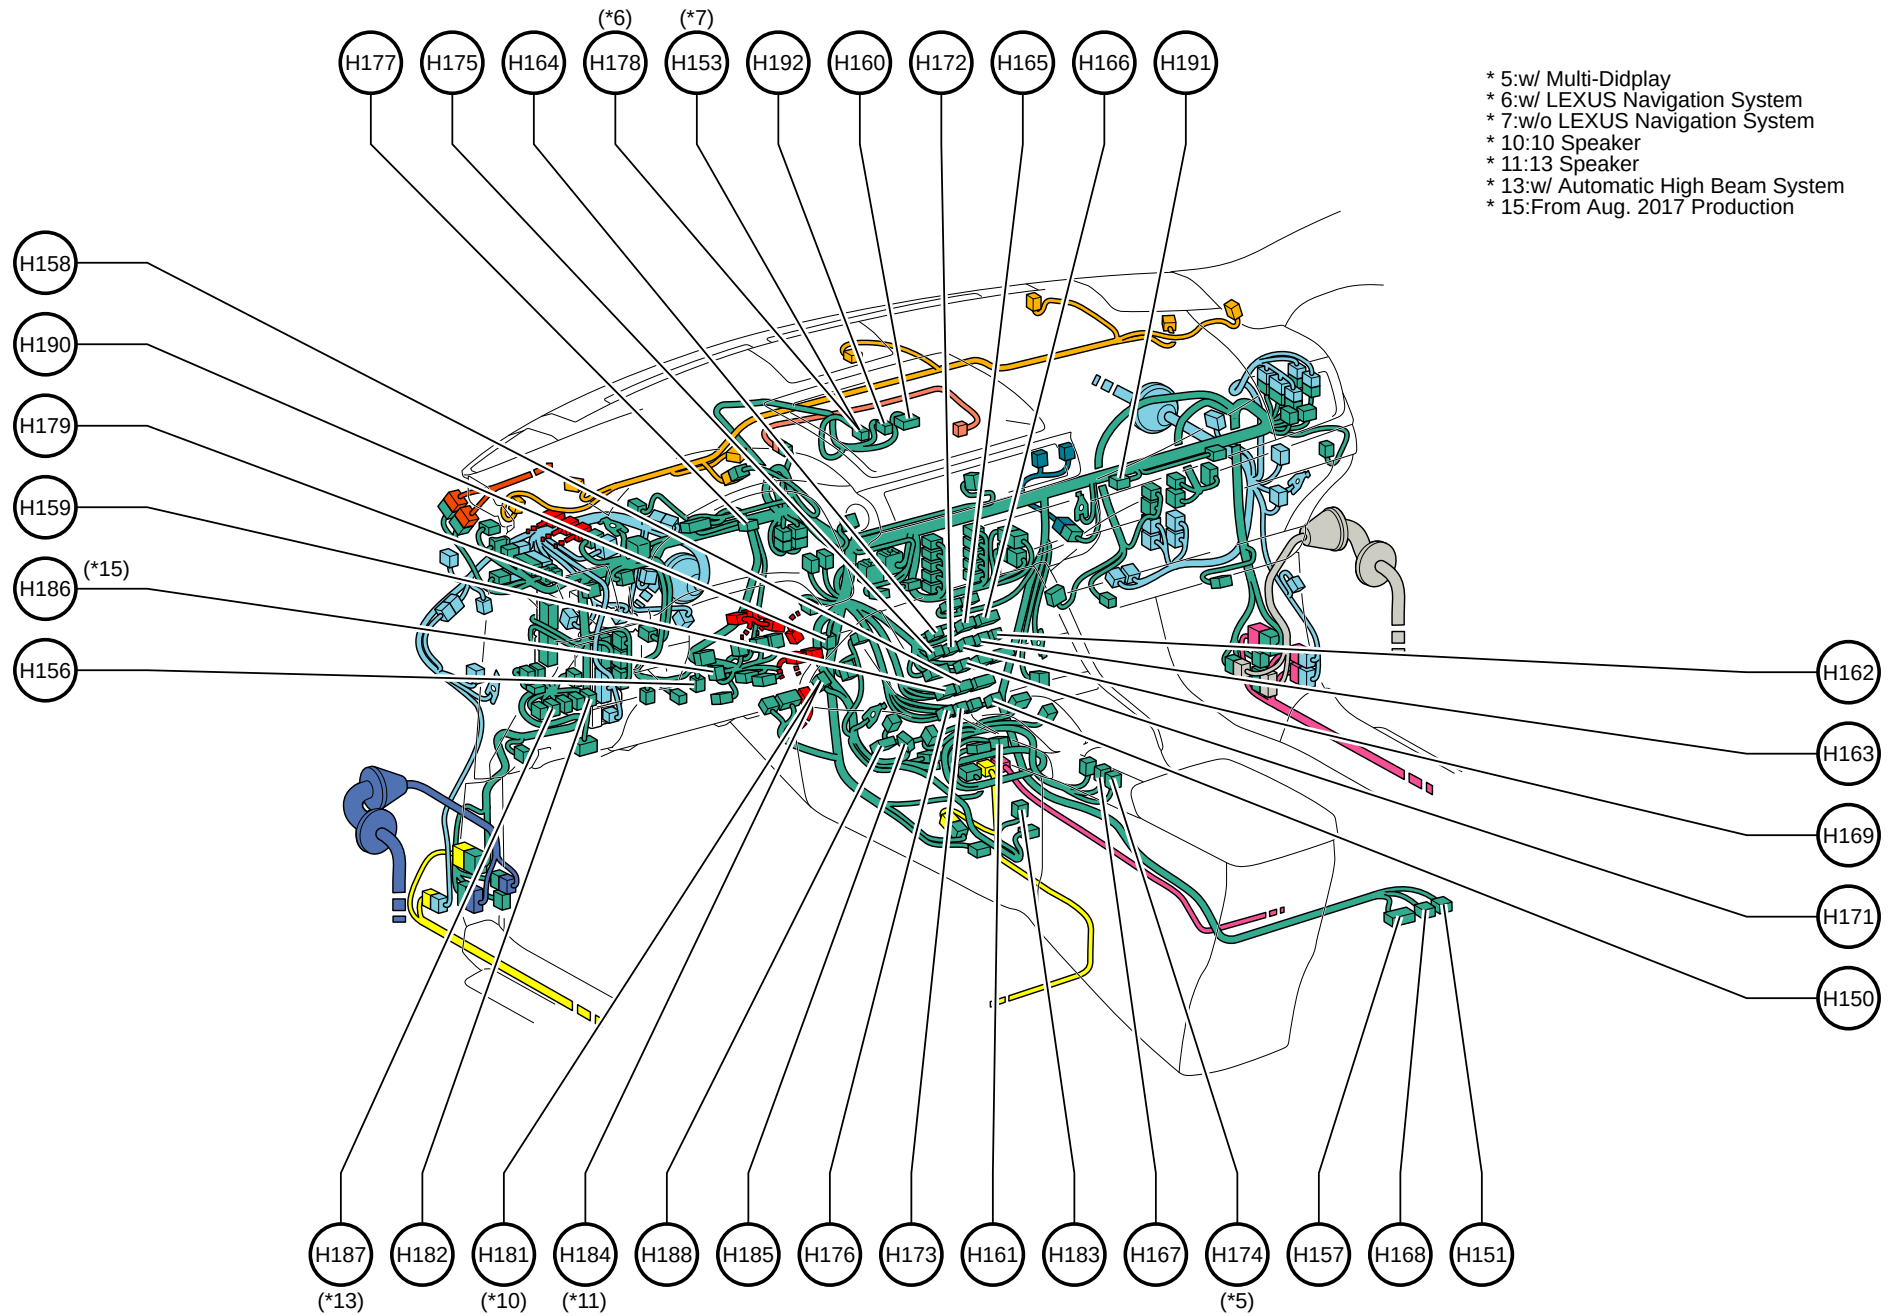

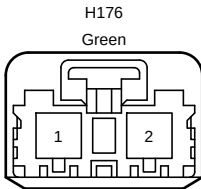
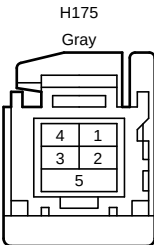
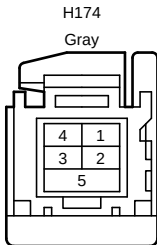
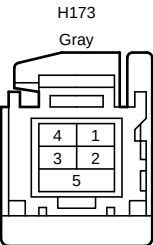
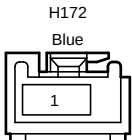
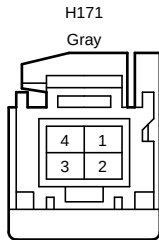
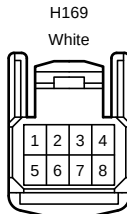
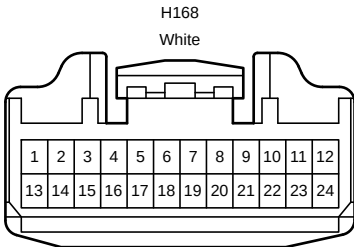
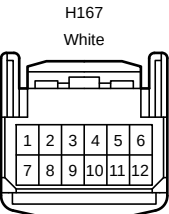
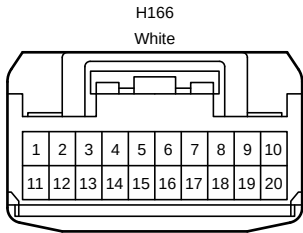
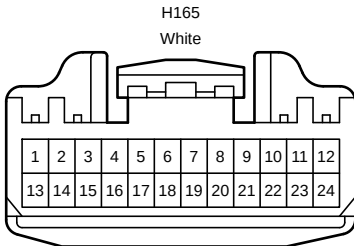
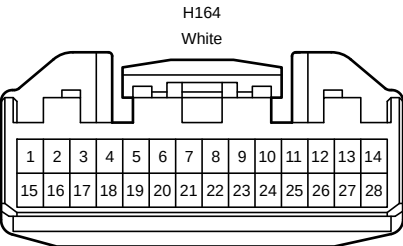
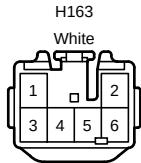
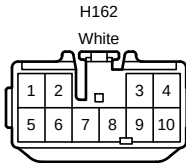
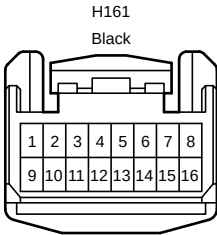
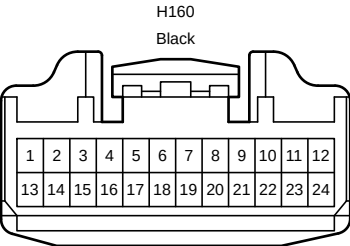
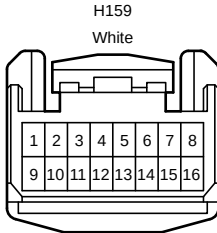
 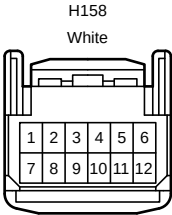
 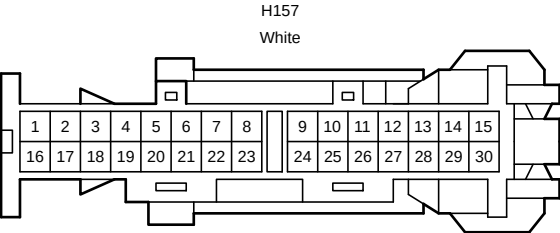




Position of Parts in Instrument Panel <LHD>

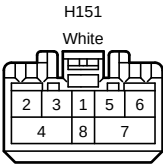

H 150	Radio Receiver Assembly
H 151	Stereo Component Amplifier Assembly
H 153	Multi-Display
H 156	Tire Pressure Warning Reset Switch (Tire Pressure Warning Switch)
H 157	Stereo Component Amplifier Assembly
H 158	Radio Receiver Assembly
H 159	Radio Receiver Assembly
H 160	Multi-Display
H 161	Remote Operation Controller Assembly
H 162	Radio Receiver Assembly
H 163	Radio Receiver Assembly
H 164	Radio Receiver Assembly
H 165	Radio Receiver Assembly
H 166	Radio Receiver Assembly
H 167	No. 1 Stereo Jack Adapter Assembly
H 168	Stereo Component Amplifier Assembly
H 169	Radio Receiver Assembly
H 171	Radio Receiver Assembly
H 172	Radio Receiver Assembly
H 173	Radio Receiver Assembly
H 174	No. 1 Stereo Jack Adapter Assembly
H 175	Radio Receiver Assembly
H 176	Radio Receiver Assembly
H 177	Combination Meter Assembly
H 178	Multi-Display
H 179	Diode (Turn Signal)
H 181	Junction Connector
H 182	Vehicle Approaching Speaker Switch
H 183	Vehicle Approaching Speaker Controller
H 184	Junction Connector
H 185	Driving Support ECU Assembly
H 186	Spiral Cable Sub-Assembly
H 187	Auto High Beam Switch
H 188	Network Gateway ECU
H 190	Junction Connector
H 191	Junction Connector
H 192	Multi-Display

Position of Parts in Instrument Panel <LHD>

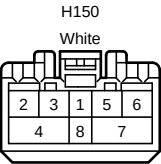

Position of Parts in Instrument Panel <LHD>

