


Position of Parts in Seat <RHD w/ Power Seat>

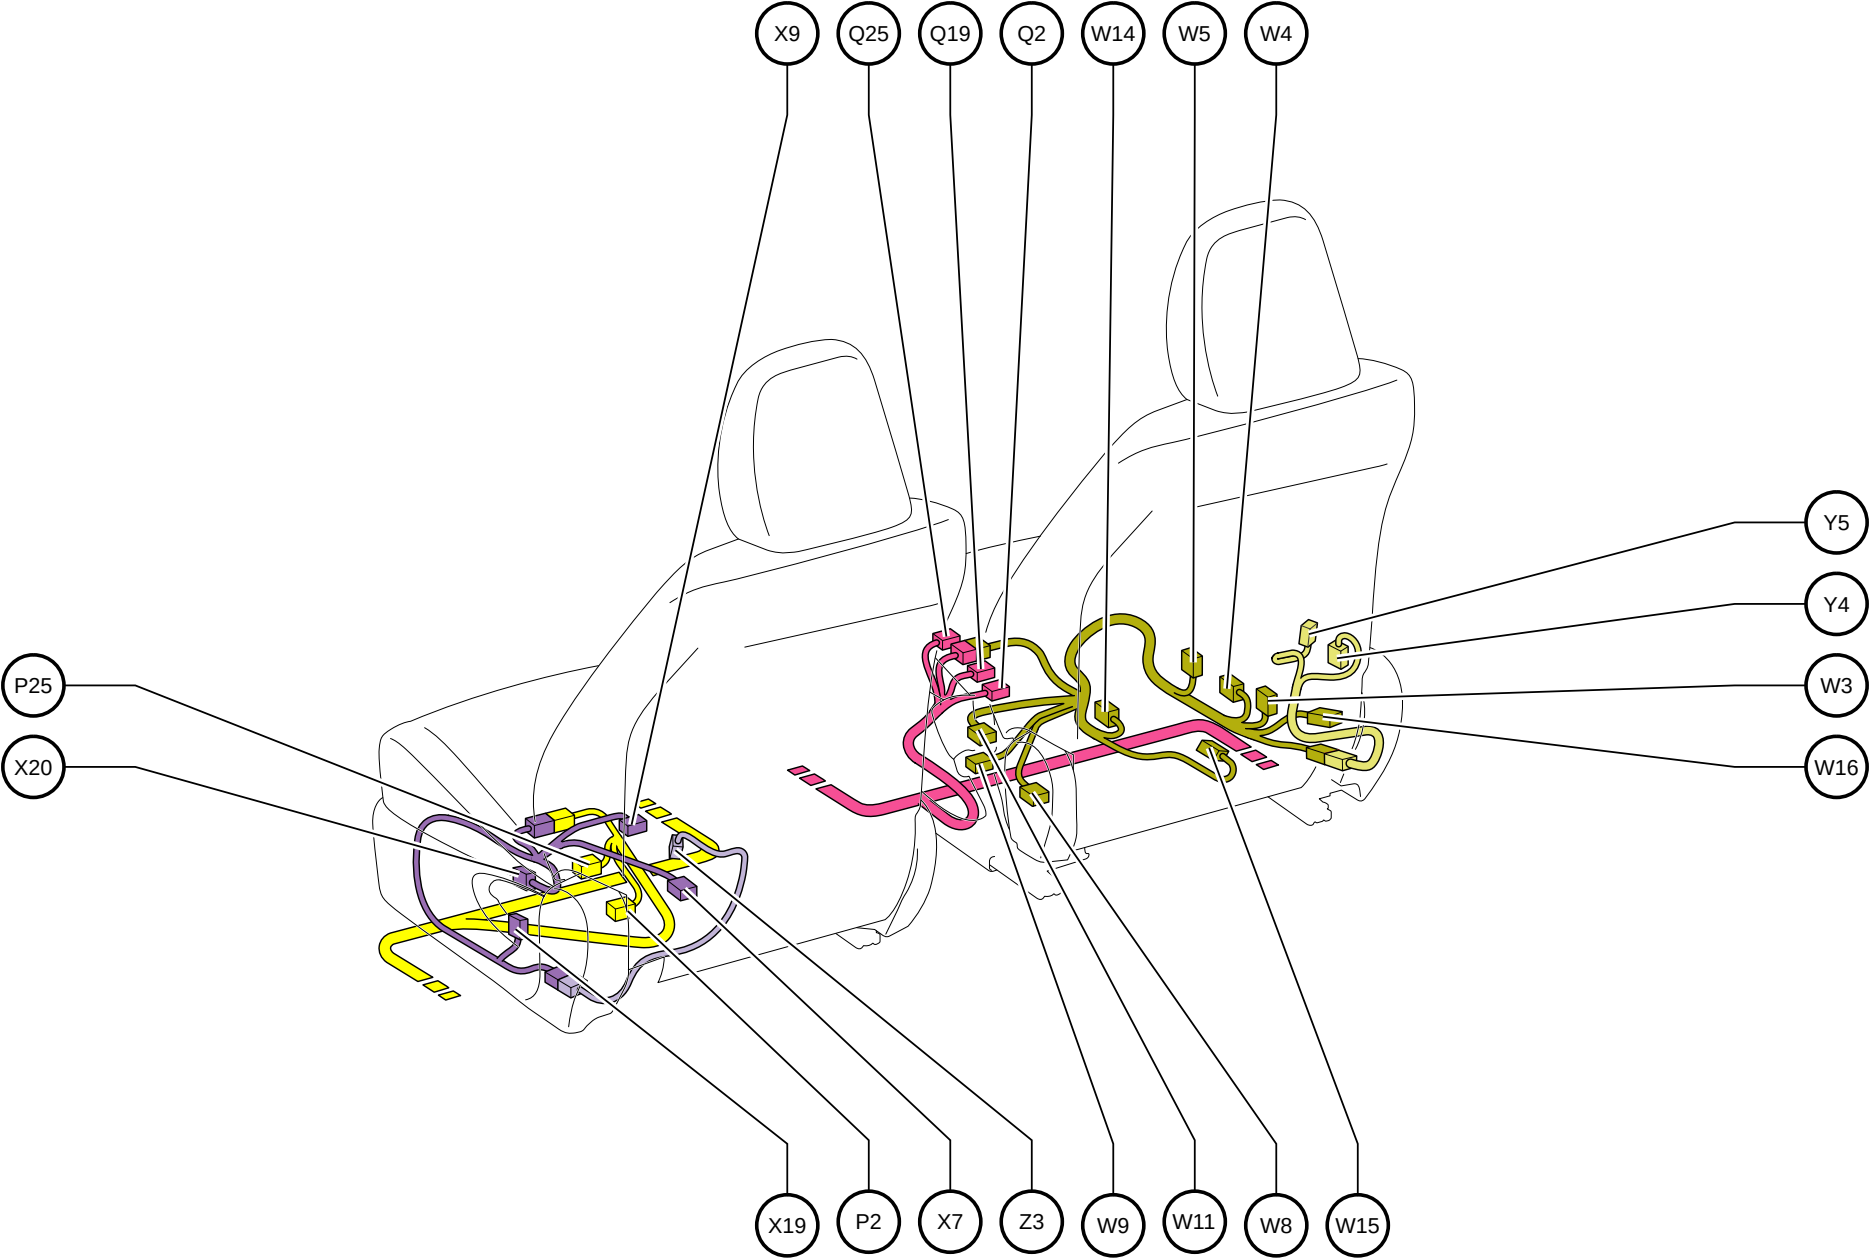

- P 2 Front Seat Airbag Assembly LH
- P 25 Front Seat Inner Belt Assembly LH

- Q 2 Front Seat Airbag Assembly RH
- Q 19 Front Seat Inner Belt Assembly RH
- Q 25 Front Seat Inner Belt Assembly RH

- W 3 Position Control ECU & Switch Assembly RH
- W 4 Position Control ECU & Switch Assembly RH
- W 5 Lumbar Support Switch RH (Power Seat Switch Assembly RH)
- W 8 Seat Heater Control Sub-Assembly RH
- W 9 Front Seat Inner Belt Assembly RH
- W 11 Junction Connector
- W 14 Front Seat Slide Motor RH
- W 15 Front Seat Tilt Motor RH
- W 16 Front Seat Lift Motor RH

- X 7 Seat Heater Control Sub-Assembly LH
- X 9 Junction Connector
- X 19 Front Power Seat Switch LH
- X 20 Front Seat Slide Motor LH

- Y 4 Front Seat Reclining Motor RH
- Y 5 Front Seat Lumbar Support Motor RH

- Z 3 Front Seat Reclining Motor LH

Position of Parts in Seat <RHD w/ Power Seat>

