


Position of Parts in Engine Compartment <RHD>

* 1:LED Headlight
* 2:Halogen Headlight

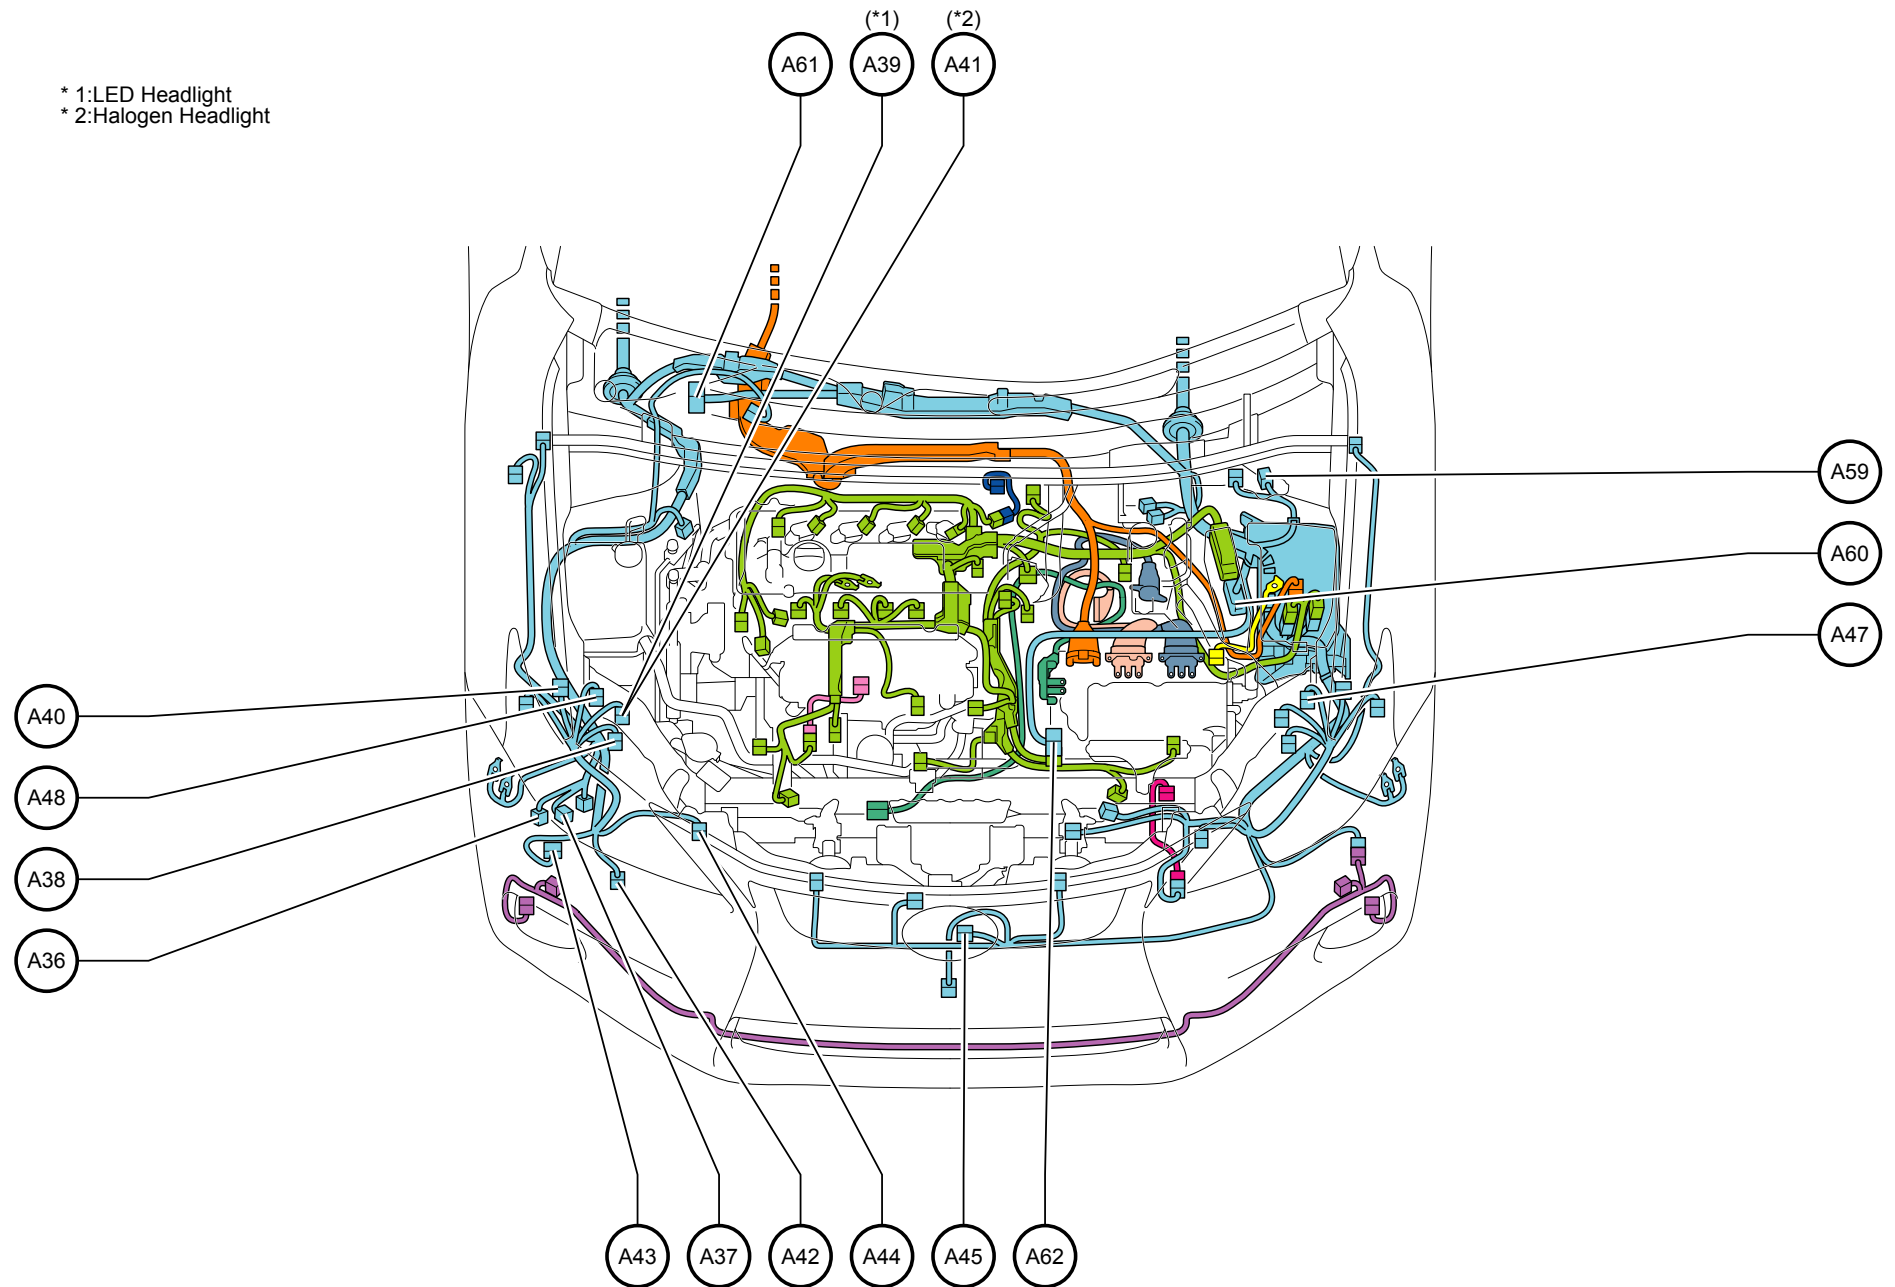

- A 36 Rear Washer Motor & Pump Assembly
- A 37 Level Warning Switch Assembly
- A 38 Headlight Assembly RH
- A 39 Headlight Assembly RH
- A 40 Headlight Assembly RH
- A 41 Headlight Assembly RH
- A 42 Headlight Cleaner Motor and Pump Assembly
- A 43 Cleaner Control Relay
- A 44 Front Airbag Sensor RH
- A 45 Engine Hood Courtesy Switch
- A 47 Headlight Assembly LH
- A 48 Headlight Assembly RH
- A 59 Front Wiper Deicer (Windshield Glass)
- A 60 ECM
- A 61 Skid Control ECU with Actuator Assembly
- A 62 Inverter Assembly with Converter

Position of Parts in Engine Compartment <RHD>

