


Position of Parts in Engine Compartment <2AZ-FE>

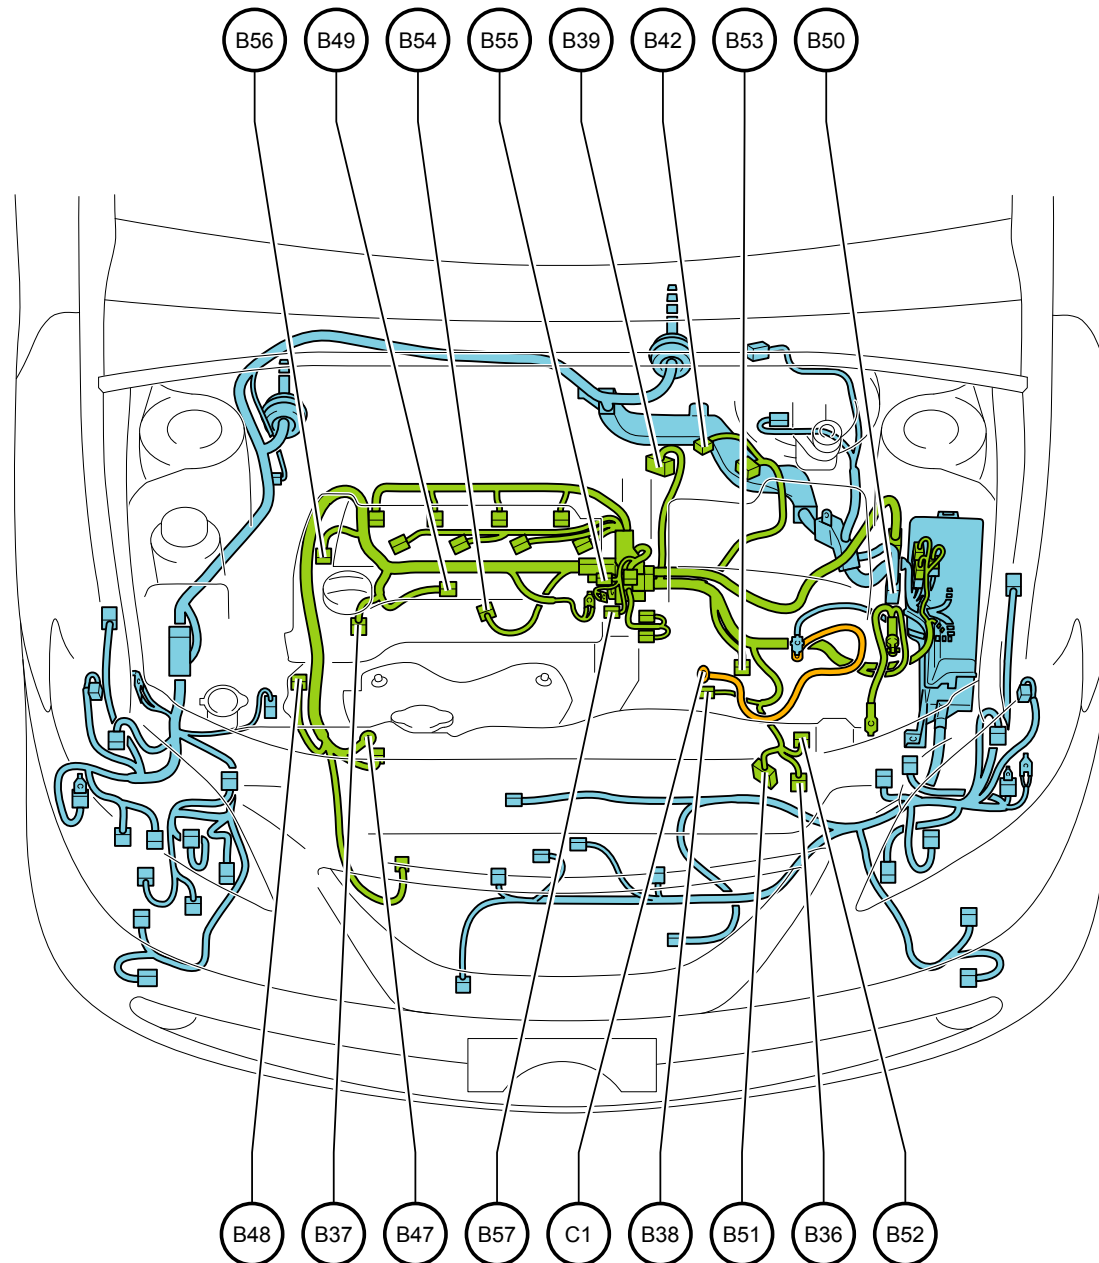

- B 36 Park/Neutral Position SW
 - B 37 Power Steering Oil Pressure SW
 - B 38 Starter
 - B 39 Throttle Body Assembly
 - B 42 VSV (Purge)
 - B 47 Alternator
 - B 48 Crankshaft Position Sensor
 - B 49 Heated Oxygen Sensor (Bank 1 Sensor 2)
 - B 50 Engine ECU
 - B 51 ECT Solenoid
 - B 52 Transmission Revolution Sensor (Turbine)
 - B 53 Transmission Revolution Sensor (Counter Gear)
 - B 54 Knock Control Sensor (Bank 1)
 - B 55 Camshaft Position Sensor
 - B 56 Camshaft Timing Oil Control Valve
 - B 57 Noise Filter (Ignition)
-
- C 1 Starter

