


Position of Parts in Engine Compartment <2GR-FE>

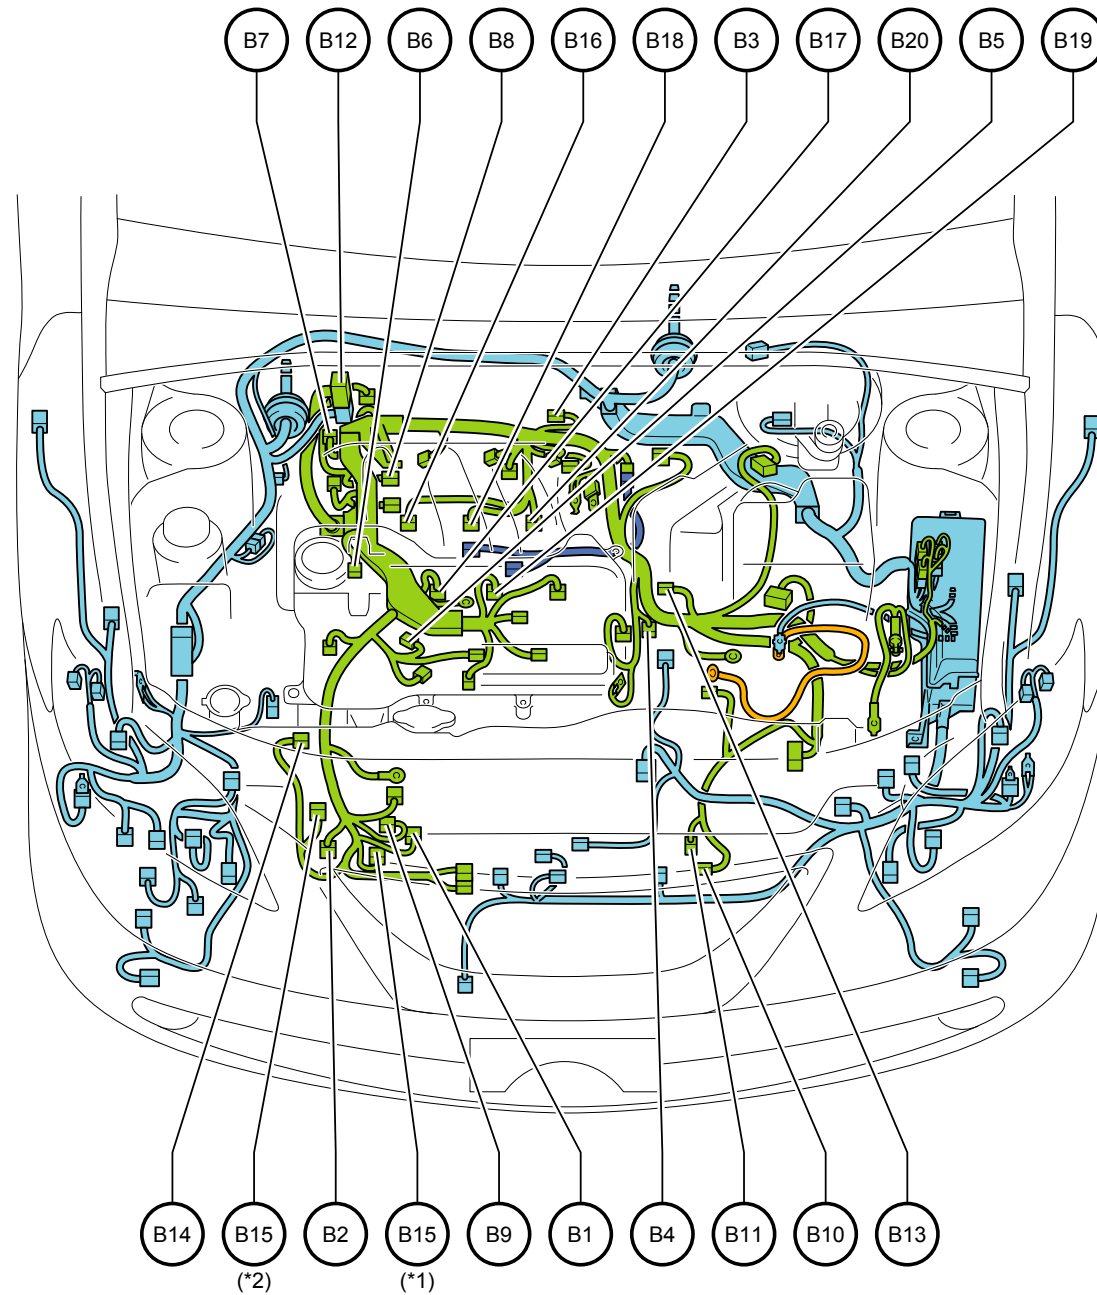

* 1:China
* 2:Middle East

- B 1 A/C Compressor
- B 2 A/C Compressor
- B 3 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 4 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- B 5 Camshaft Timing Oil Control Valve (LH Exhaust Side)
- B 6 Camshaft Timing Oil Control Valve (LH Intake Side)
- B 7 Camshaft Timing Oil Control Valve (RH Exhaust Side)
- B 8 Camshaft Timing Oil Control Valve (RH Intake Side)
- B 9 Crankshaft Position Sensor
- B 10 Active Control Engine Mount Actuator
- B 11 Active Control Engine Mount Sensor
- B 12 Engine ECU
- B 13 Water Temp. Sensor
- B 14 Engine Oil Level Sensor
- B 15 Engine Oil Pressure SW
- B 16 Fuel Injector (No.1)
- B 17 Fuel Injector (No.2)
- B 18 Fuel Injector (No.3)
- B 19 Fuel Injector (No.4)
- B 20 Fuel Injector (No.5)

Position of Parts in Engine Compartment <2GR-FE>

