


Position of Parts in Engine Compartment <2GR-FE>

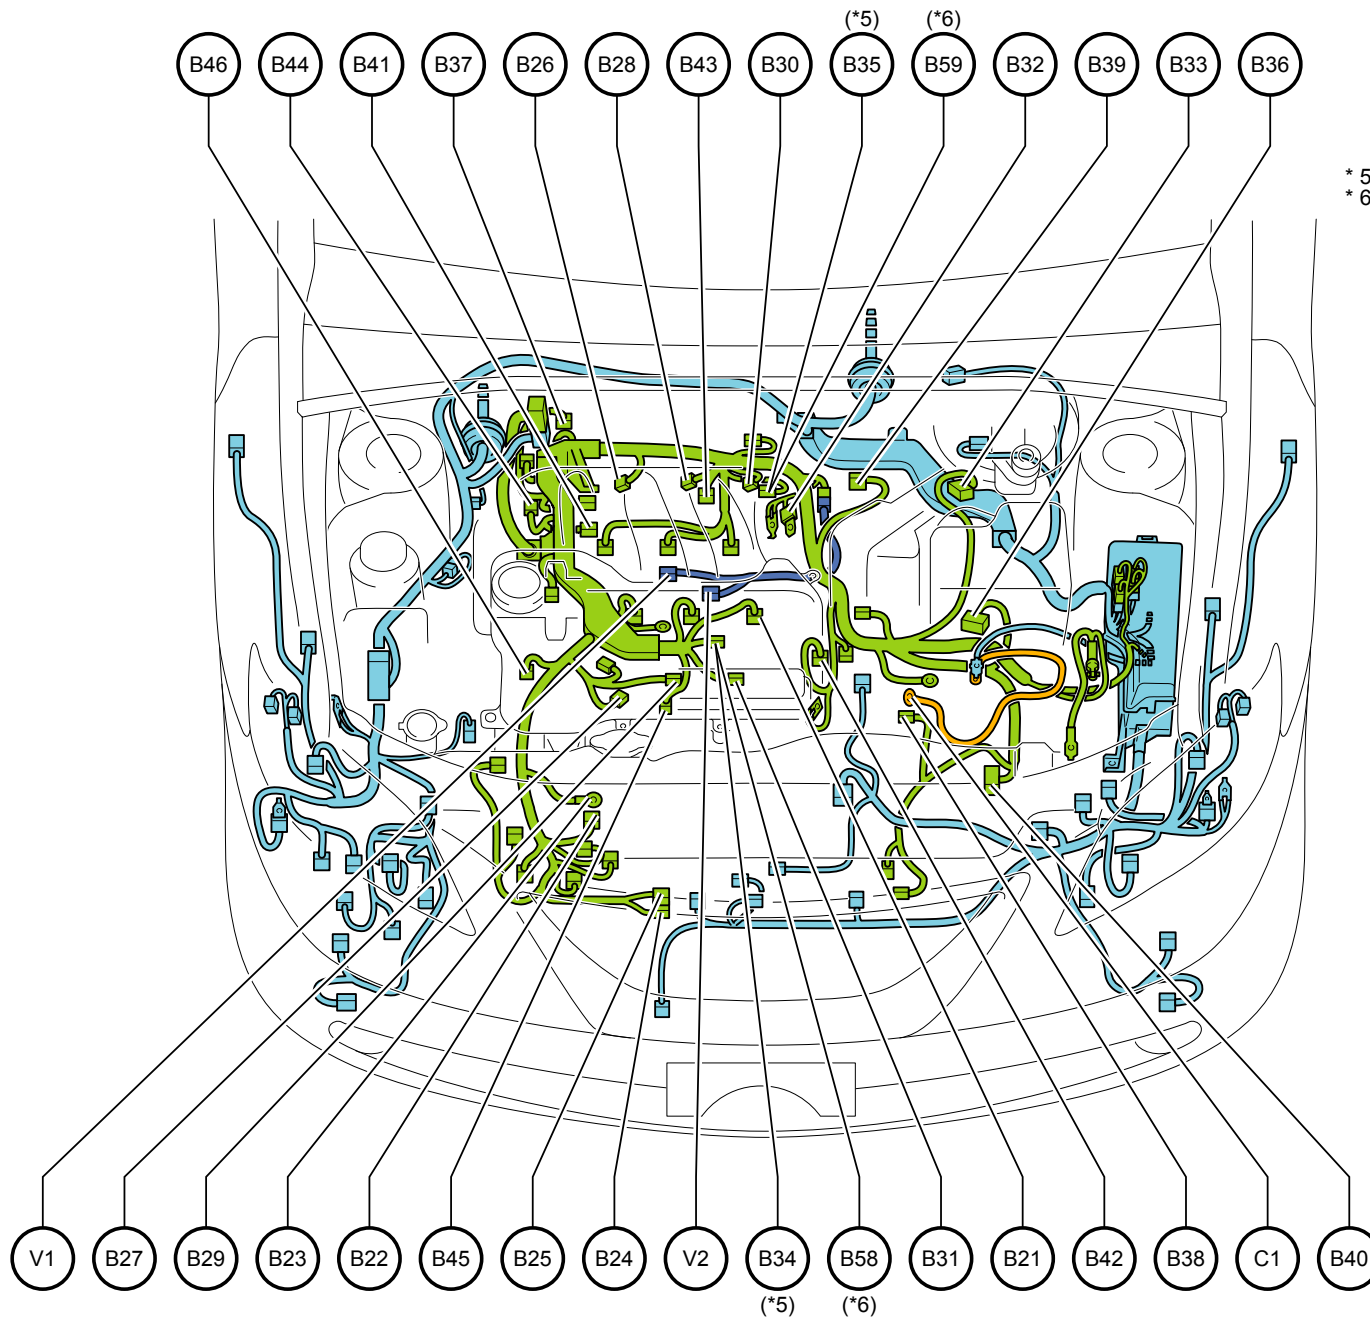

* 5: Before Feb. 2010 Production
 * 6: From Feb. 2010 Production

- B 21 Fuel Injector (No.6)
- B 22 Alternator
- B 23 Alternator
- B 24 Heated Oxygen Sensor (Bank 1 Sensor 2)
- B 25 Heated Oxygen Sensor (Bank 2 Sensor 2)
- B 26 Ignition Coil (No.1)
- B 27 Ignition Coil (No.2)
- B 28 Ignition Coil (No.3)
- B 29 Ignition Coil (No.4)
- B 30 Ignition Coil (No.5)
- B 31 Ignition Coil (No.6)
- B 32 Junction Connector
- B 33 Air Flow Meter
- B 34 Noise Filter (Ignition LH)
- B 35 Noise Filter (Ignition RH)
- B 36 Park/Neutral Position SW
- B 37 Power Steering Oil Pressure SW
- B 38 Starter
- B 39 Throttle Body Assembly
- B 40 Transmission Control ECU
- B 41 VSV (ACIS)
- B 42 VSV (Purge)
- B 43 VVT Sensor (Bank 1 Exhaust Side)
- B 44 VVT Sensor (Bank 1 Intake Side)
- B 45 VVT Sensor (Bank 2 Exhaust Side)
- B 46 VVT Sensor (Bank 2 Intake Side)
- B 58 Noise Filter (Ignition LH)
- B 59 Noise Filter (Ignition RH)

C 1 Starter

- V 1 Knock Control Sensor (Bank 1)
- V 2 Knock Control Sensor (Bank 2)

Position of Parts in Engine Compartment <2GR-FE>

