


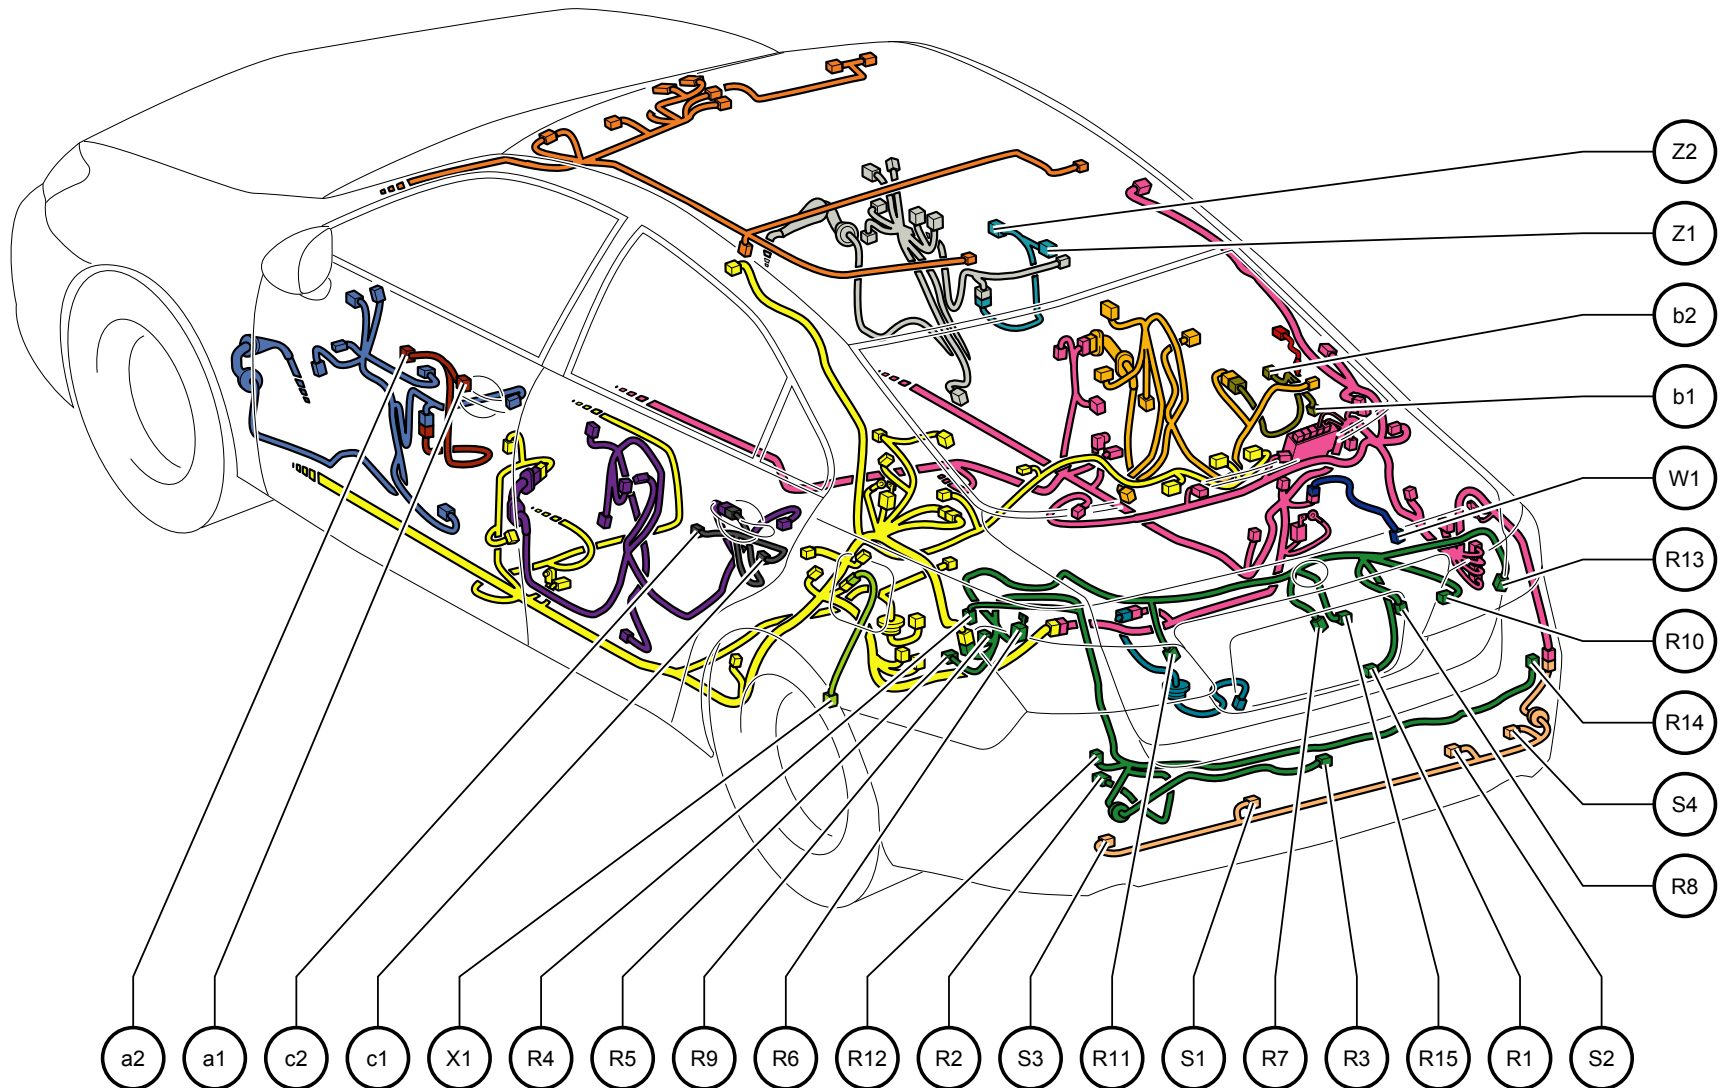

- R 1 Door Lock Assembly (Luggage)
- R 2 Electrical Key Oscillator (Inside Luggage Room)
- R 3 Electrical Key Oscillator (Outside Luggage Room)
- R 4 Fuel Lid Opener Motor
- R 5 Junction Connector
- R 6 Junction Connector
- R 7 License Plate Lamp (LH)
- R 8 License Plate Lamp (RH)
- R 9 Lamp Failure Indicator Sensor
- R 10 Luggage Electrical Key SW
- R 11 Rear Combination Lamp (LH)
- R 12 Rear Combination Lamp (LH)
- R 13 Rear Combination Lamp (RH)
- R 14 Rear Combination Lamp (RH)
- R 15 Television Camera

- S 1 Ultrasonic Sensor (Rear Center LH)
- S 2 Ultrasonic Sensor (Rear Center RH)
- S 3 Ultrasonic Sensor (Rear Corner LH)
- S 4 Ultrasonic Sensor (Rear Corner RH)

- W 1 Speed Sensor (Rear RH)









 
 
 
 
 

 
 



 


- X 1 Speed Sensor (Rear LH)

- Z 1 Door Outside Handle (Front RH)
- Z 2 Electrical Key Oscillator (Front Door RH)

- a 1 Door Outside Handle (Front LH)
- a 2 Electrical Key Oscillator (Front Door LH)


- b 1 Door Outside Handle (Rear RH)
- b 2 Electrical Key Oscillator (Rear Door RH)

- c 1 Door Outside Handle (Rear LH)
- c 2 Electrical Key Oscillator (Rear Door LH)

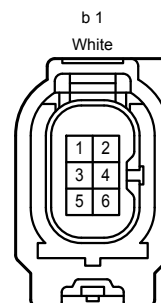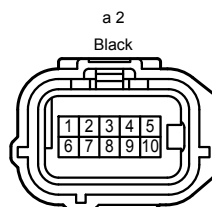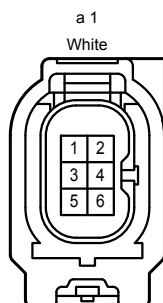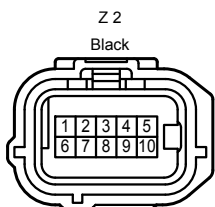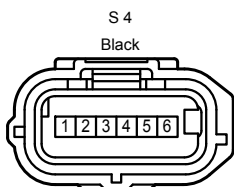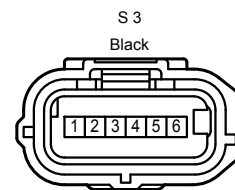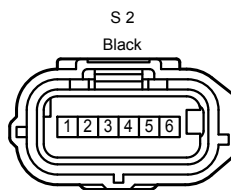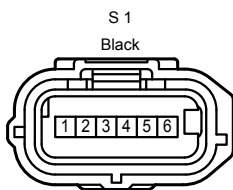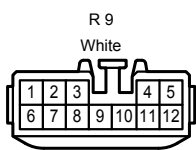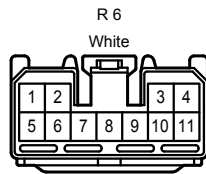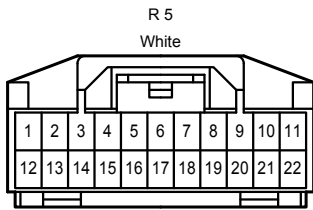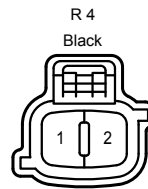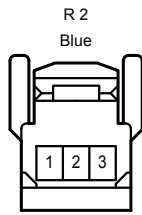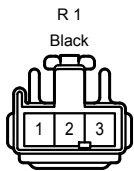


b 2

Black

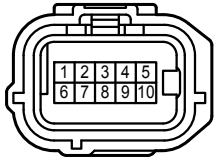

c 1

White

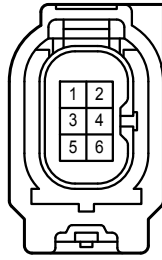

c 2

Black

