


Position of Parts in Body <From Aug. 2009 Production>

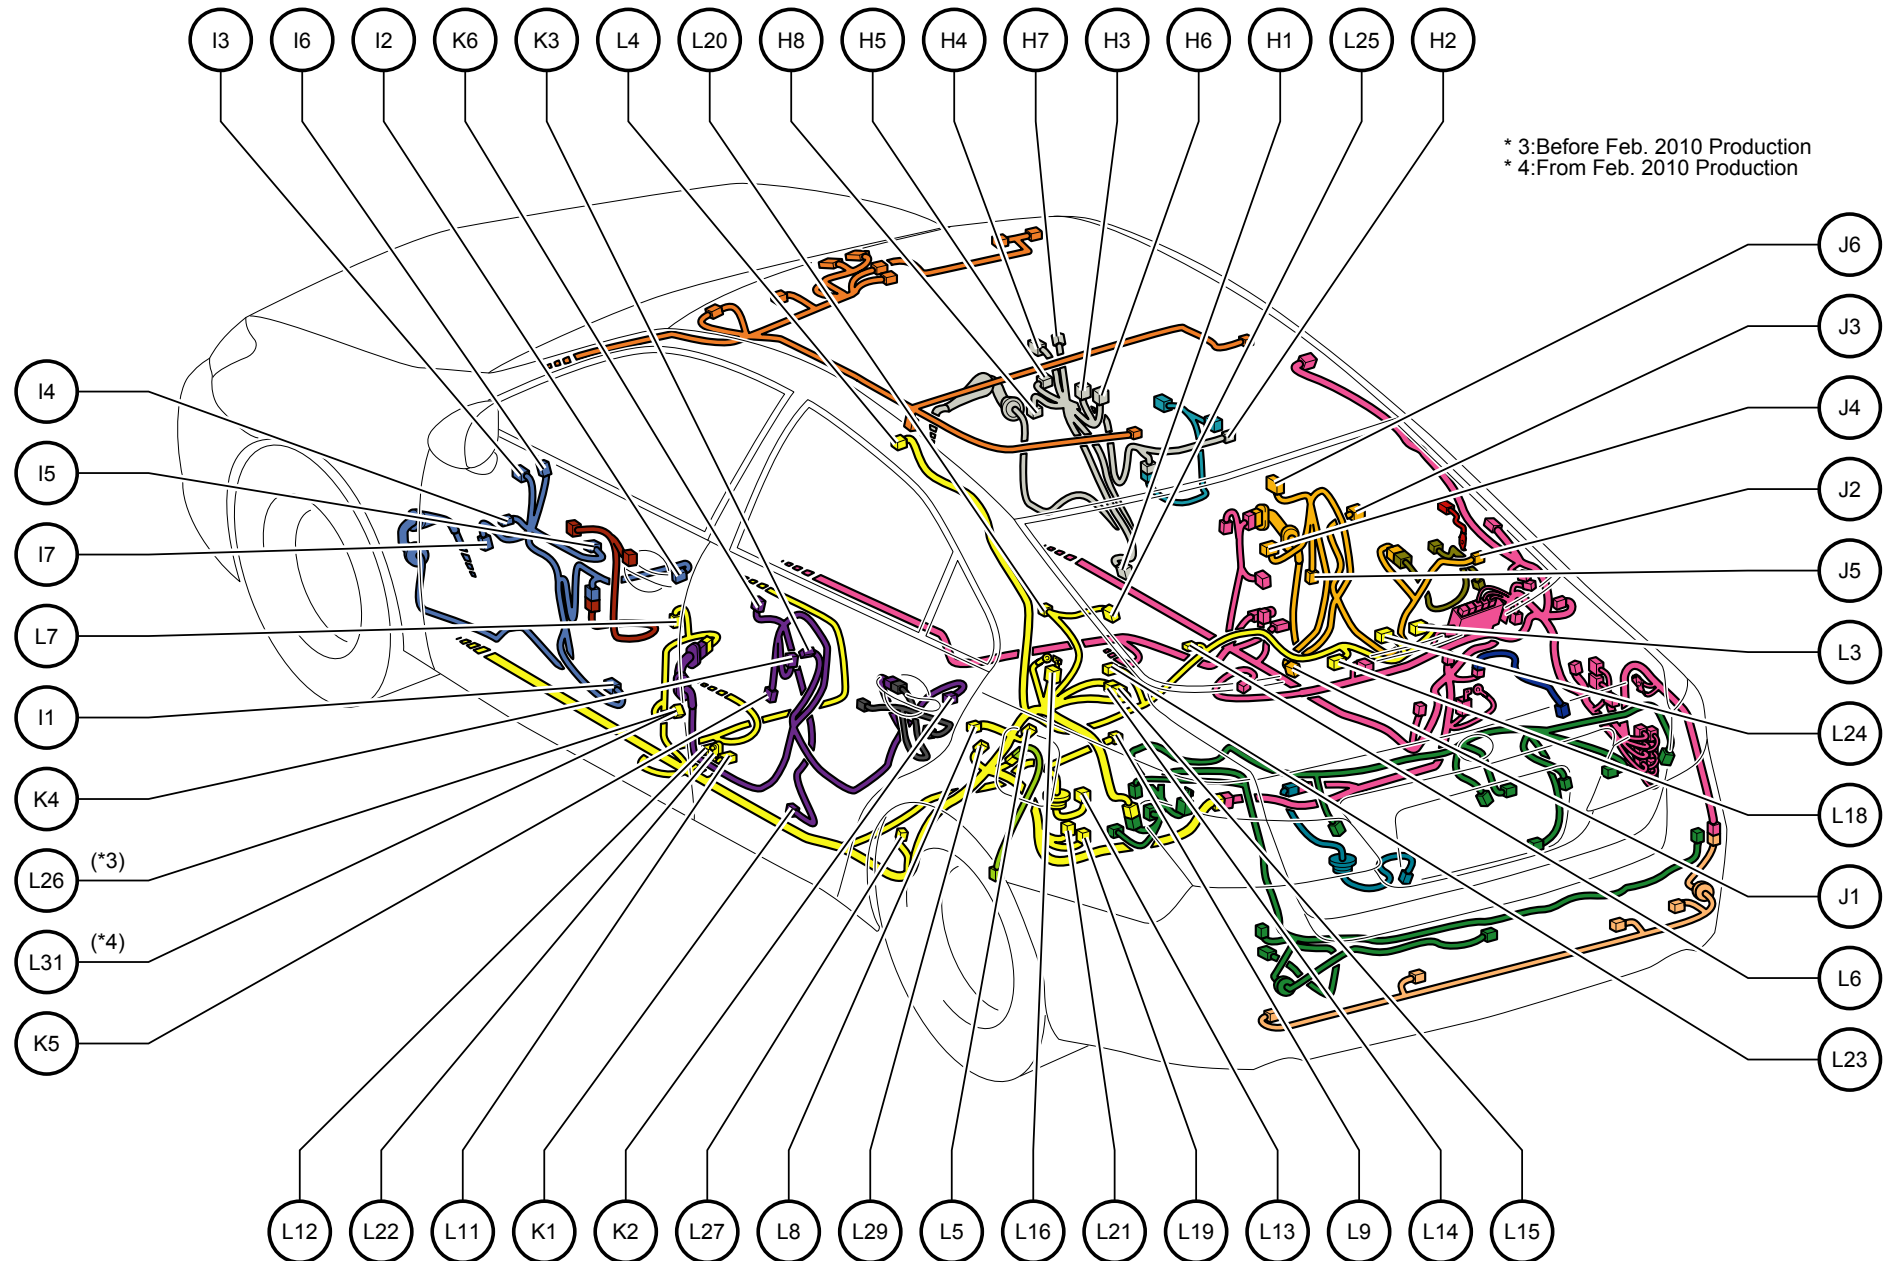

H 1 Courtesy Lamp (Front Door RH)  
H 2 Door Lock Assembly (Front RH)  
H 3 Door Lock Control SW  
H 4 Outer Rear View Mirror (RH)  
H 5 Power Window ECU (Front RH)  
H 6 Power Window SW (Front RH)  
H 7 Seat Memory SW (RH)  
H 8 Speaker (Front Door RH)

I 1 Courtesy Lamp (Front Door LH)  
I 2 Door Lock Assembly (Front LH)  
I 3 Outer Rear View Mirror (LH)  
I 4 Power Window ECU (Front LH)  
I 5 Power Window Master SW  
I 6 Seat Memory SW (LH)  
I 7 Speaker (Front Door LH)

J 1 Courtesy Lamp (Rear Door RH)  
J 2 Door Lock Assembly (Rear RH)  
J 3 Power Window ECU (Rear RH)  
J 4 Power Window SW (Rear RH)  
J 5 Speaker (Rear Door RH)  
J 5 Speaker (Rear Door RH)  
J 6 Tweeter (Rear Door RH)

K 1 Courtesy Lamp (Rear Door LH)  
K 2 Door Lock Assembly (Rear LH)  
K 3 Power Window ECU (Rear LH)  
K 4 Power Window SW (Rear LH)  
K 5 Speaker (Rear Door LH)  
K 5 Speaker (Rear Door LH)  
K 6 Tweeter (Rear Door LH)

L 3 Center Stop Lamp  
L 4 Curtain Shield Airbag Squib (LH)  
L 5 Diode (Door Courtesy Rear LH)  
L 6 Diode (Luggage Compartment Lamp)  
L 7 Door Courtesy SW (Front LH)  
L 8 Door Courtesy SW (Rear LH)  
L 9 Electrical Key Oscillator (Rear Seat)  
L 11 Front Seat Outer Belt (LH)  
L 12 Front Seat Outer Belt Motor (LH)  
L 13 Fuel Suction Pump and Gage Assembly  
L 14 Junction Connector  
L 15 Junction Connector  
L 16 Junction Connector  
L 18 Luggage Compartment Lamp  
L 19 Noise Filter (Dome Lamp)  
L 20 Noise Filter (Rear Window Defogger)  
L 21 Noise Filter (Stop Lamp)  
L 22 Pretensioner (Front LH)  
L 23 Pretensioner (Rear LH)  
L 24 Rear Sunshade Relay  
L 25 Rear Window Defogger  
L 26 Side Airbag Sensor (Front LH)  
L 27 Side Airbag Sensor (Rear LH)  
L 29 Side Airbag Squib (Rear LH)  
L 31 Side Airbag Sensor (Front LH)

Position of Parts in Body <From Aug. 2009 Production>

