

The diagram illustrates the electrical system for the 2014 Lexus LX570, organized into four main sections: 1. Power Sources and Distribution, 2. Engine and Ignition, 3. Instrumentation and Central Control, and 4. Lighting and Accessories.

Section 1: Power Sources and Distribution
 - (BAT) 10A ECU-B NO. 1: Main battery connection.
 - (IG) 7.5A ECU-IG2 NO. 1: Ignition system connection.
 - (BAT) 15A TURN&HAZ: Turn signal and hazard warning connection.
 - Junction connectors H112, H107(A), H108(B), H198, and H107(A), H108(B) are shown for wiring distribution.

Section 2: Engine and Ignition
 - Stop & Start System: 70-17>.
 - HAZ1, HAZ2: Hazard warning lights.
 - Turn RH, Turn LH: Turn signal lights.
 - 5V IC: 5-volt integrated circuit.

Section 3: Instrumentation and Central Control
 - H13(A), H14(B) Combination Meter Assembly: Instrument cluster.
 - CPU: Central processing unit.
 - I/F: Interface unit.
 - LED Driver: Driver for LED lights.
 - Telltales: Warning indicators.
 - Speaker: Audio output.
 - H19(A), (B) Headlight Dimmer Switch Assembly: Headlight control switch.

Section 4: Lighting and Accessories
 - H42(A), H181(R) Radio Receiver Assembly: Radio unit.
 - H98(K) Multi-Media Module Receiver Assembly or Radio Receiver Assembly: Multimedia unit.
 - H42(A), H181(R) Radio Receiver Assembly: Radio unit.
 - H98(K) Multi-Media Module Receiver Assembly or Radio Receiver Assembly: Multimedia unit.
 - H42(A), H181(R) Radio Receiver Assembly: Radio unit.
 - H98(K) Multi-Media Module Receiver Assembly or Radio Receiver Assembly: Multimedia unit.

Legend:
 * 3 : w/o LEXUS Navigation System
 * 5 : w/ LEXUS Navigation System
 * 8 : Before Aug. 2014 Production
 * 9 : From Aug. 2014 Production
 * 10 : Before Jul. 2015 Production
 * 11 : From Jul. 2015 Production
 * 12 : 6AR-FSE
 * 13 : Except 6AR-FSE

- * 3 : w/o LEXUS Navigation System
- * 5 : w/ LEXUS Navigation System
- * 8 : Before Aug. 2014 Production
- * 9 : From Aug. 2014 Production
- *10 : Before Jul. 2015 Production
- *11 : From Jul. 2015 Production
- *12 : 6AR-FSE
- *13 : Except 6AR-FSE

Turn Signal and Hazard Warning Light

