




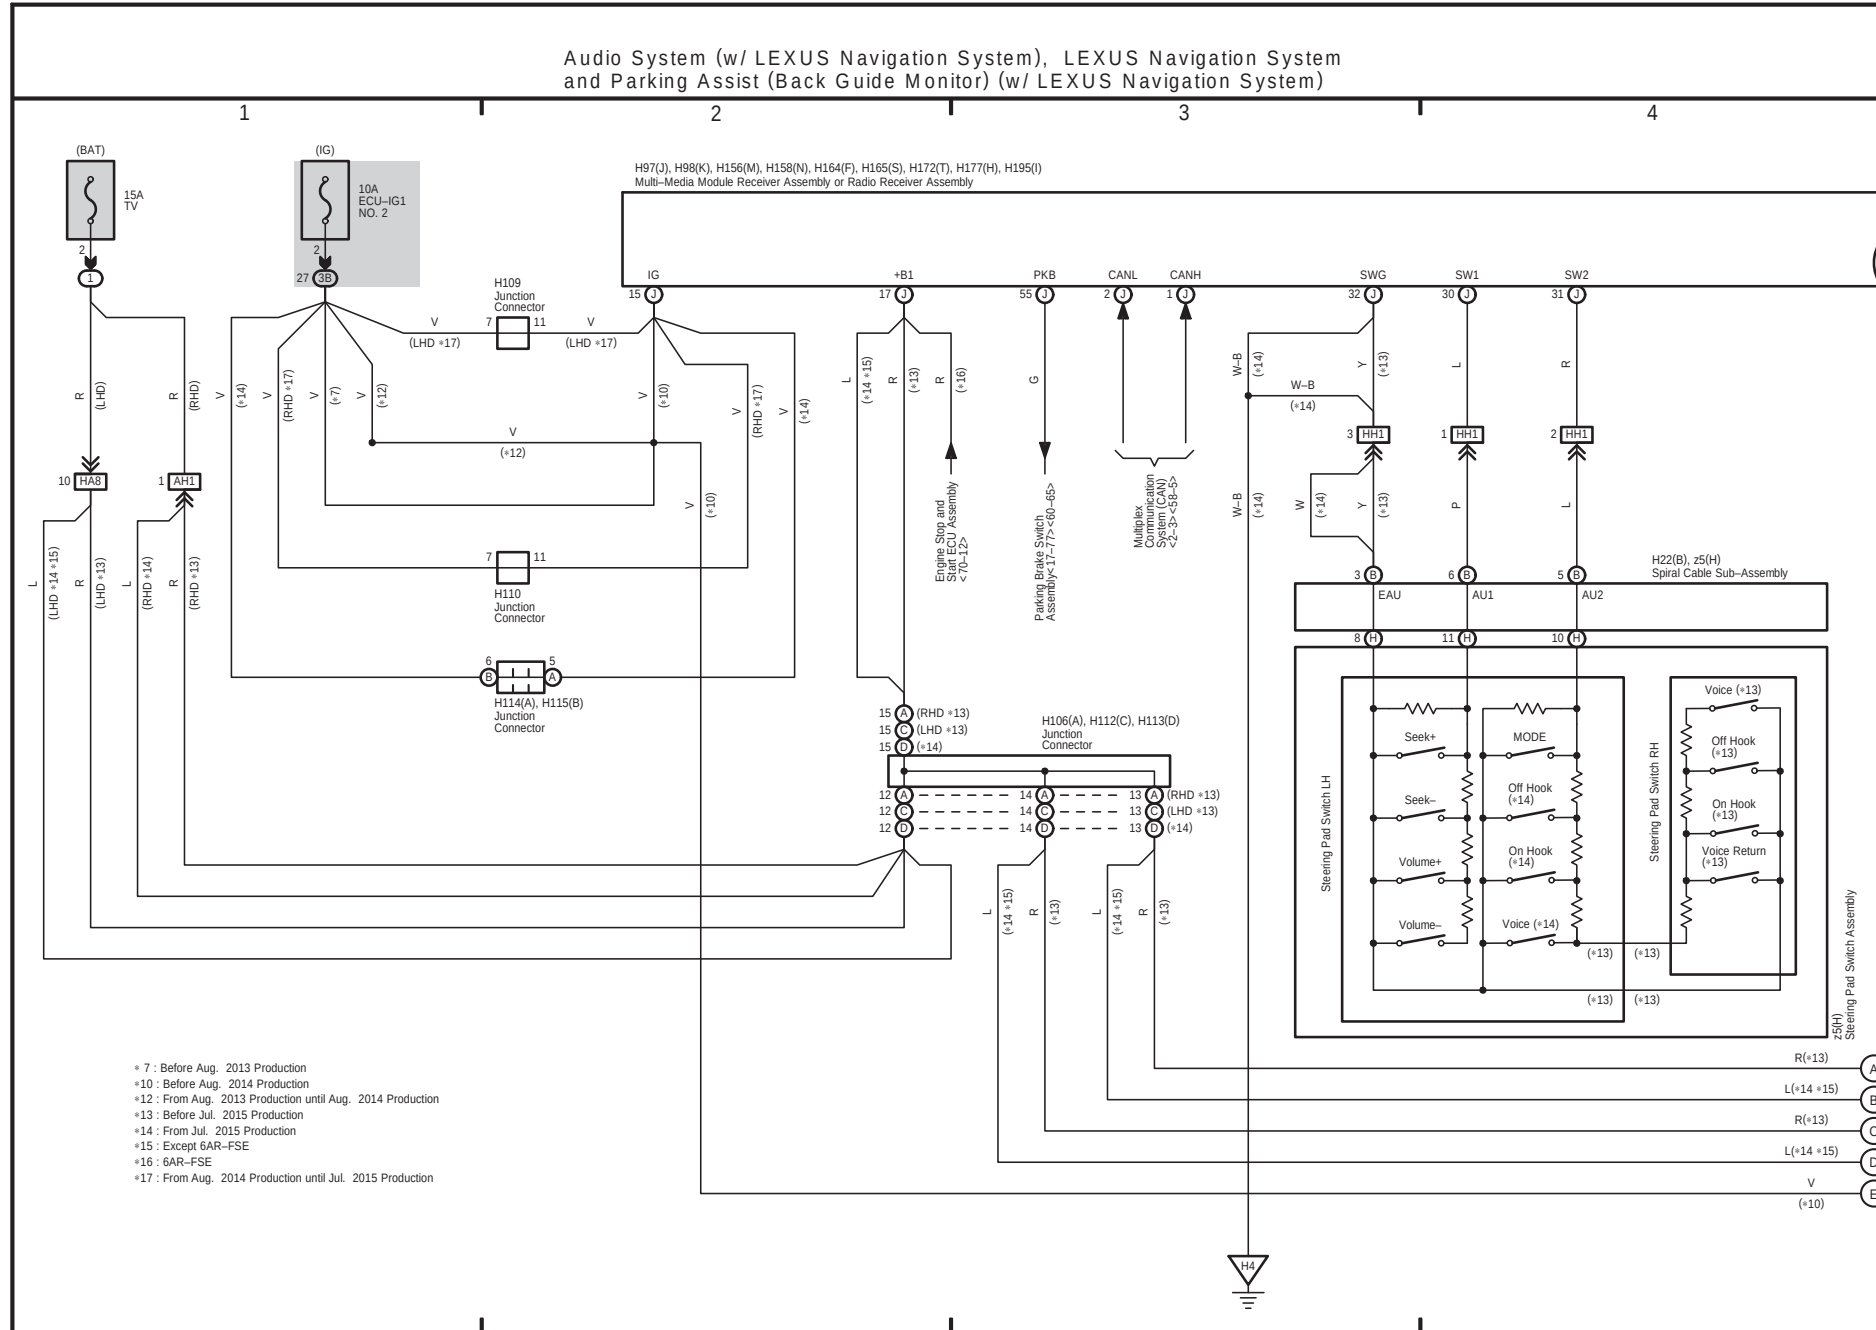

Audio System (w/ LEXUS Navigation System), LEXUS Navigation System and Parking Assist (Back Guide Monitor) (w/ LEXUS Navigation System)

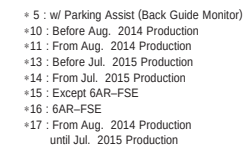

Audio System (w/ LEXUS Navigation System), LEXUS Navigation System
and Parking Assist (Back Guide Monitor) (w/ LEXUS Navigation System)

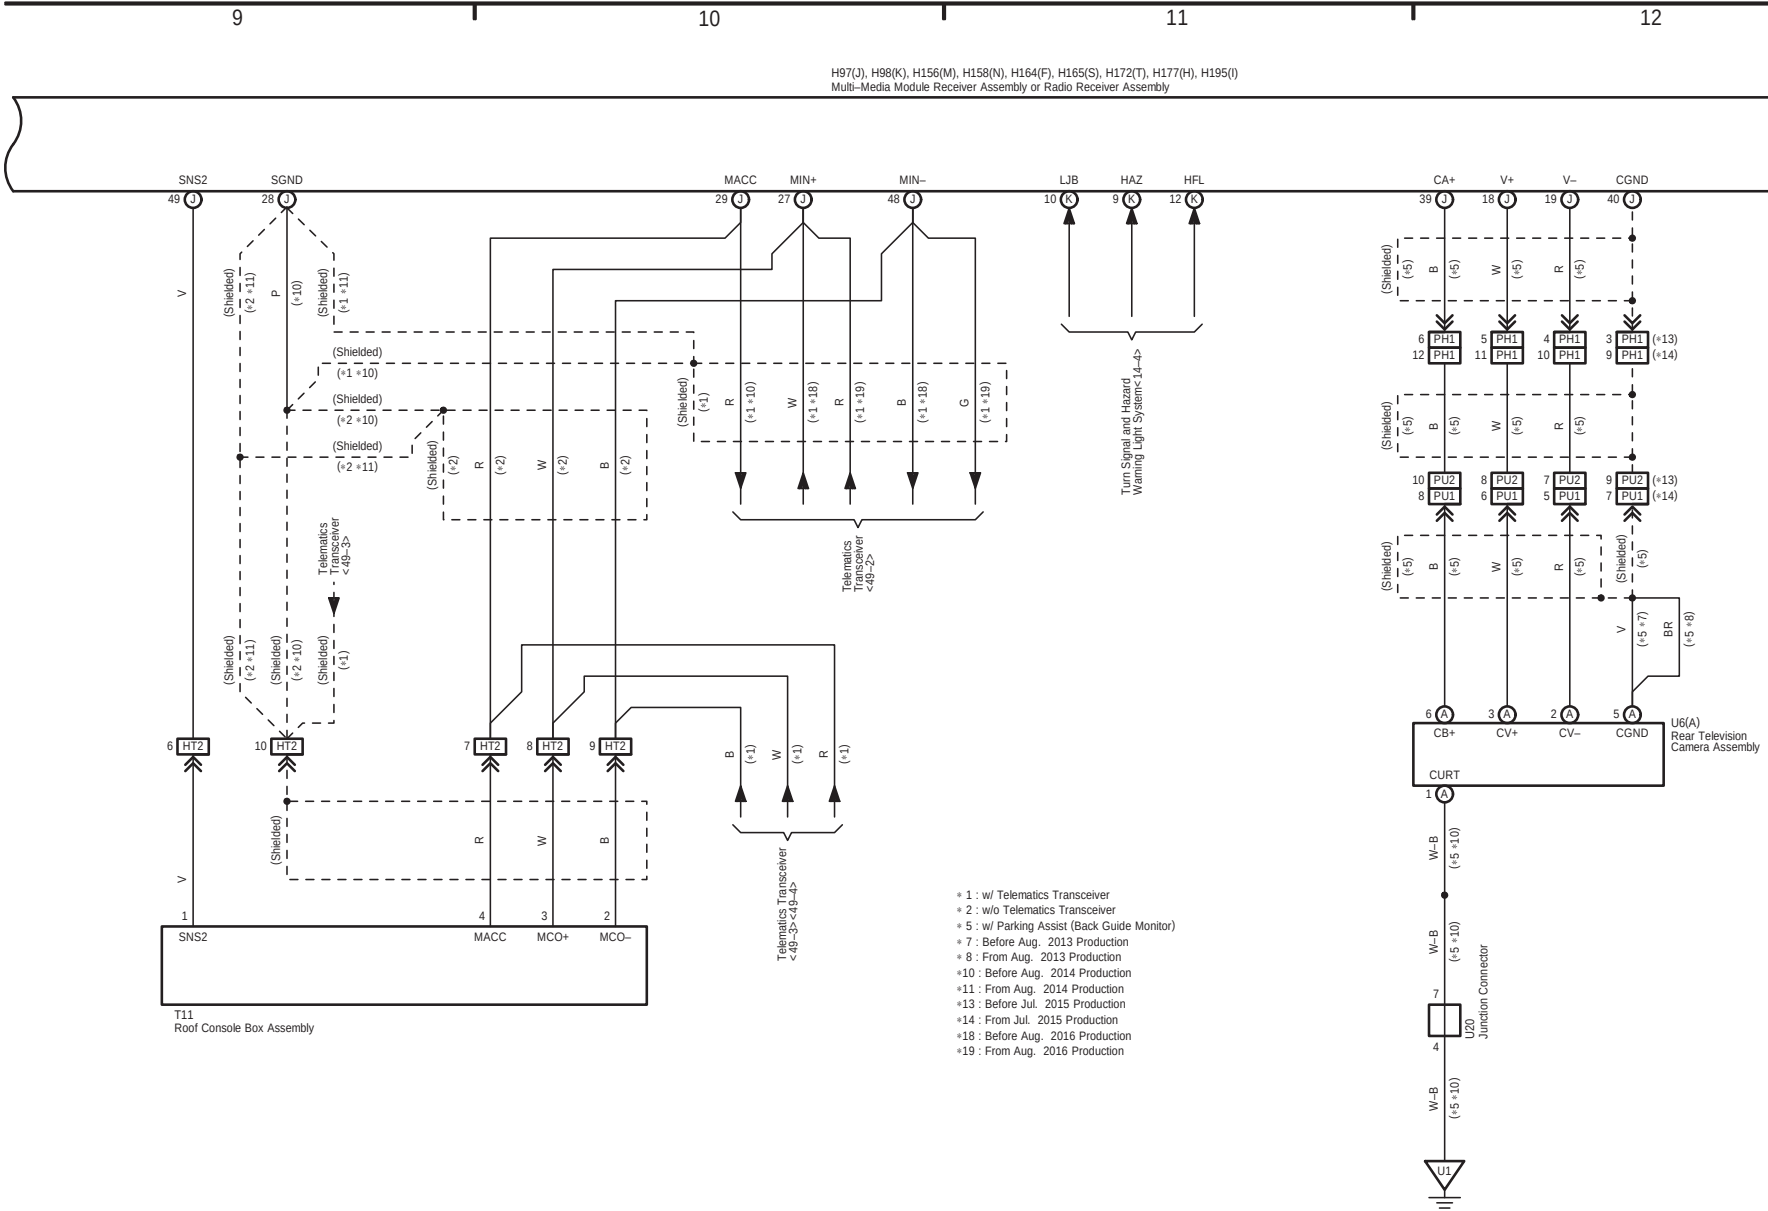

Audio System (w/ LEXUS Navigation System), LEXUS Navigation System
and Parking Assist (Back Guide Monitor) (w/ LEXUS Navigation System)

13


14

15

16

H97(J), H98(K), H156(M), H158(N), H164(F), H165(S), H172(T), H177(H), H195(I)
Multi-Media Module Receiver Assembly or Radio Receiver Assembly

- * 1 : w/ Telematics Transceiver
- * 3 : 15 Speaker
- *13 : Before Jul. 2015 Production
- *14 : From Jul. 2015 Production

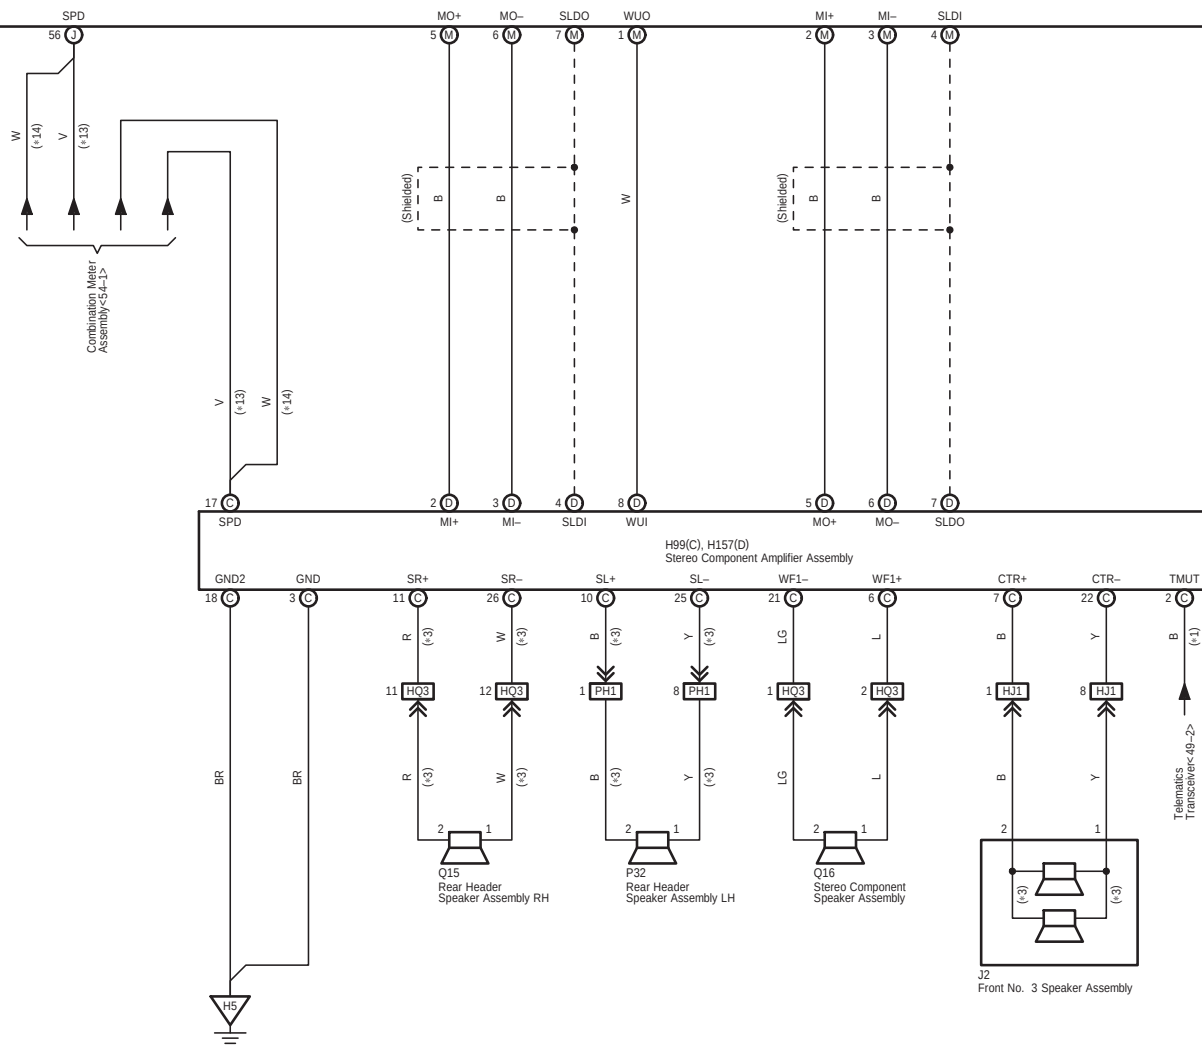

17 18 19 20

H97(J), H98(K), H156(M), H158(N), H164(F), H165(S), H172(T), H177(H), H195(I)
Multi-Media Module Receiver Assembly or Radio Receiver Assembly

Diagram showing the wiring for the Multi-Media Module Receiver Assembly or Radio Receiver Assembly. The assembly includes a Telematics Transceiver and two 30A AMP units.

Antennas:

- Digital Audio Broadcasting Antenna (Terminal 1, Wire B, (+9))
- Telephone Antenna (Terminal 4, Wire W, (+6))
- Radio Antenna (Terminal 7, Wire G, (+1))
- GPS Antenna (Terminal 6, Wire B, (+1))

Telematics Transceiver:

- Terminal 1 (N): B (+9)
- Terminal 4 (N): W (+6)
- Terminal 7 (N): G (+1)
- Terminal 6 (N): B (+1)
- Terminal 5 (N): R (+1)
- Terminal 3 (N): W (+1)
- Terminal 2 (N): W (+1)

30A AMP Units:

- Unit 1 (Left): Terminal 2 (N) to 1 (N) via GR (+15). Terminal 1 (N) to 1 (C) via L (+15). Terminal 1 (C) to 1 (C) via Y (+16).
- Unit 2 (Right): Terminal 2 (N) to 1 (N) via L (+15). Terminal 1 (N) to 1 (C) via L (+15). Terminal 1 (C) to 1 (C) via Y (+16).

Legend:

- * 1 : w/ Telematics Transceiver
- * 2 : w/o Telematics Transceiver
- * 3 : 15 Speaker
- * 4 : 8 Speaker
- * 6 : w/ Blocking System
- * 9 : w/ Digital Audio Broadcasting Antenna
- * 15 : Except 6AR-FSE
- * 16 : 6AR-FSE

H99(C), H157(D)
Stereo Component Amplifier Assembly

Diagram showing the wiring for the Stereo Component Amplifier Assembly. The assembly includes a Telematics Transceiver and four speaker assemblies.

Speakers:

- H63 Front No. 2 Speaker Assembly RH (Terminal 13, Wire B, (+2))
- H62 Front No. 2 Speaker Assembly LH (Terminal 12, Wire R, (+2))
- N7 Rear No. 2 Speaker Assembly RH (Terminal 15, Wire V, (+3))
- O7 Rear No. 2 Speaker Assembly LH (Terminal 14, Wire R, (+3))
- L6 Front No. 1 Speaker Assembly RH (Terminal 5, Wire B, (+1))
- M5 Front No. 1 Speaker Assembly LH (Terminal 4, Wire R, (+1))


Telematics Transceiver:

- Terminal 13 (C): B (+2)
- Terminal 28 (C): Y (+2)
- Terminal 15 (C): V (+3)
- Terminal 30 (C): P (+3)
- Terminal 14 (C): R (+3)
- Terminal 29 (C): W (+3)
- Terminal 5 (C): B (+1)
- Terminal 20 (C): Y (+1)
- Terminal 4 (C): R (+1)
- Terminal 19 (C): W (+1)

- * 1 : w/ Telematics Transceiver
- * 2 : w/o Telematics Transceiver
- * 3 : 15 Speaker
- * 4 : 8 Speaker
- * 6 : w/ Blocking System
- * 9 : w/ Digital Audio Broadcasting Antenna
- * 15 : Except 6AR-FSE
- * 16 : 6AR-FSF

Audio System (w/ LEXUS Navigation System), LEXUS Navigation System
and Parking Assist (Back Guide Monitor) (w/ LEXUS Navigation System)

21 22 23 24

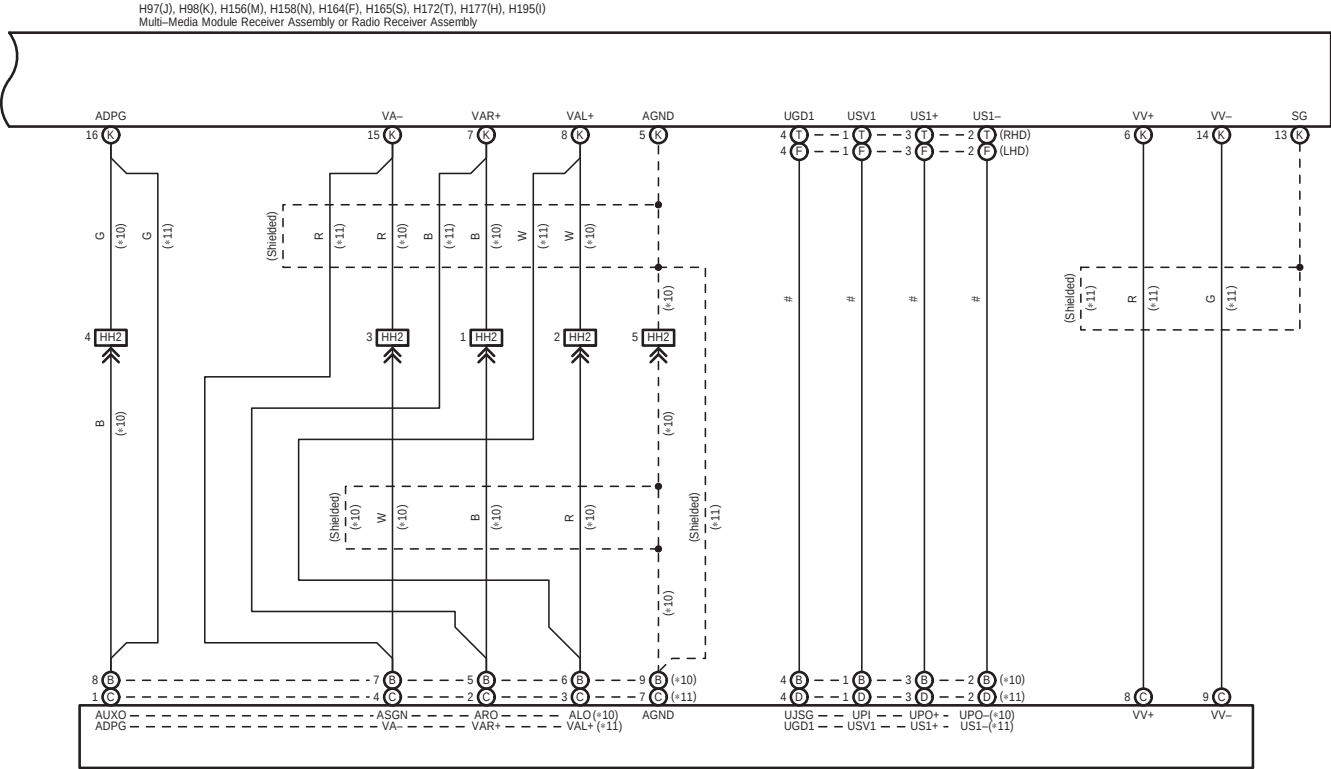

: There is no wire color information.

+10 : Before Aug. 2014 Production
+11 : From Aug. 2014 Production

LEXUS ES200/ES250/ES350 (EM2822E)