





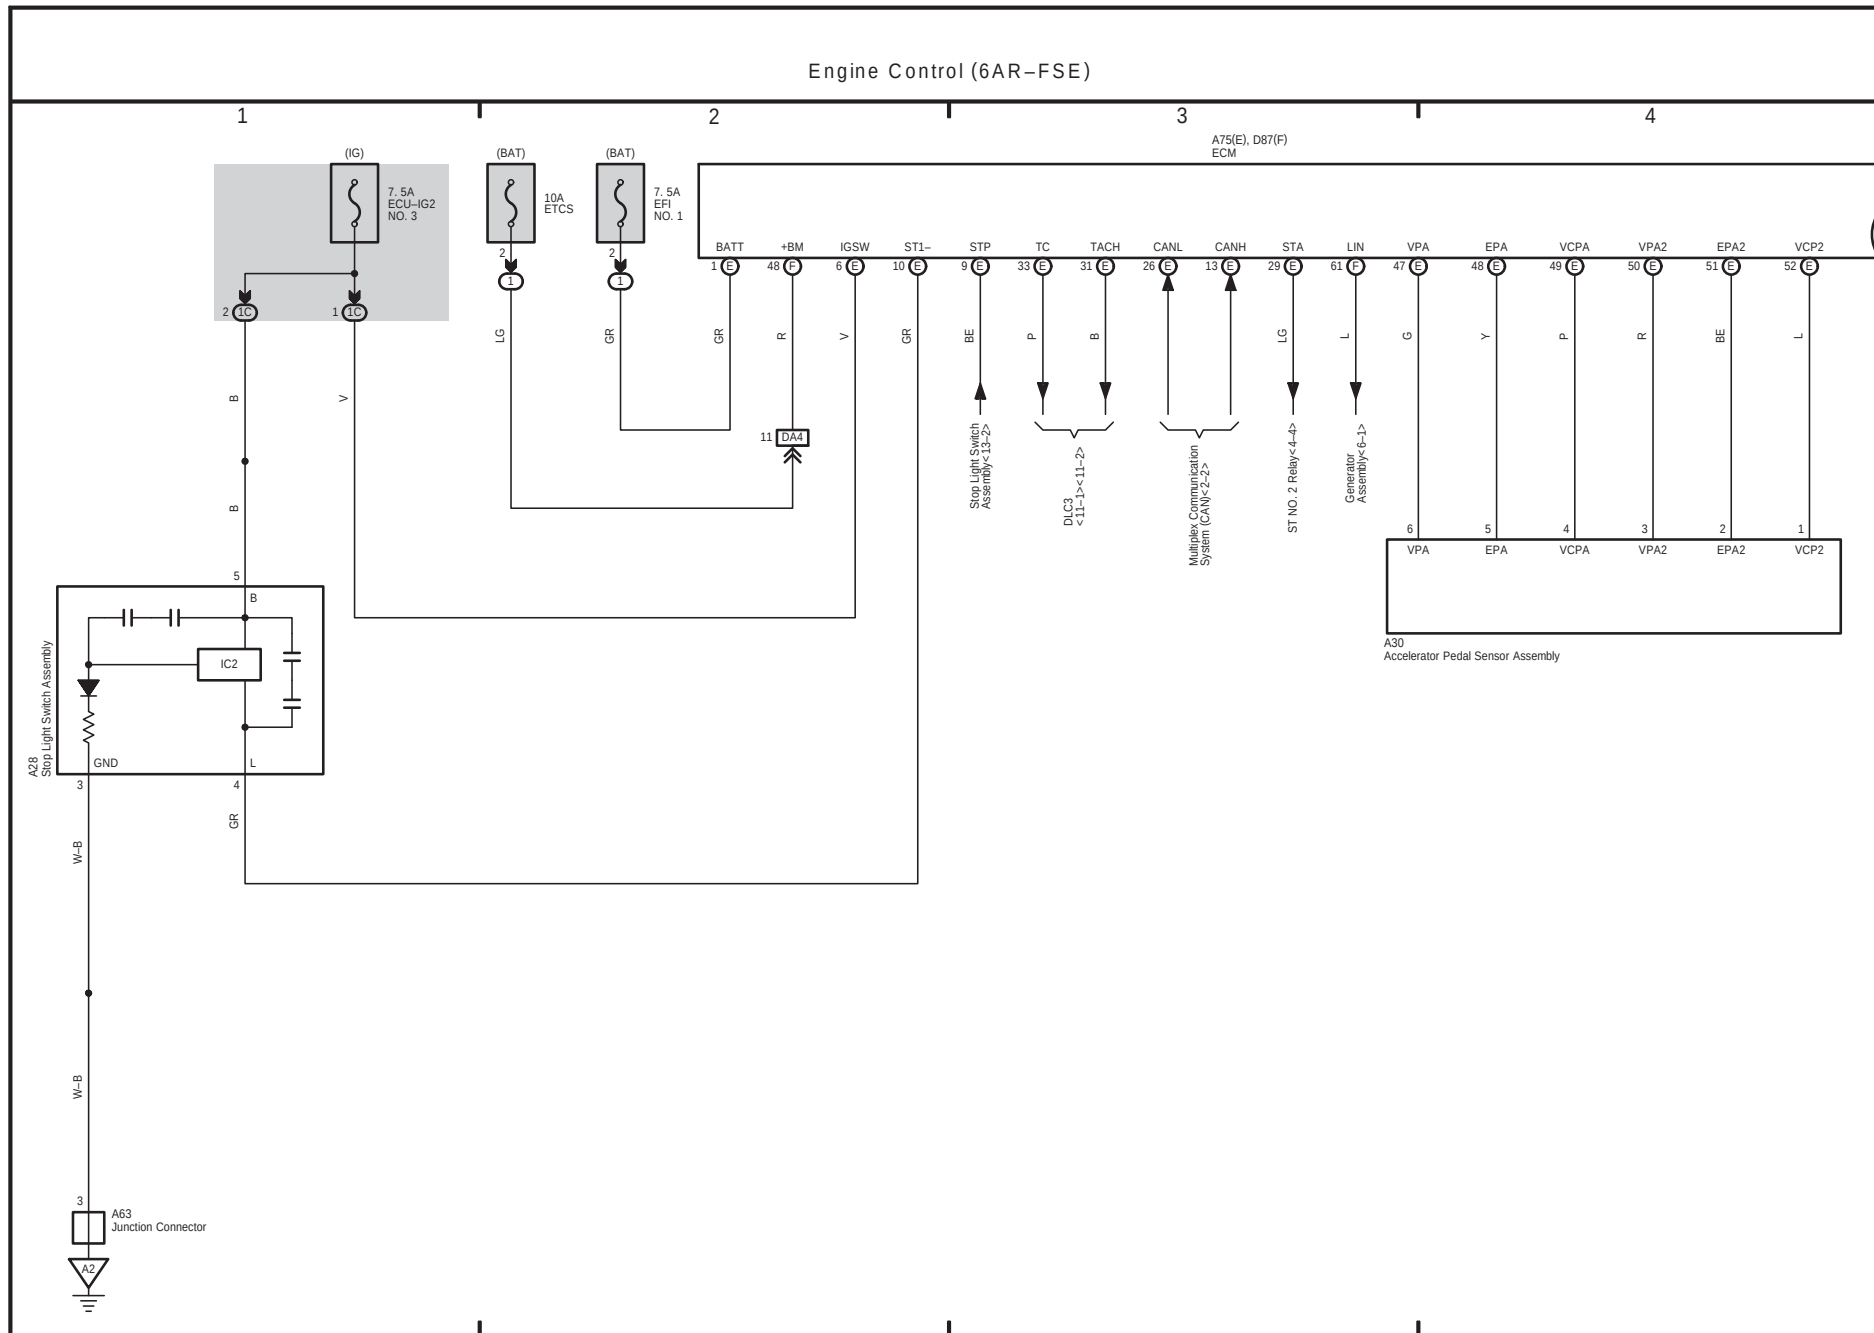

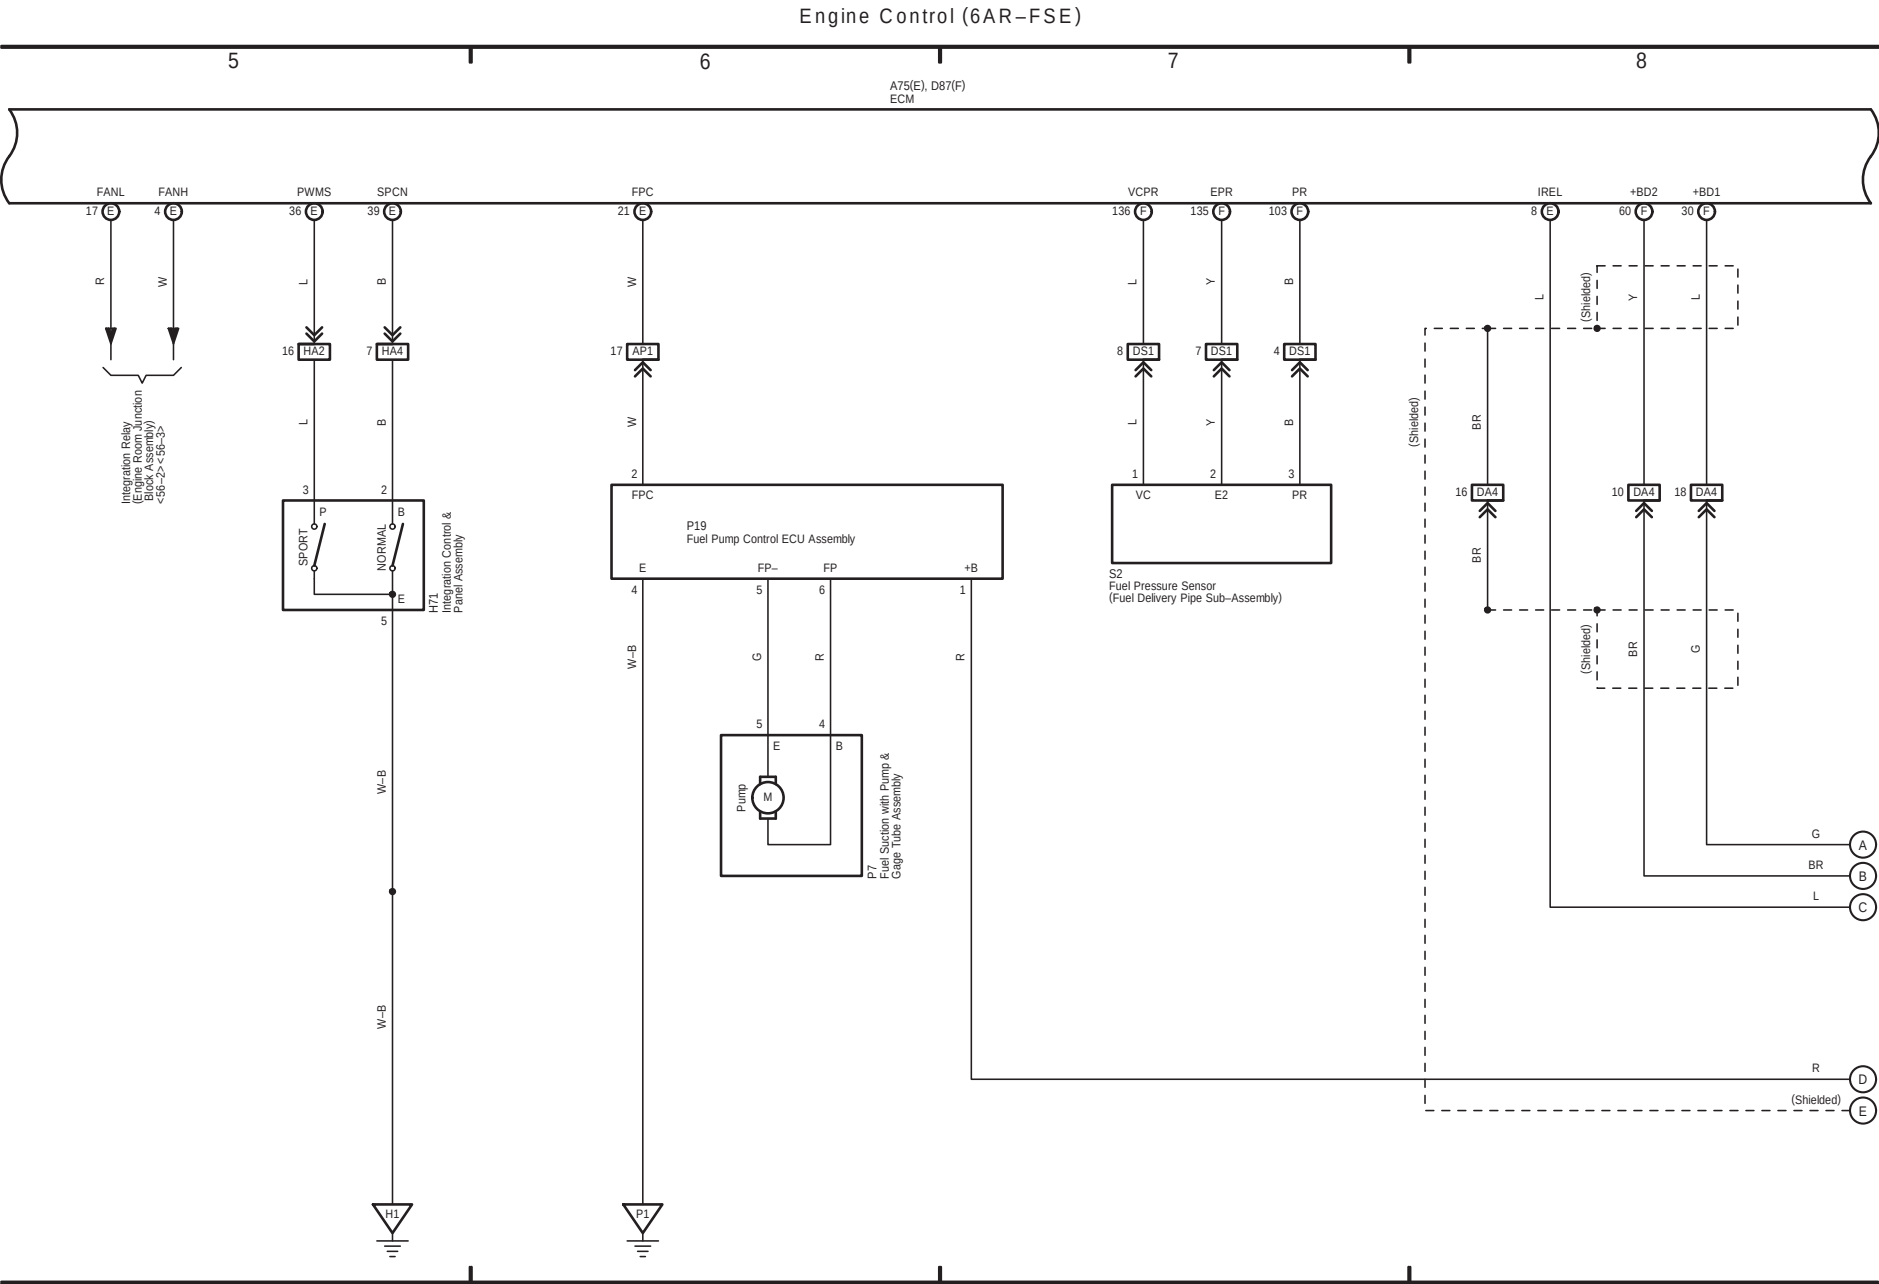


LEXUS ES200/ES250/ES350 (EM2822E)

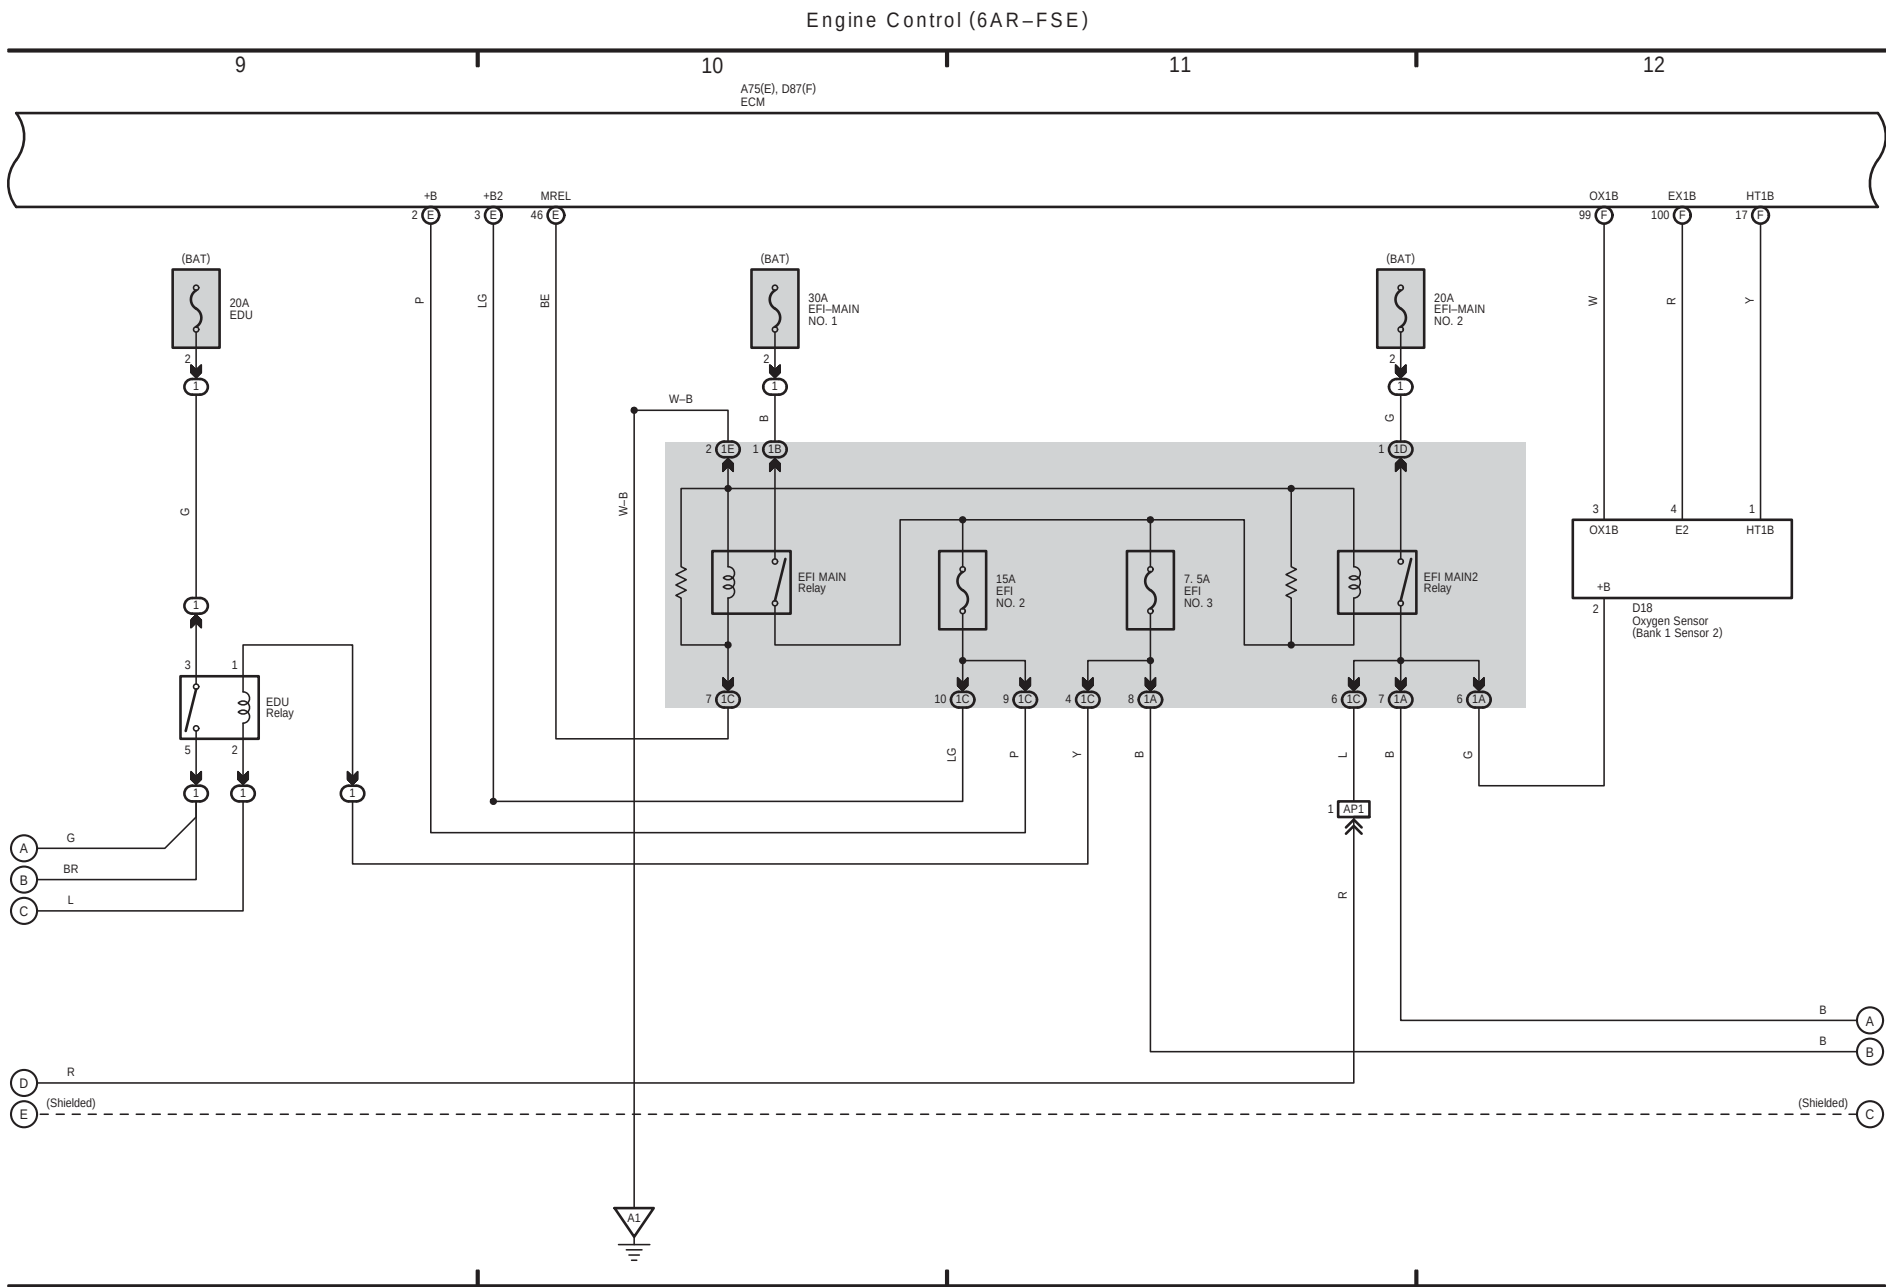

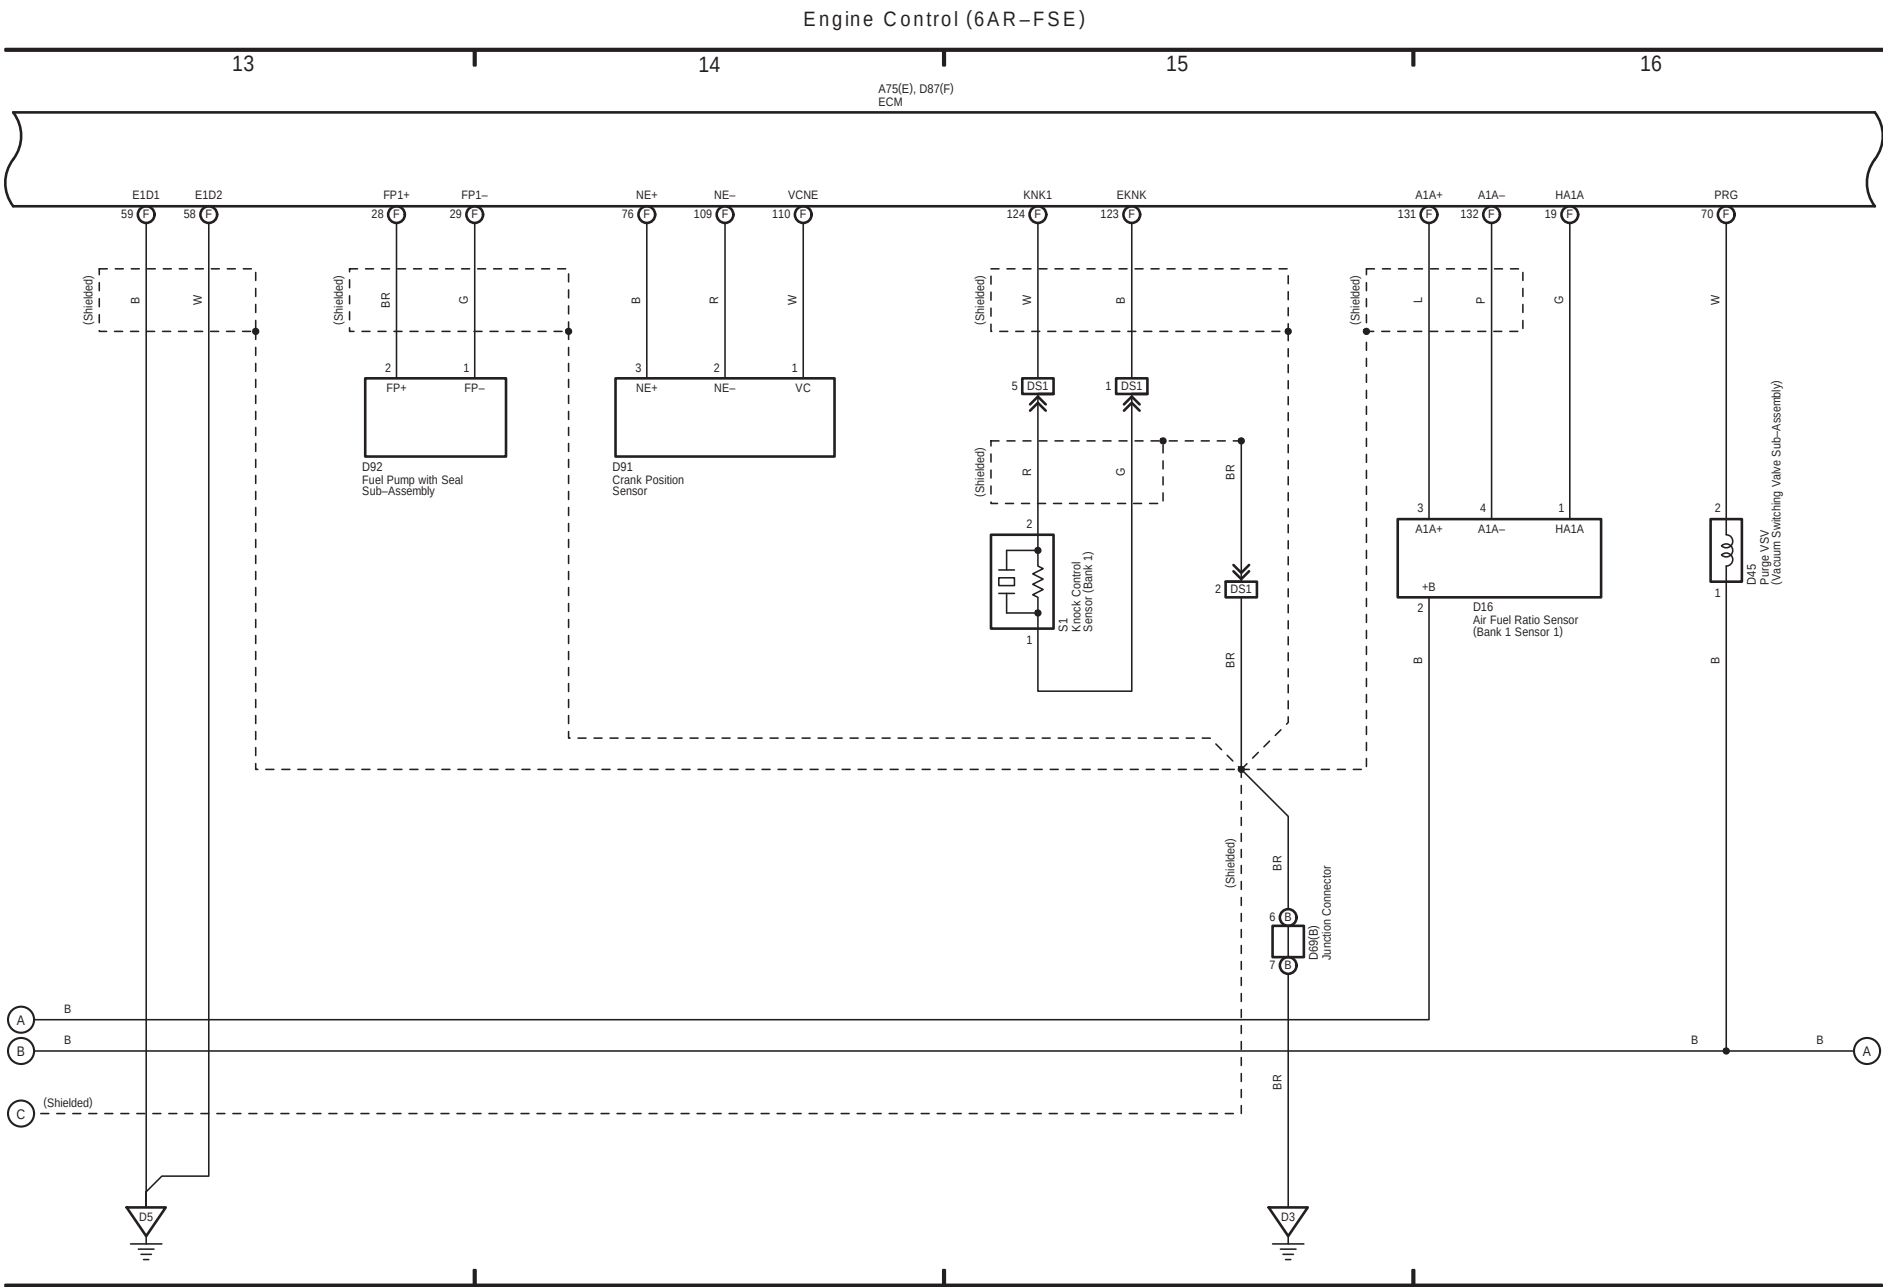



LEXUS ES200/ES250/ES350 (EM2822E)




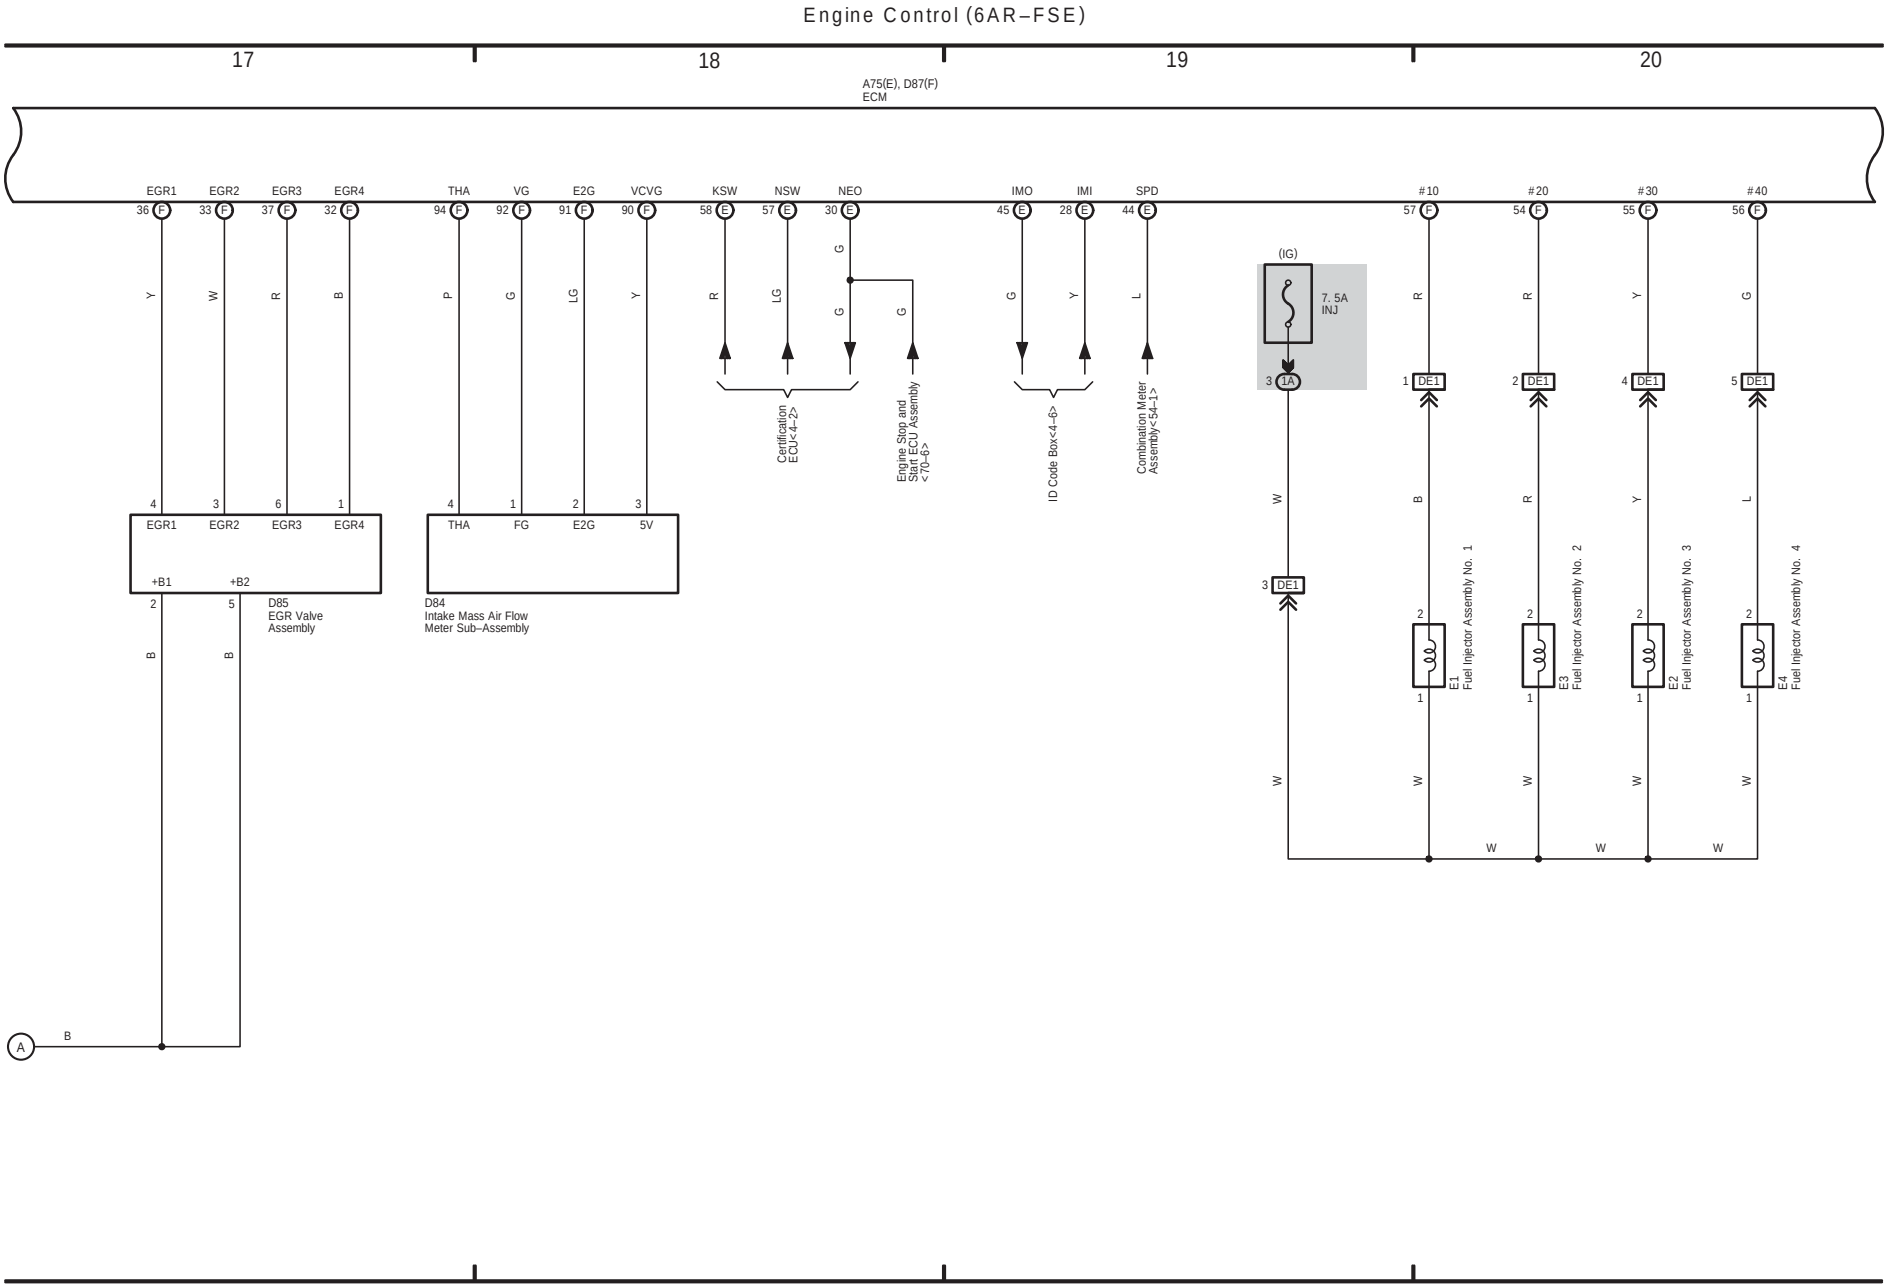


Engine Control (6AR-FSE)

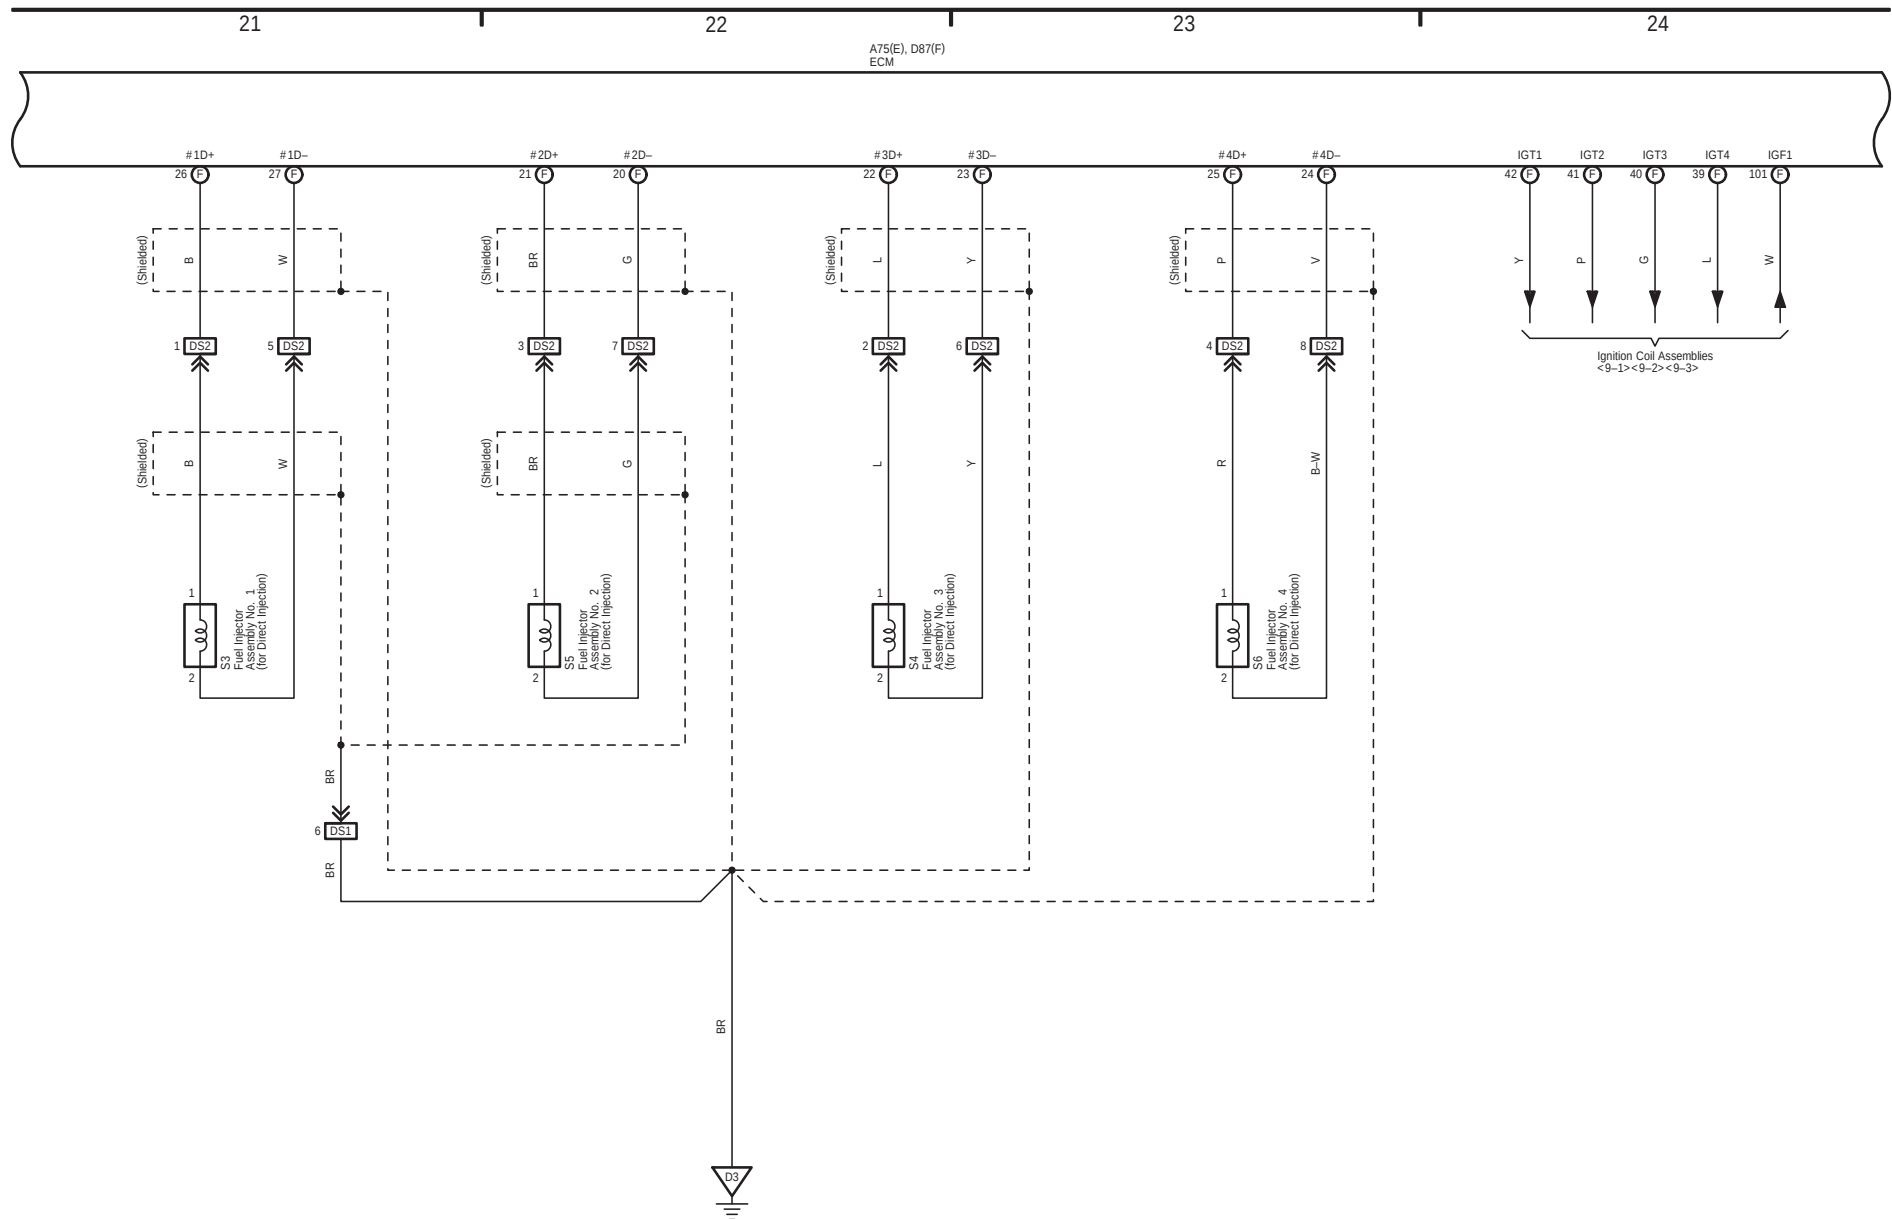

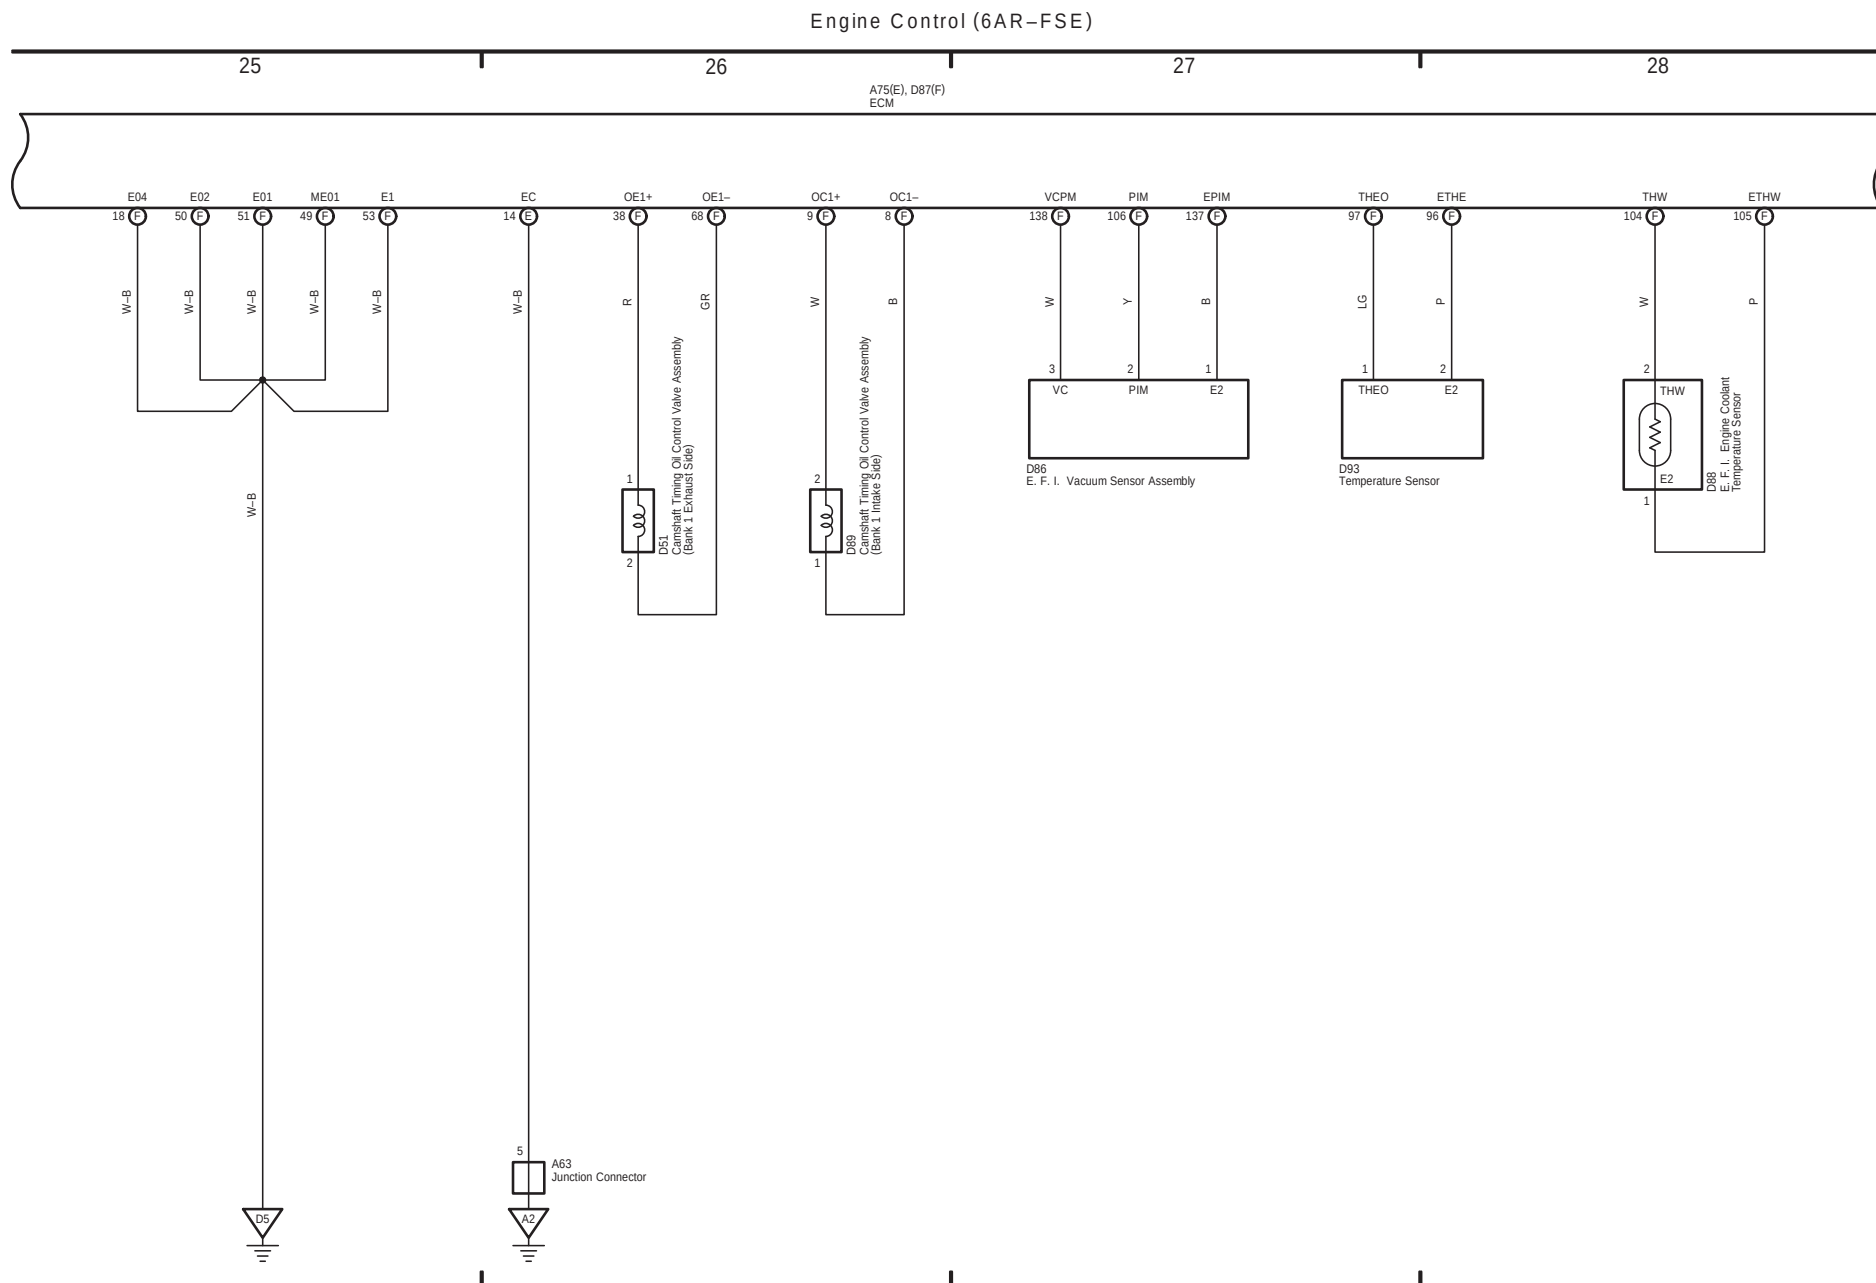

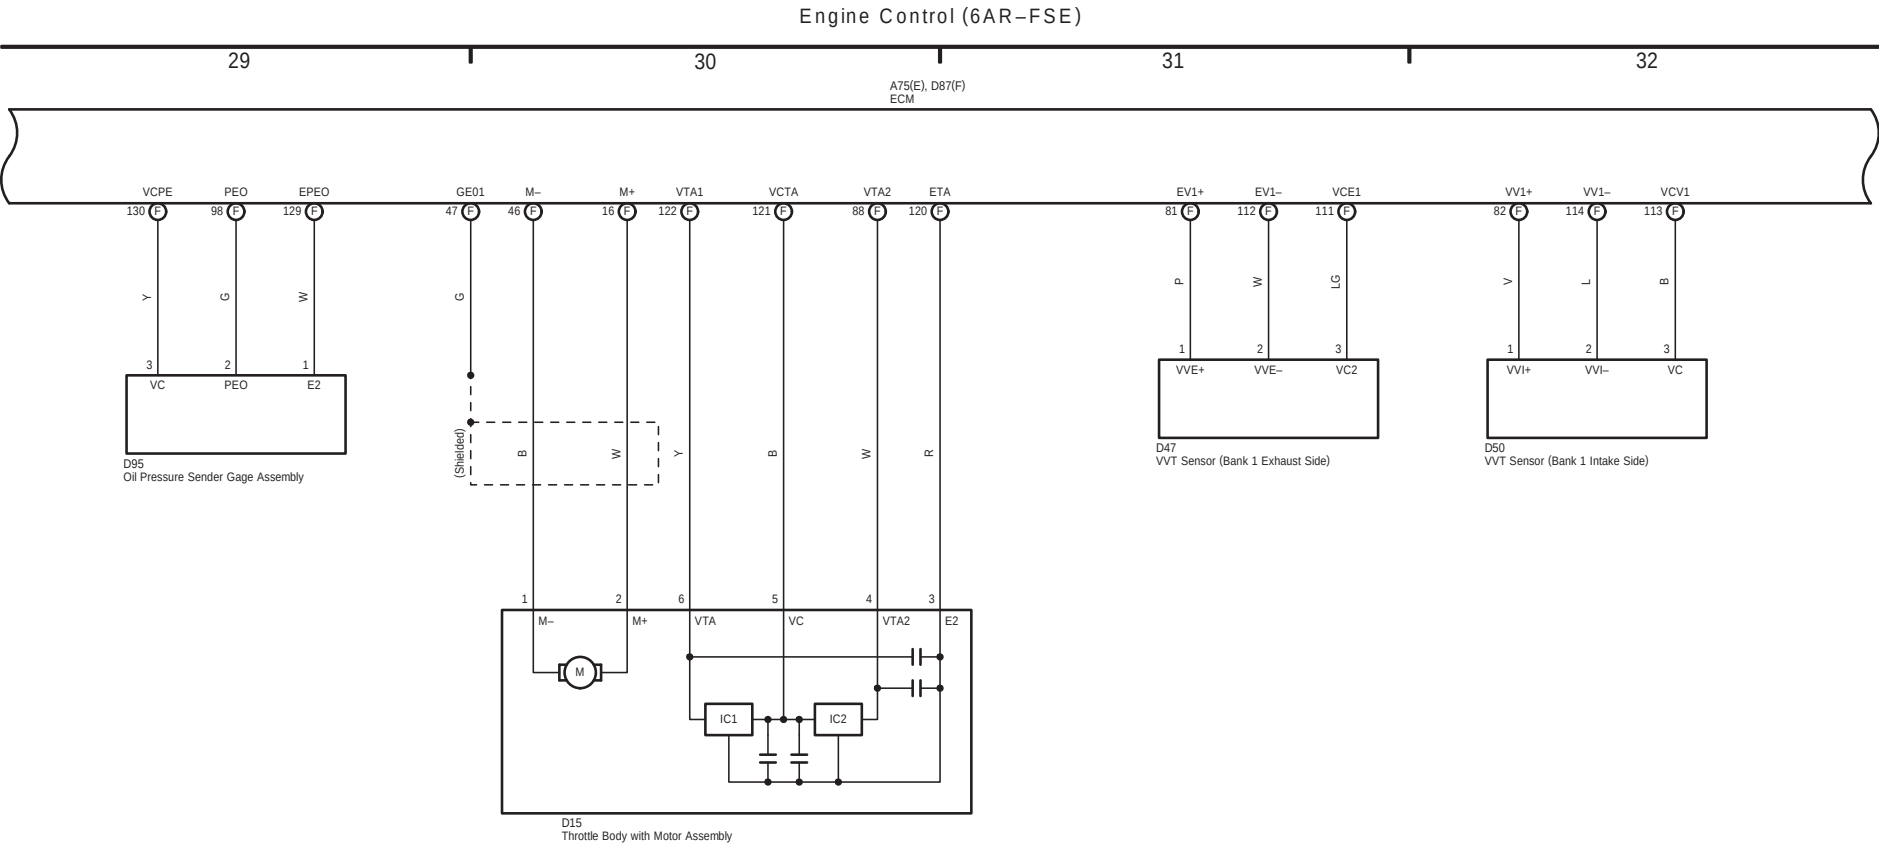


LEXUS ES200/ES250/ES350 (EM2822E)

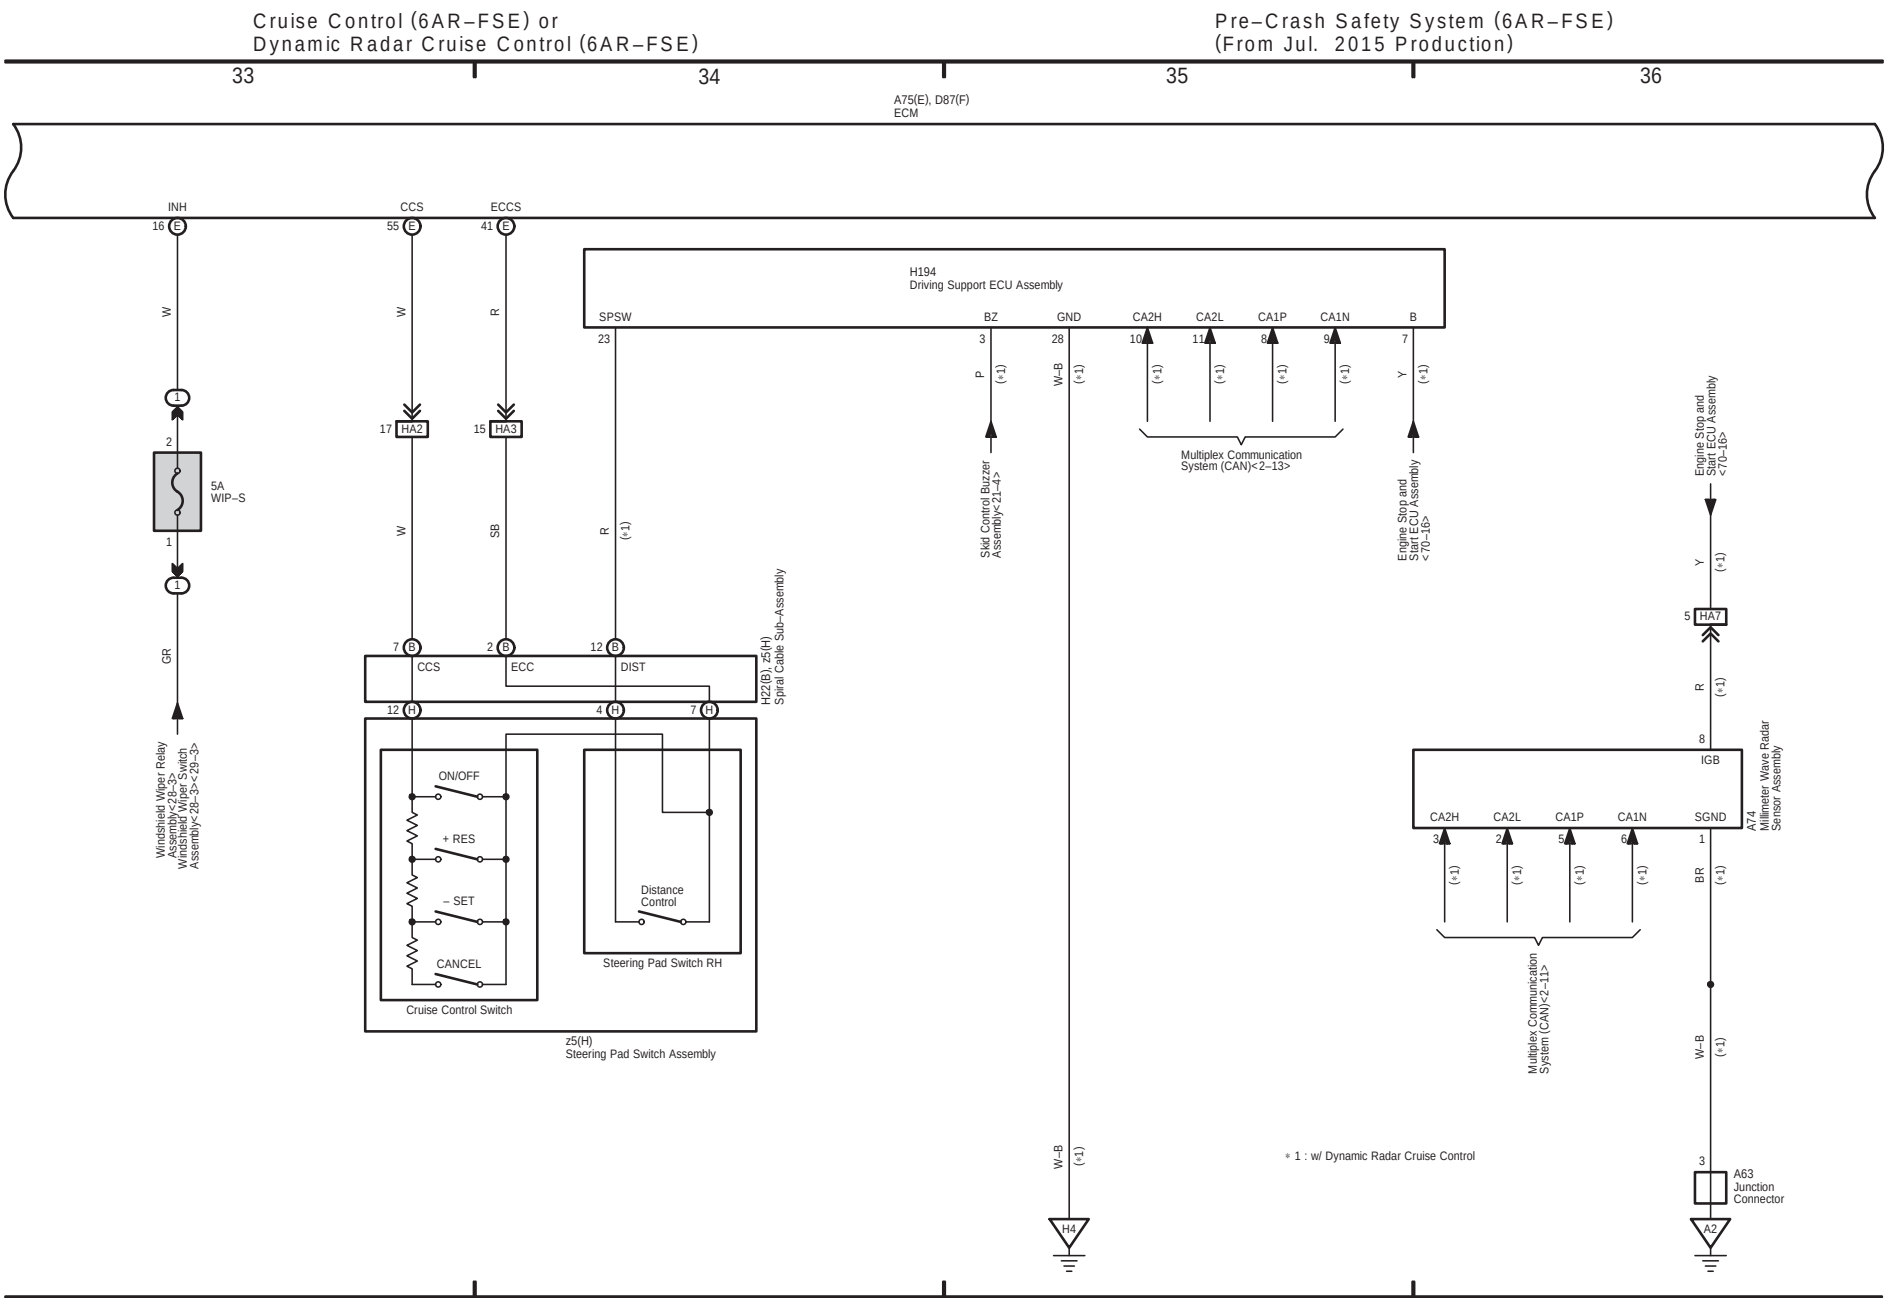


LEXUS ES200/ES250/ES350 (EM2822E)

ECT and A/T Indicator (6AR-FSE)

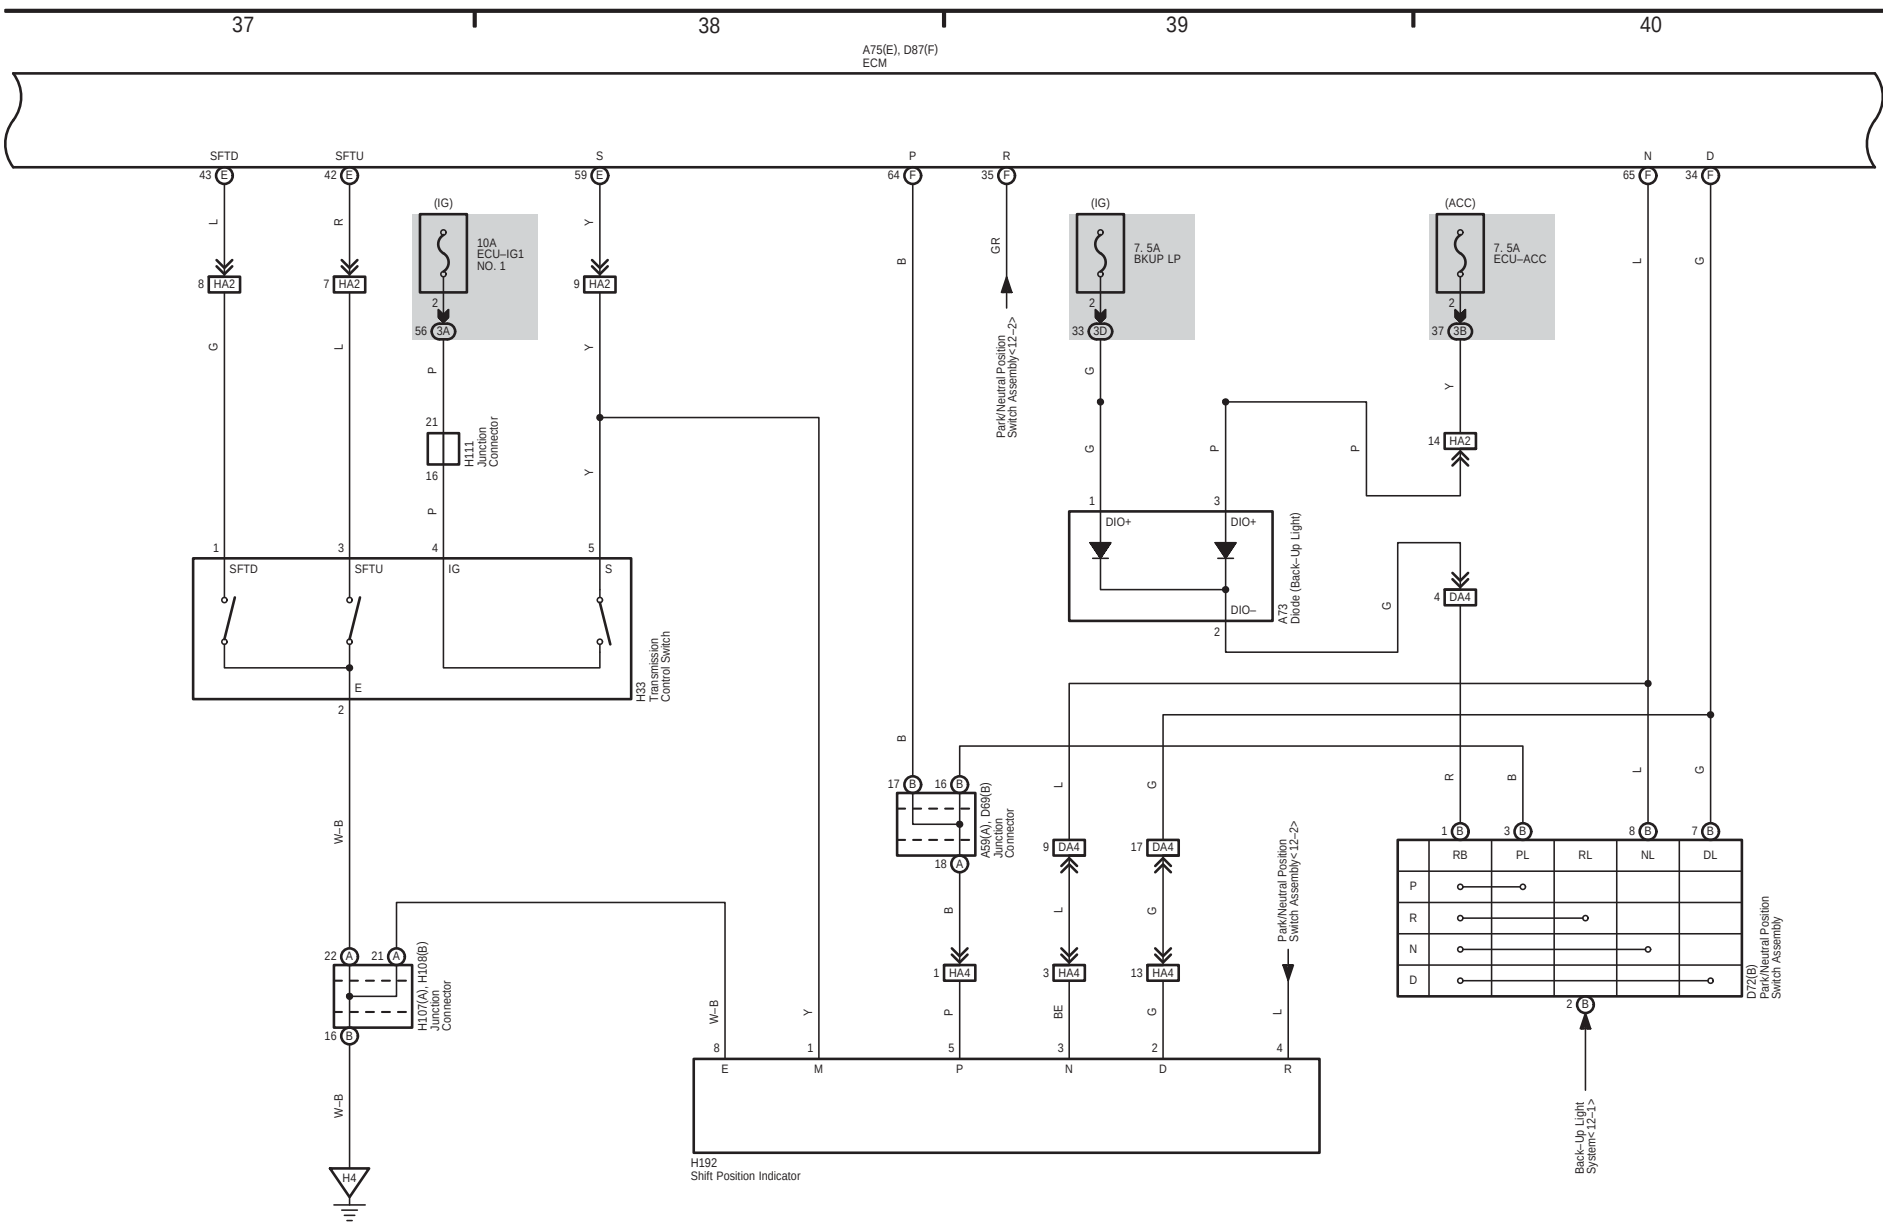

LEXUS ES200/ES250/ES350 (EM2822E)

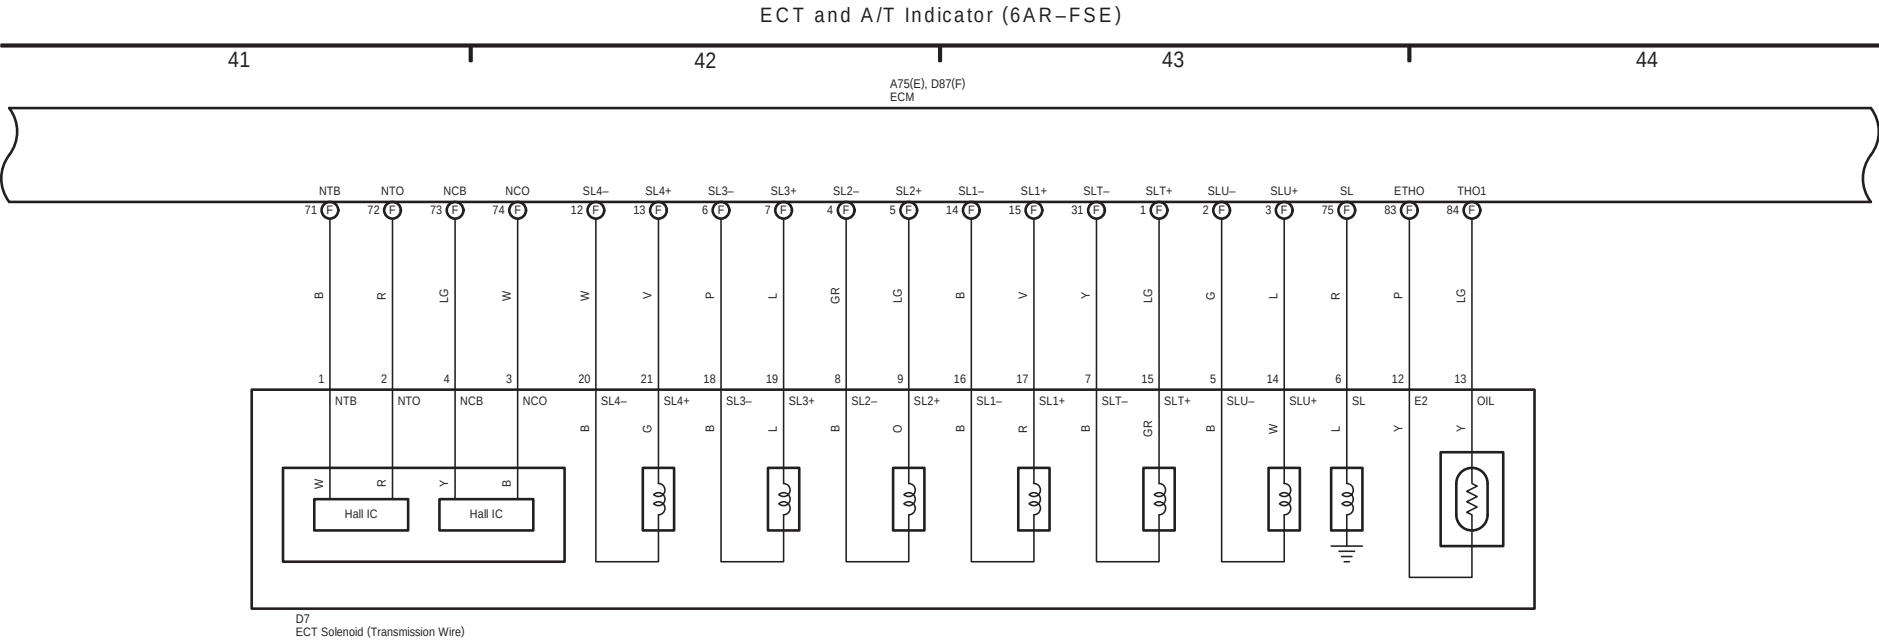

ECT and A/T Indicator (6AR-FSE)

