


Position of Parts in Engine Compartment <RHD 2AR-FE>

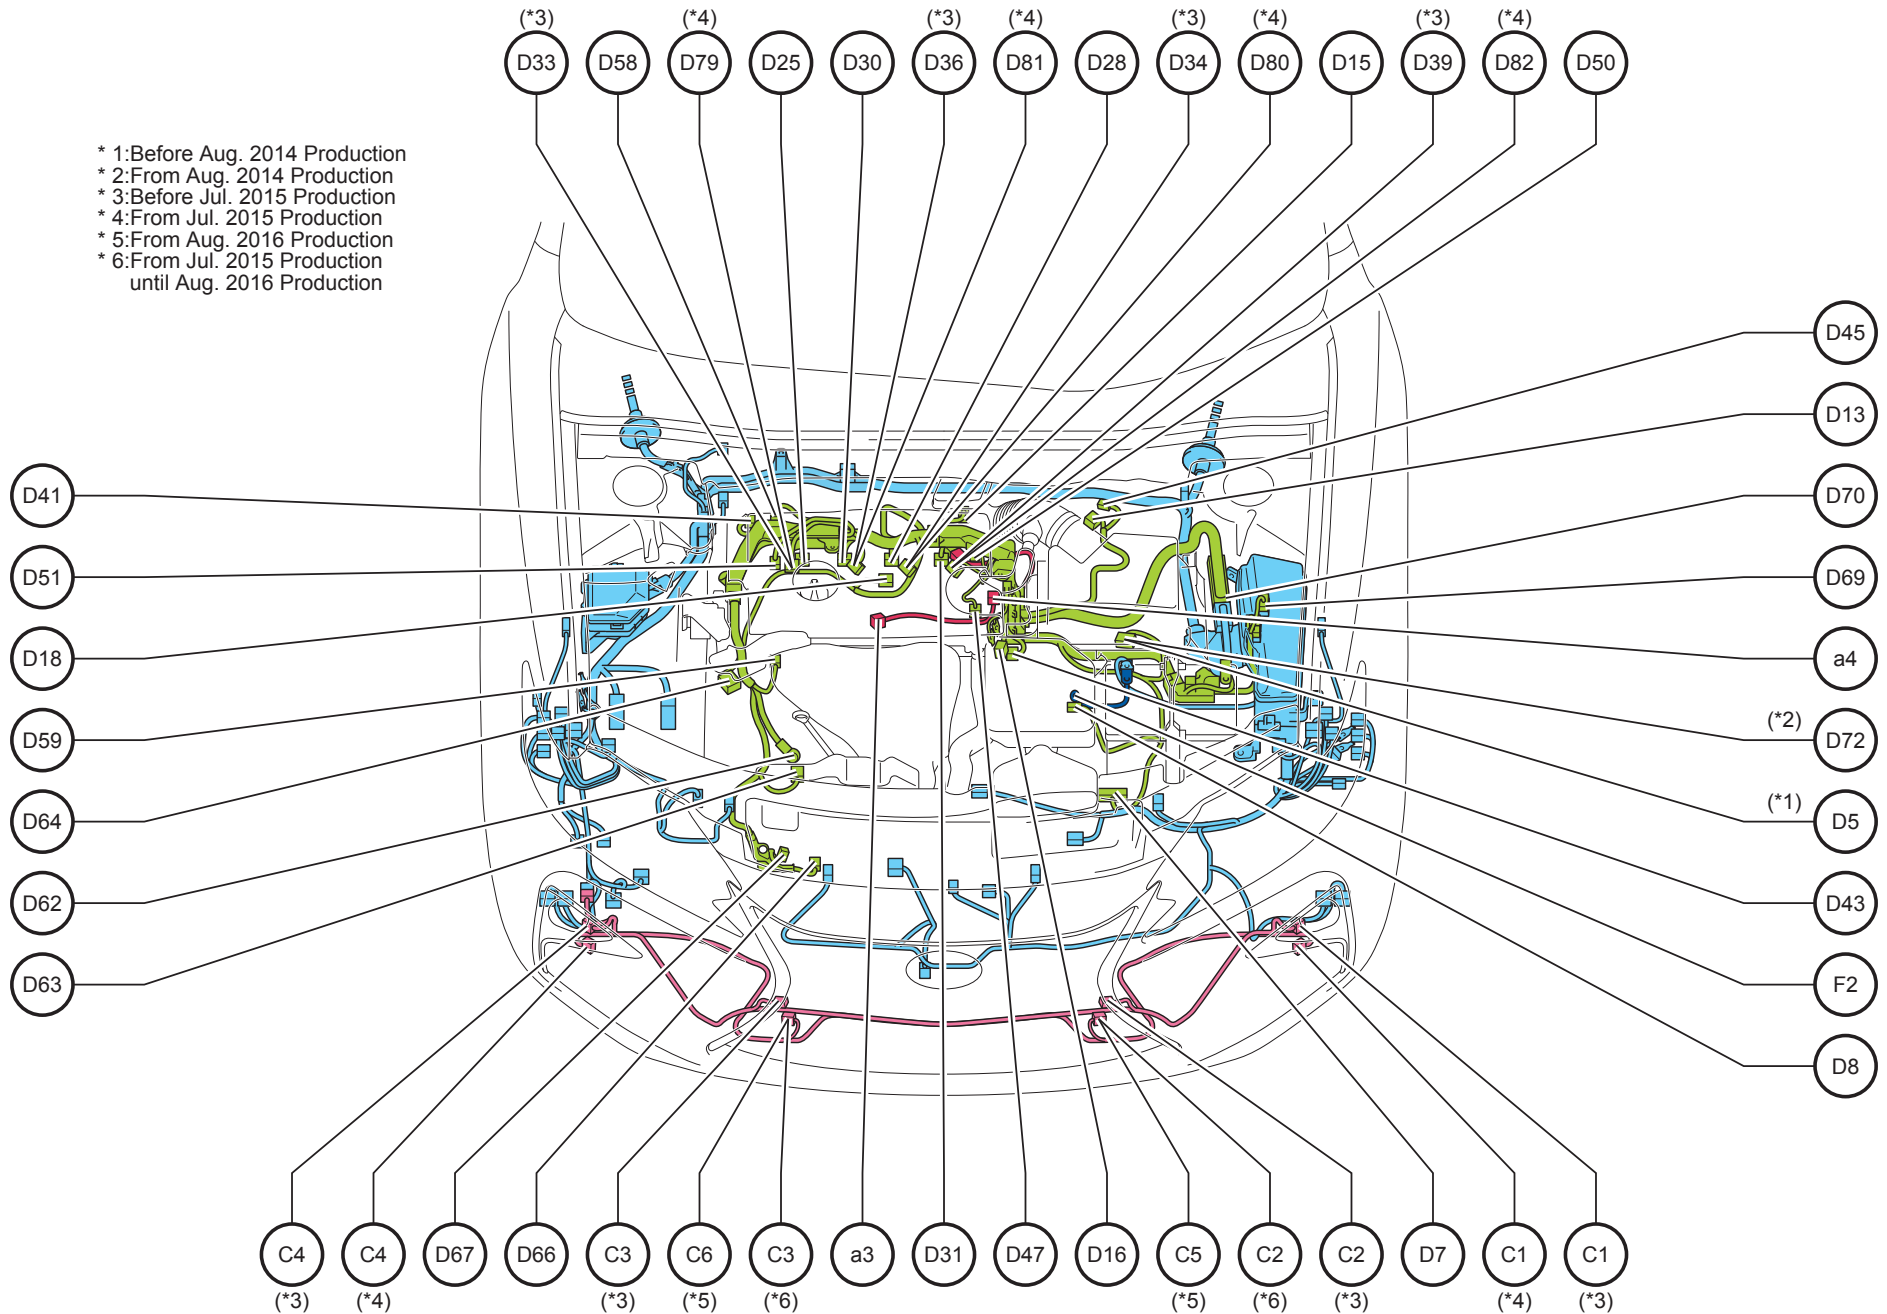

- C 1 Front No. 1 Ultrasonic Sensor LH
- C 2 Front No. 1 Ultrasonic Sensor Center LH
- C 3 Front No. 1 Ultrasonic Sensor Center RH
- C 4 Front No. 1 Ultrasonic Sensor RH
- C 5 Front No. 1 Ultrasonic Sensor Center LH
- C 6 Front No. 1 Ultrasonic Sensor Center RH

- D 5 Park/Neutral Position Switch Assembly
- D 7 ECT Solenoid (Transmission Wire)
- D 8 Starter Assembly
- D 13 Intake Mass Air Flow Meter Sub-Assembly
- D 15 Throttle Body with Motor Assembly
- D 16 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 18 Oxygen Sensor (Bank 1 Sensor 2)
- D 25 Fuel Injector Assembly No. 1
- D 28 Fuel Injector Assembly No. 3
- D 30 Fuel Injector Assembly No. 2
- D 31 Fuel Injector Assembly No. 4
- D 33 Ignition Coil Assembly No. 1
- D 34 Ignition Coil Assembly No. 3
- D 36 Ignition Coil Assembly No. 2
- D 39 Ignition Coil Assembly No. 4
- D 41 VSV (ACIS)
- D 43 E.F.I. Engine Coolant Temperature Sensor
- D 45 Purge VSV (Vacuum Switching Valve Sub-Assembly)
- D 47 VVT Sensor (Bank 1 Exhaust Side)
- D 50 VVT Sensor (Bank 1 Intake Side)
- D 51 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- D 58 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- D 59 Engine Oil Pressure Switch Assembly
- D 62 Generator Assembly
- D 63 Generator Assembly
- D 64 Crank Position Sensor
- D 66 Compressor with Pulley Assembly
- D 67 Compressor with Pulley Assembly
- D 69 Junction Connector
- D 70 ECM
- D 72 Park/Neutral Position Switch Assembly
- D 79 Ignition Coil Assembly No. 1
- D 80 Ignition Coil Assembly No. 3
- D 81 Ignition Coil Assembly No. 2
- D 82 Ignition Coil Assembly No. 4

- F 2 Starter Assembly

- a 3 Knock Control Sensor (Bank 1)
- a 4 Intake Air Control Valve Actuator

Position of Parts in Engine Compartment <RHD 2AR-FE>

