





















Position of Parts in Engine Compartment <LHD 2GR-FE>

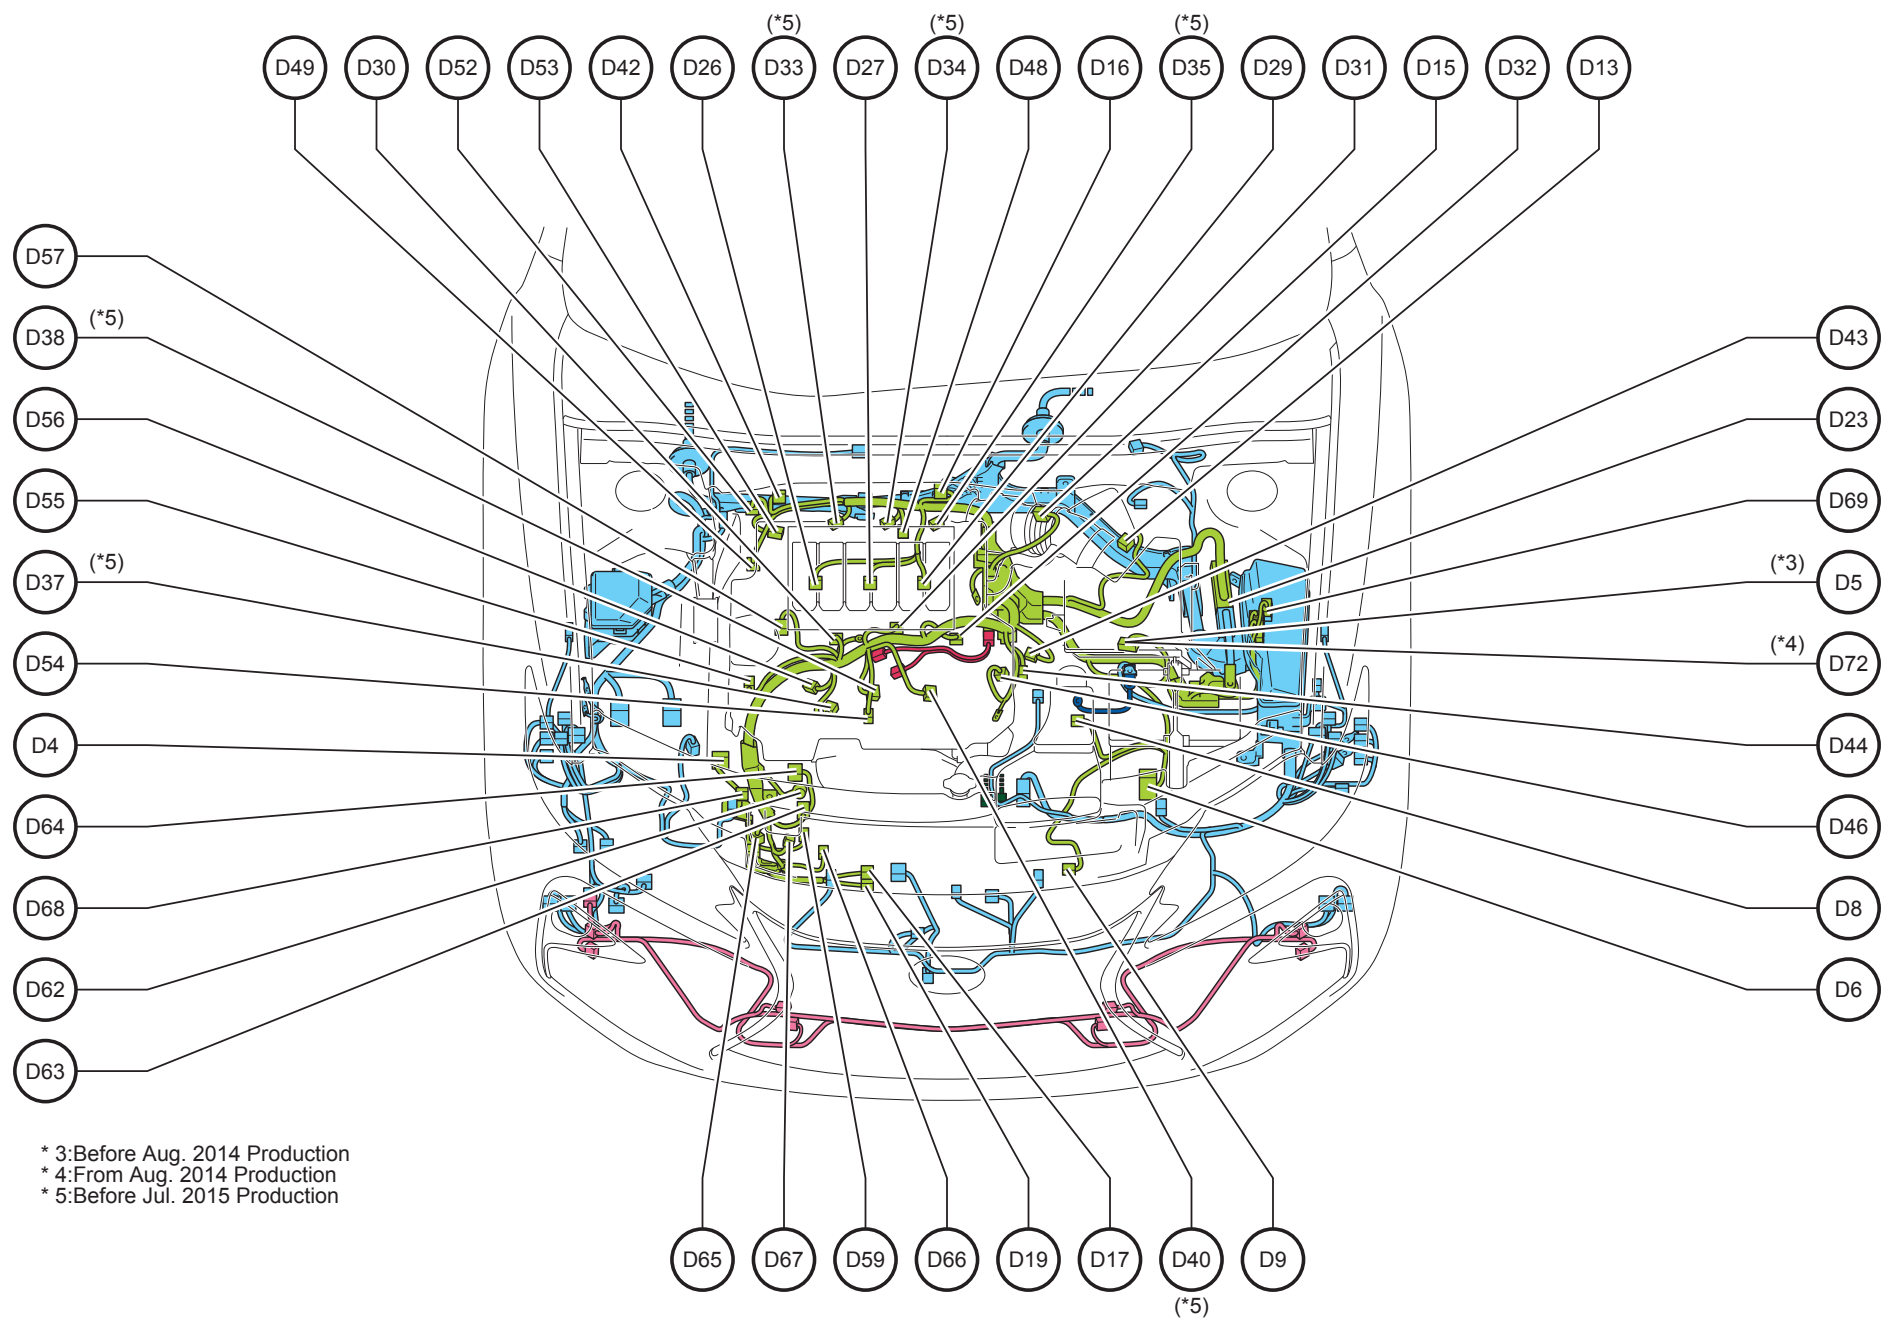

* 3:Before Aug. 2014 Production
 * 4:From Aug. 2014 Production
 * 5:Before Jul. 2015 Production

- D 4 Engine Oil Level Sensor
- D 5 Park/Neutral Position Switch Assembly
- D 6 Transmission Control ECU Assembly
- D 8 Starter Assembly
- D 9 VSV (ACM)
- D 13 Intake Mass Air Flow Meter Sub-Assembly
- D 15 Throttle Body with Motor Assembly
- D 16 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 17 Oxygen Sensor (Bank 2 Sensor 2)
- D 19 Oxygen Sensor (Bank 1 Sensor 2)
- D 23 ECM
- D 26 Fuel Injector Assembly No. 1
- D 27 Fuel Injector Assembly No. 3
- D 29 Fuel Injector Assembly No. 5
- D 30 Fuel Injector Assembly No. 2
- D 31 Fuel Injector Assembly No. 4
- D 32 Fuel Injector Assembly No. 6
- D 33 Ignition Coil Assembly No. 1
- D 34 Ignition Coil Assembly No. 3
- D 35 Ignition Coil Assembly No. 5
- D 37 Ignition Coil Assembly No. 2
- D 38 Ignition Coil Assembly No. 4
- D 40 Ignition Coil Assembly No. 6
- D 42 VSV (ACIS)
- D 43 E.F.I. Engine Coolant Temperature Sensor
- D 44 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- D 46 Purge VSV
- D 48 VVT Sensor (Bank 1 Exhaust Side)
- D 49 VVT Sensor (Bank 1 Intake Side)
- D 52 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- D 53 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- D 54 VVT Sensor (Bank 2 Exhaust Side)
- D 55 VVT Sensor (Bank 2 Intake Side)
- D 56 Camshaft Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
- D 57 Camshaft Timing Oil Control Valve Assembly (Bank 2 Intake Side)
- D 59 Engine Oil Pressure Switch Assembly
- D 62 Generator Assembly
- D 63 Generator Assembly
- D 64 Crank Position Sensor
- D 65 Compressor with Pulley Assembly
- D 66 Compressor with Pulley Assembly
- D 67 Compressor with Pulley Assembly
- D 68 Engine Oil Pressure Switch Assembly
- D 69 Junction Connector
- D 72 Park/Neutral Position Switch Assembly

 Position of Parts in Engine Compartment <LHD 2GR-FE>

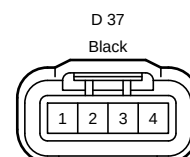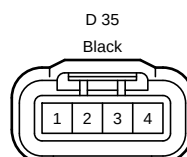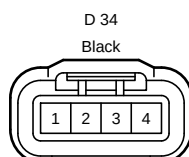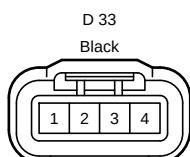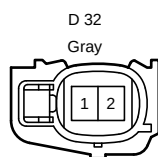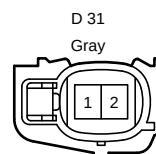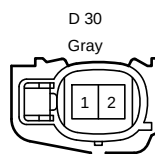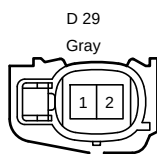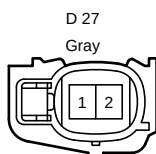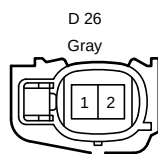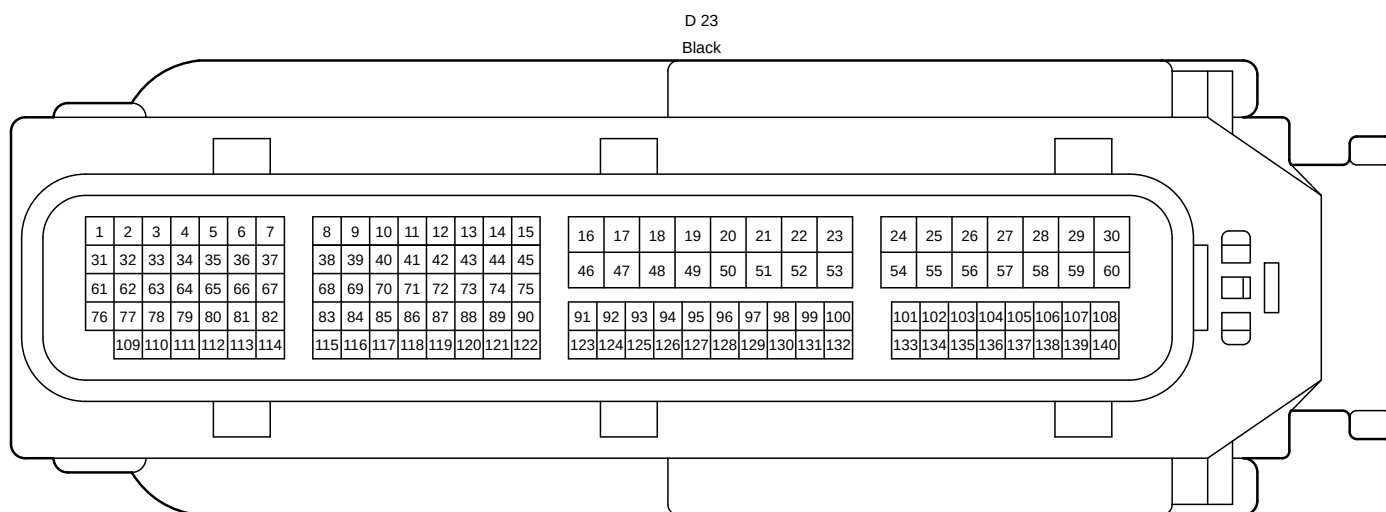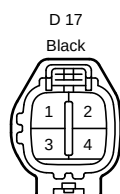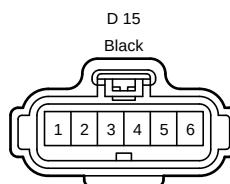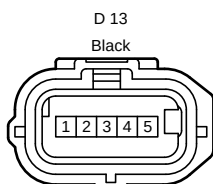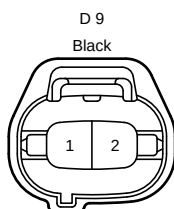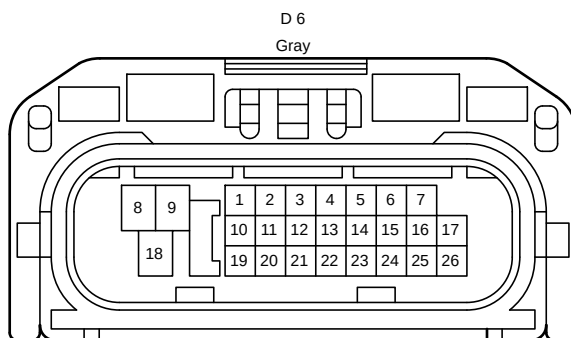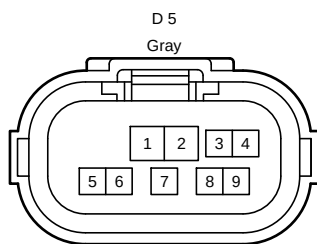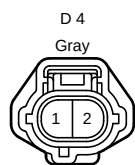

Position of Parts in Engine Compartment <LHD 2GR-FE>

