


Position of Parts in Engine Compartment <LHD 6AR-FSE>

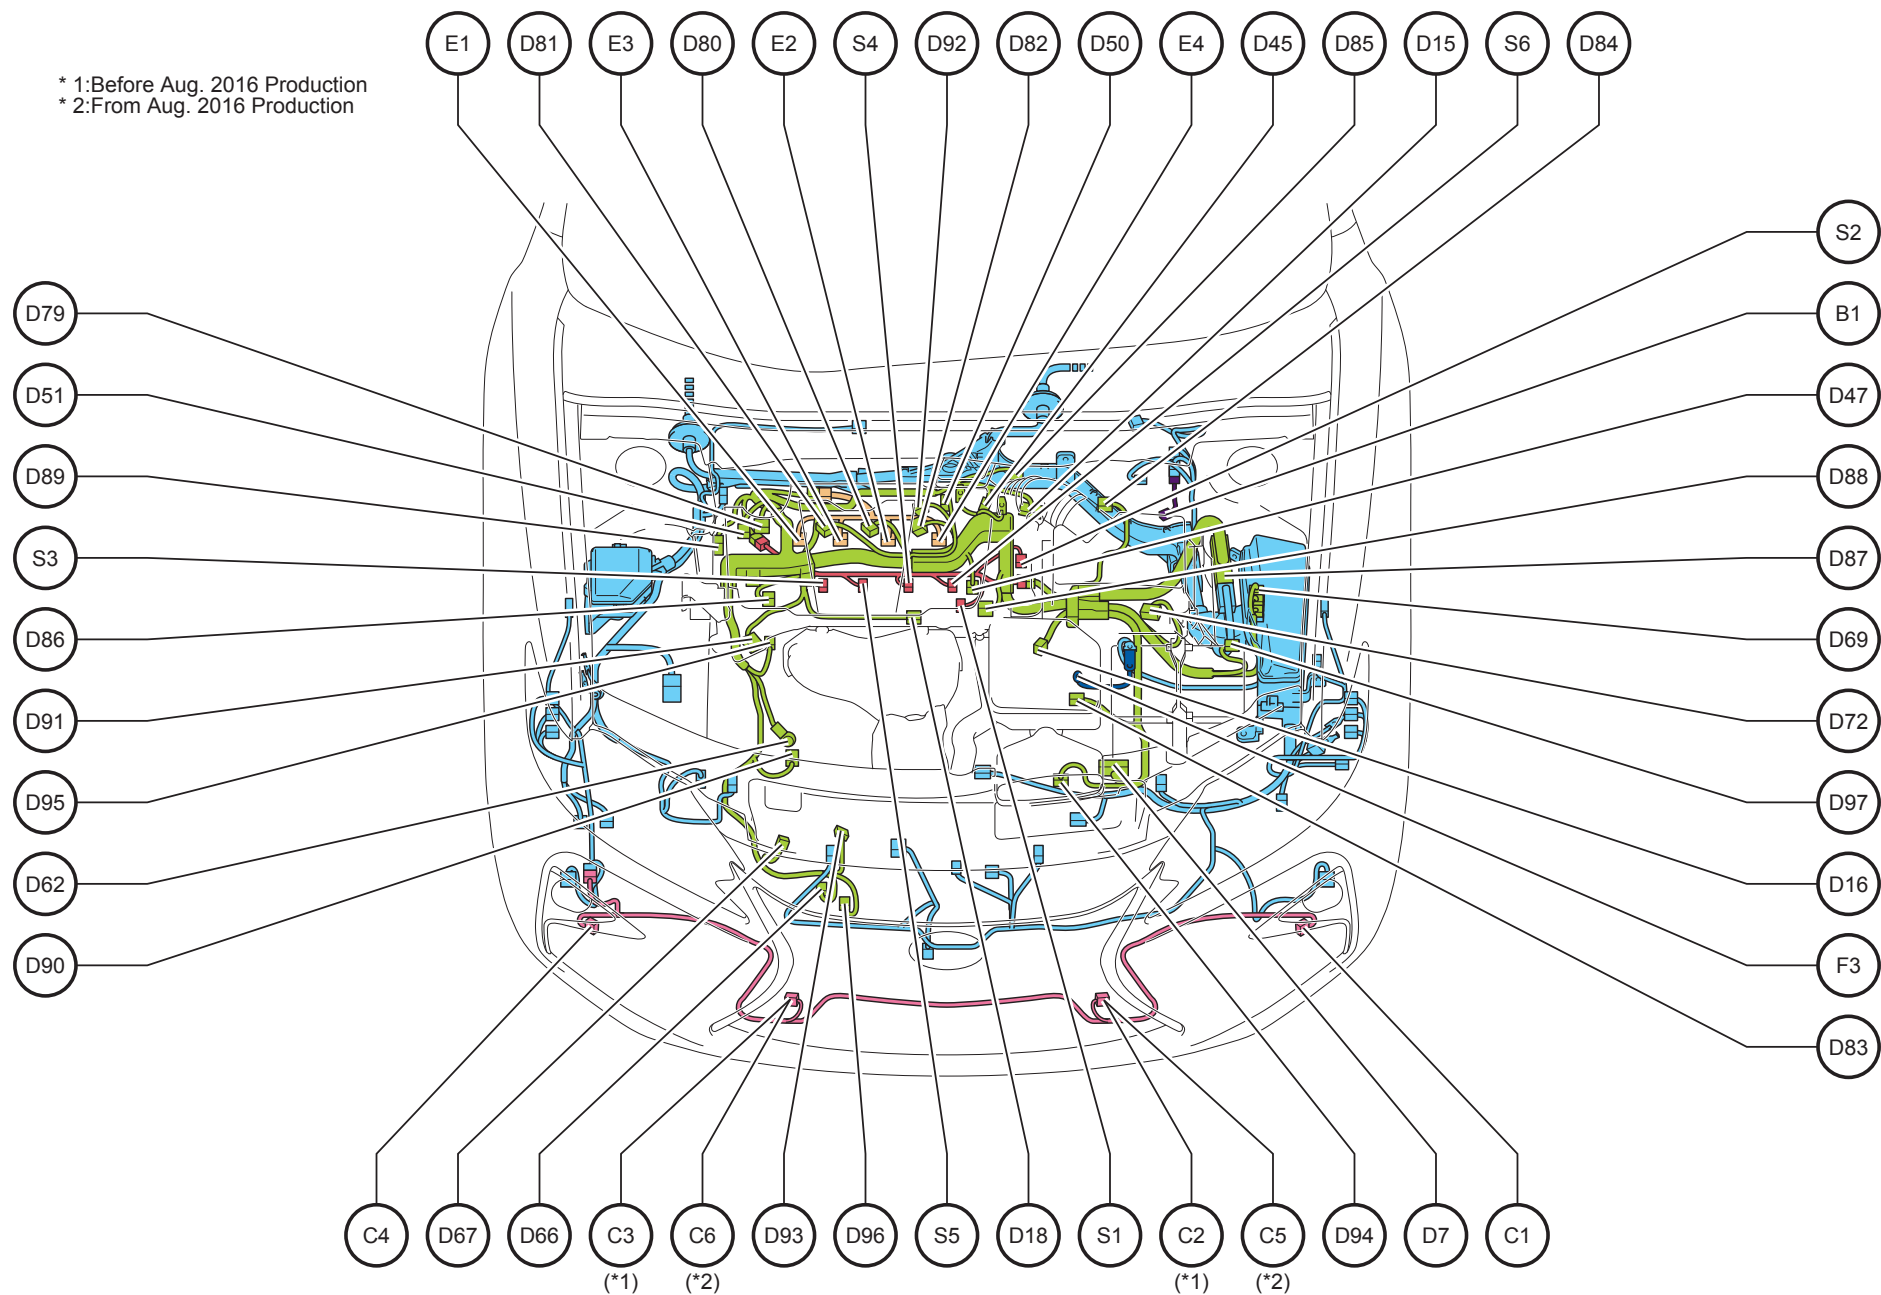

- B 1 Vacuum Warning Switch Assembly

- C 1 Front No. 1 Ultrasonic Sensor LH
- C 2 Front No. 1 Ultrasonic Sensor Center LH
- C 3 Front No. 1 Ultrasonic Sensor Center RH
- C 4 Front No. 1 Ultrasonic Sensor RH
- C 5 Front No. 1 Ultrasonic Sensor Center LH
- C 6 Front No. 1 Ultrasonic Sensor Center RH


- D 7 ECT Solenoid (Transmission Wire)
- D 15 Throttle Body with Motor Assembly
- D 16 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 18 Oxygen Sensor (Bank 1 Sensor 2)
- D 45 Purge VSV (Vacuum Switching Valve Sub-Assembly)
- D 47 VVT Sensor (Bank 1 Exhaust Side)
- D 50 VVT Sensor (Bank 1 Intake Side)
- D 51 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- D 62 Generator Assembly
- D 66 Compressor with Pulley Assembly
- D 67 Compressor with Pulley Assembly
- D 69 Junction Connector
- D 72 Park/Neutral Position Switch Assembly
- D 79 Ignition Coil Assembly No. 1
- D 80 Ignition Coil Assembly No. 3
- D 81 Ignition Coil Assembly No. 2
- D 82 Ignition Coil Assembly No. 4
- D 83 Starter Assembly
- D 84 Intake Mass Air Flow Meter Sub-Assembly
- D 85 EGR Valve Assembly
- D 86 E.F.I. Vacuum Sensor Assembly
- D 87 ECM
- D 88 E.F.I. Engine Coolant Temperature Sensor
- D 89 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- D 90 Generator Assembly
- D 91 Crank Position Sensor
- D 92 Fuel Pump with Seal Sub-Assembly
- D 93 Temperature Sensor
- D 94 Oil Pump with Motor Assembly (Automatic Transaxle Assembly)
- D 95 Oil Pressure Sender Gage Assembly
- D 96 Engine Oil Level Sensor
- D 97 Battery State Sensor Assembly

- E 1 Fuel Injector Assembly No. 1
- E 2 Fuel Injector Assembly No. 3
- E 3 Fuel Injector Assembly No. 2
- E 4 Fuel Injector Assembly No. 4

- F 3 Starter Assembly

- S 1 Knock Control Sensor
- S 2 Fuel Pressure Sensor (Fuel Delivery Pipe Sub-Assembly)
- S 3 Fuel Injector Assembly No. 1 (for Direct Injection)
- S 4 Fuel Injector Assembly No. 3 (for Direct Injection)
- S 5 Fuel Injector Assembly No. 2 (for Direct Injection)
- S 6 Fuel Injector Assembly No. 4 (for Direct Injection)

Position of Parts in Engine Compartment <LHD 6AR-FSE>

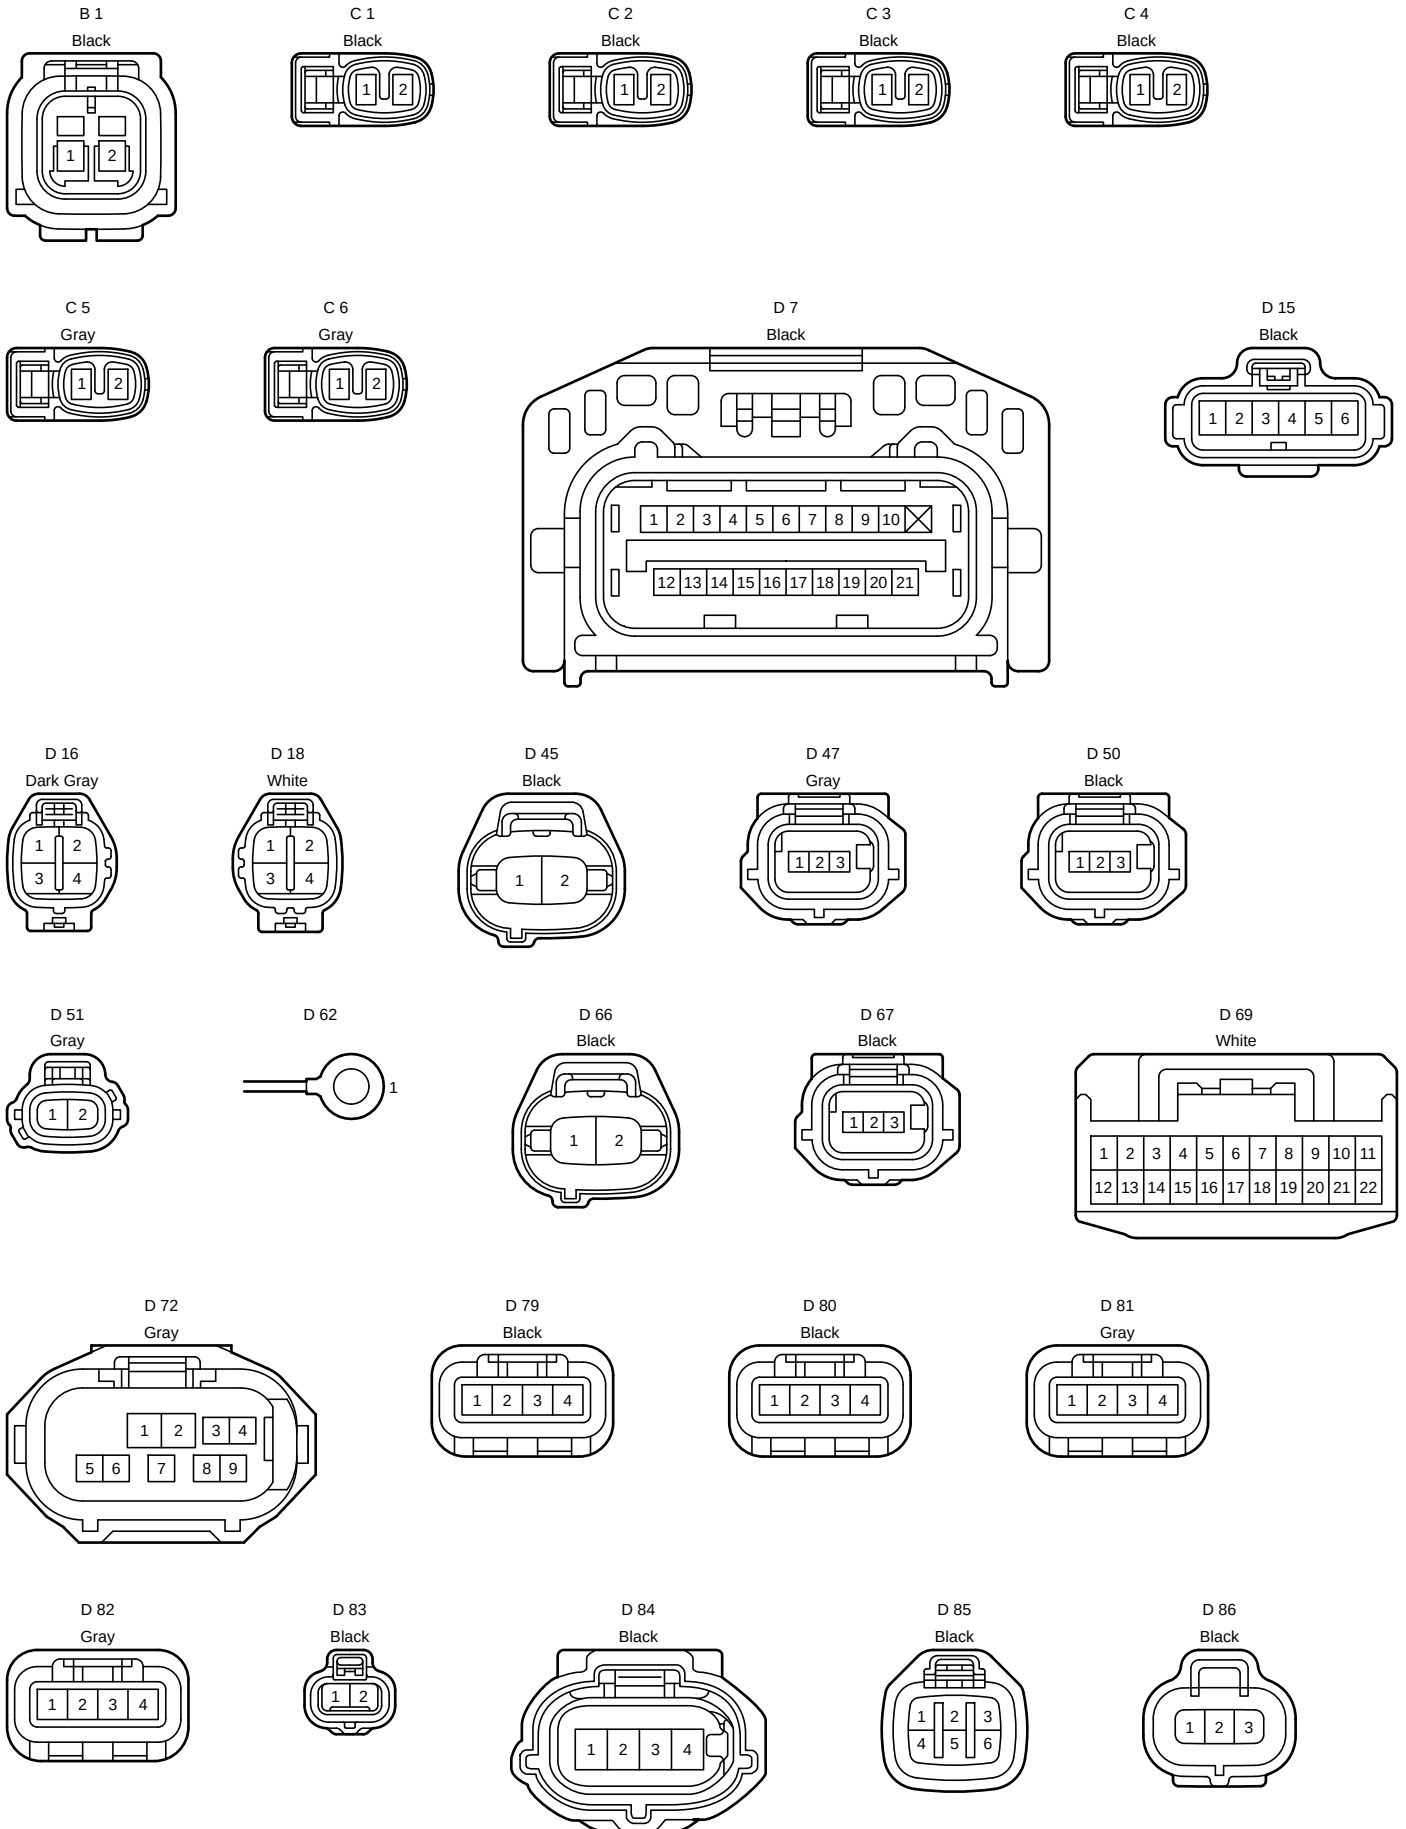

Position of Parts in Engine Compartment <LHD 6AR-FSE>

