


Position of Parts in Body <RHD>

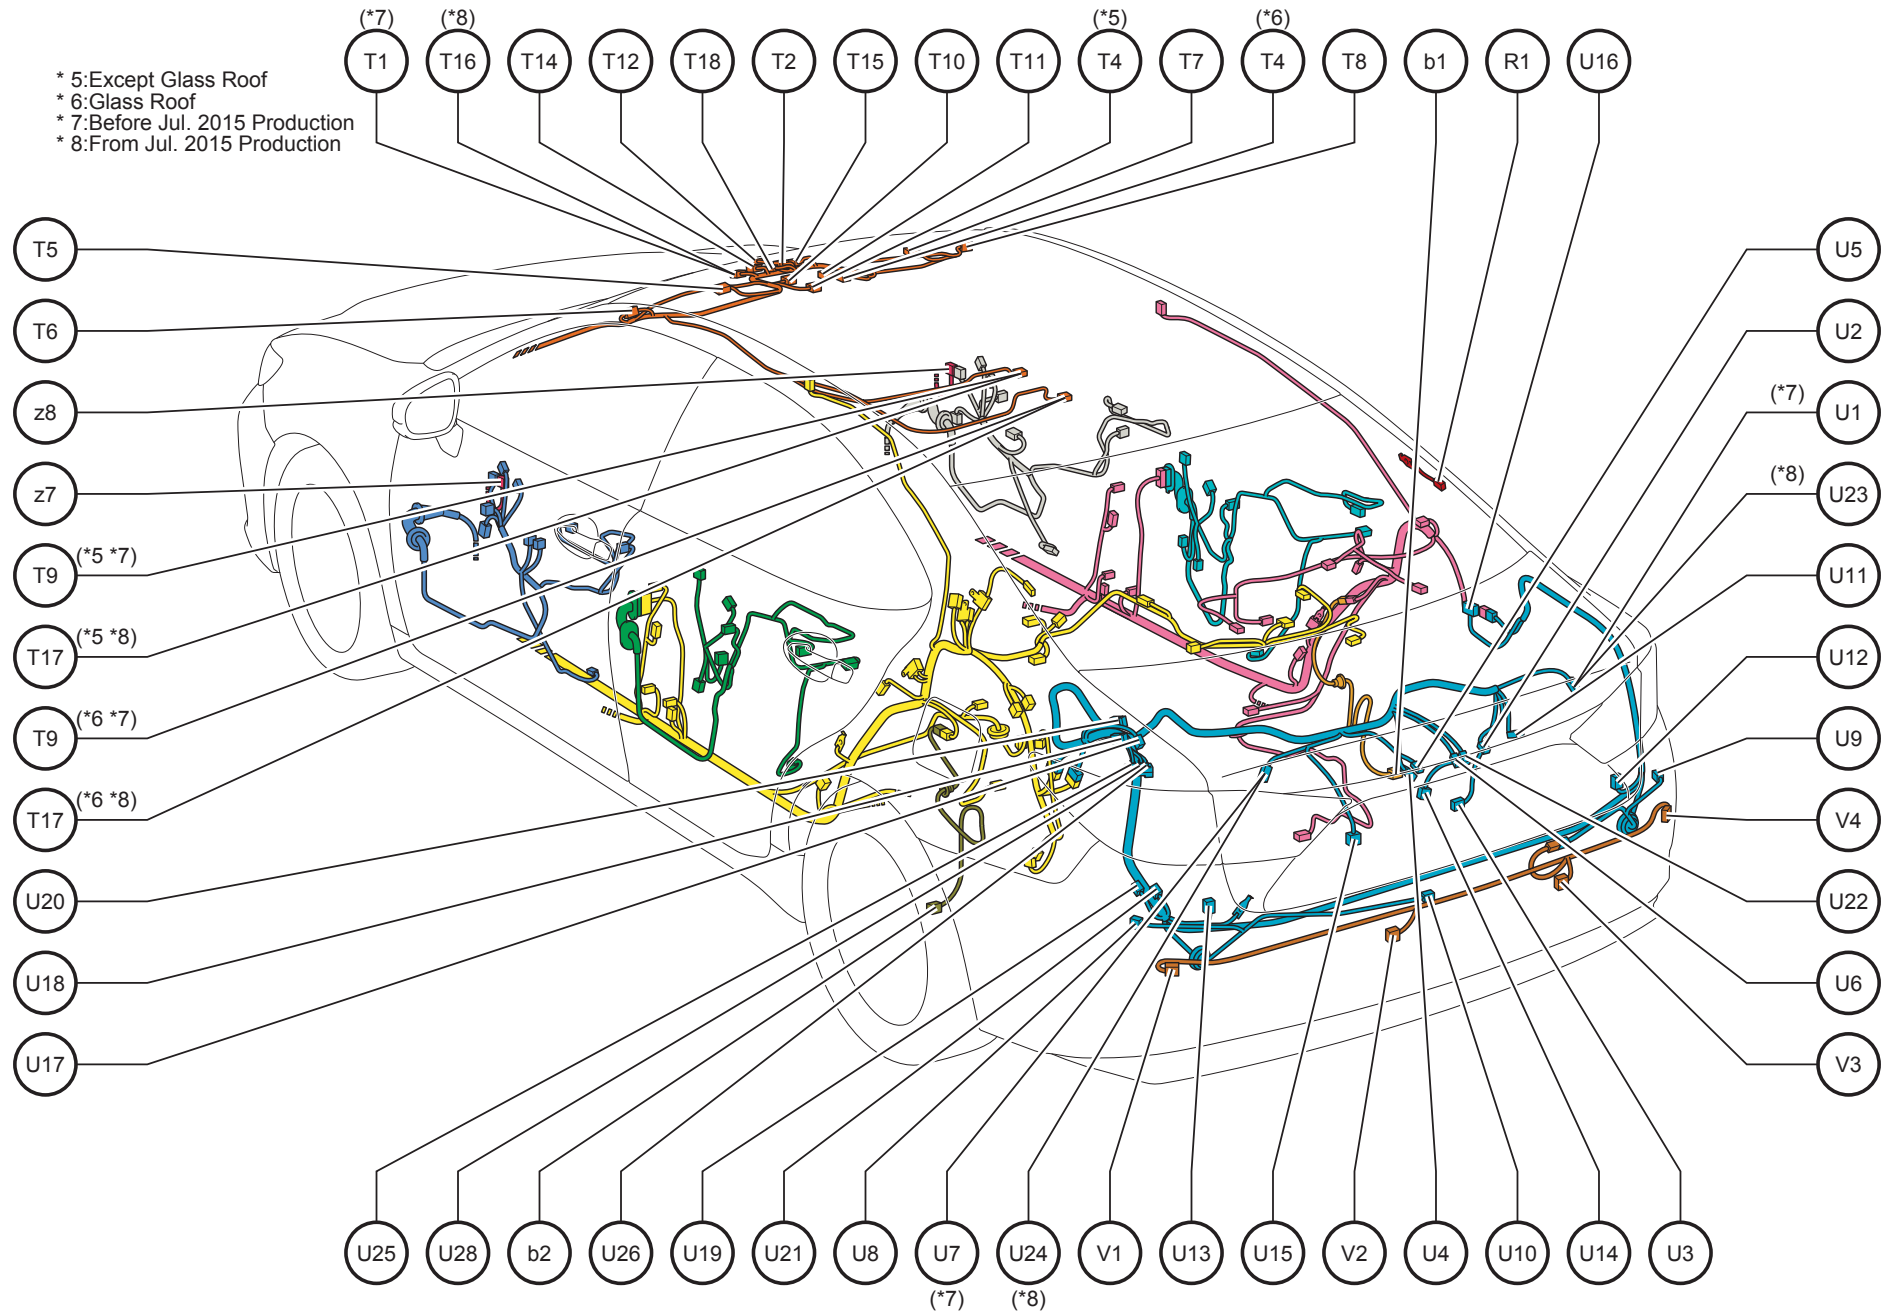

- R 1 Rear Window Defogger (Back Window Glass)

- T 1 Rain Sensor
- T 2 Inner Rear View Mirror Assembly
- T 4 Sliding Roof Control ECU (Sliding Roof Drive Gear Sub-Assembly)
- T 5 Vanity Light Assembly LH
- T 6 Visor Assembly LH
- T 7 Vanity Light Assembly RH
- T 8 Visor Assembly RH
- T 9 Spot Light Assembly
- T 10 Roof Console Box Assembly
- T 11 Roof Console Box Assembly
- T 12 Lane Departure Warning Camera
- T 14 Rain Sensor
- T 15 Inner Rear View Mirror Assembly
- T 16 Rain Sensor
- T 17 Spot Light Assembly
- T 18 Forward Recognition with Heater Hood Sub-Assembly


 


 

 















- U 1 Rear Light Assembly RH
- U 2 License Plate Light Assembly RH
- U 3 Luggage Compartment Door Lock Assembly
- U 4 Door Unlock Switch Sub-Assembly
- U 5 License Plate Light Assembly LH
- U 6 Rear Television Camera Assembly
- U 7 Rear Light Assembly LH
- U 8 Blind Spot Monitor Sensor LH
- U 9 Blind Spot Monitor Sensor RH
- U 10 Rear Electrical Key Antenna
- U 11 Luggage Electrical Key Switch
- U 12 Rear Combination Light Assembly RH
- U 13 Rear Combination Light Assembly LH
- U 14 Luggage Door Closer Assembly
- U 15 Door Control Switch
- U 16 Luggage Closer Motor Assembly
- U 17 Diode (Door Control Switch)
- U 18 Junction Connector
- U 19 Junction Terminal
- U 20 Junction Connector
- U 21 Junction Connector
- U 22 Rear Television Camera Assembly
- U 23 Rear Light Assembly RH
- U 24 Rear Light Assembly LH
- U 25 Junction Connector
- U 26 Junction Connector
- U 28 Junction Connector

- V 1 Rear No. 1 Ultrasonic Sensor LH
- V 2 Rear No. 1 Ultrasonic Sensor Center LH
- V 3 Rear No. 1 Ultrasonic Sensor Center RH
- V 4 Rear No. 1 Ultrasonic Sensor RH

- b 1 Rear Speed Sensor RH
- b 2 Rear Speed Sensor LH

- z 7 Outer Mirror Control ECU Assembly LH , Outer Rear View Mirror Assembly LH
- z 8 Outer Mirror Control ECU Assembly RH , Outer Rear View Mirror Assembly RH

Position of Parts in Body <RHD>

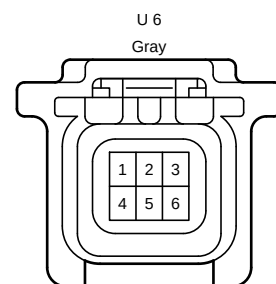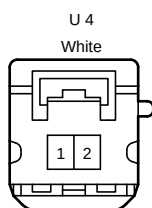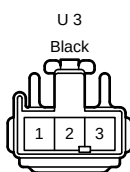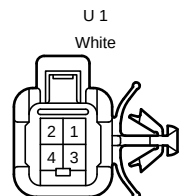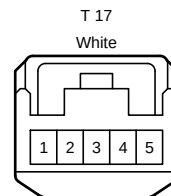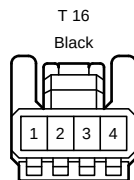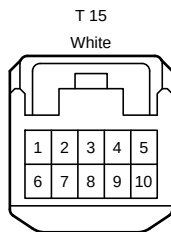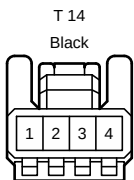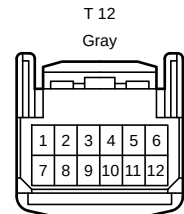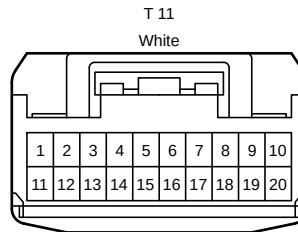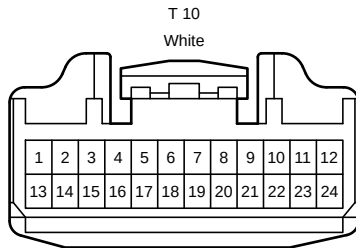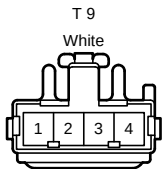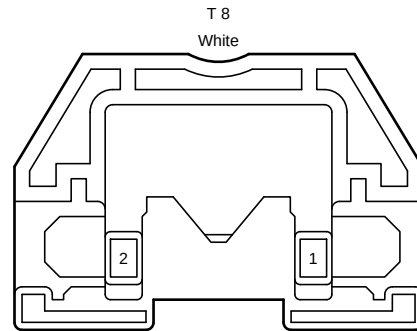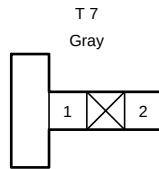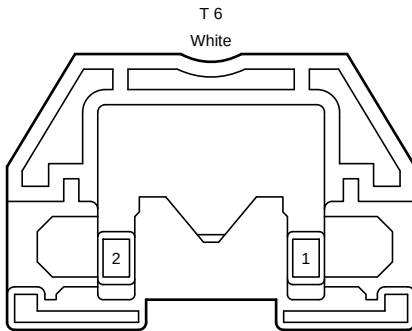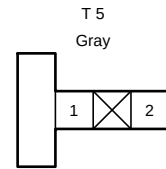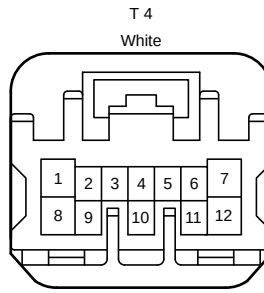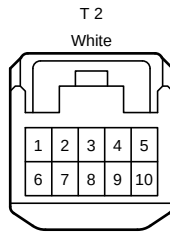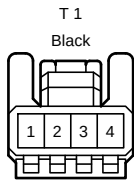

Position of Parts in Body <RHD>

