


Position of Parts in Seat <LHD Front Seat>

- * 1:w/ Seat Position Memory
- * 2:w/o Seat Position Memory
- * 3:w/ Climate Control Seat
- * 4:w/o Climate Control Seat

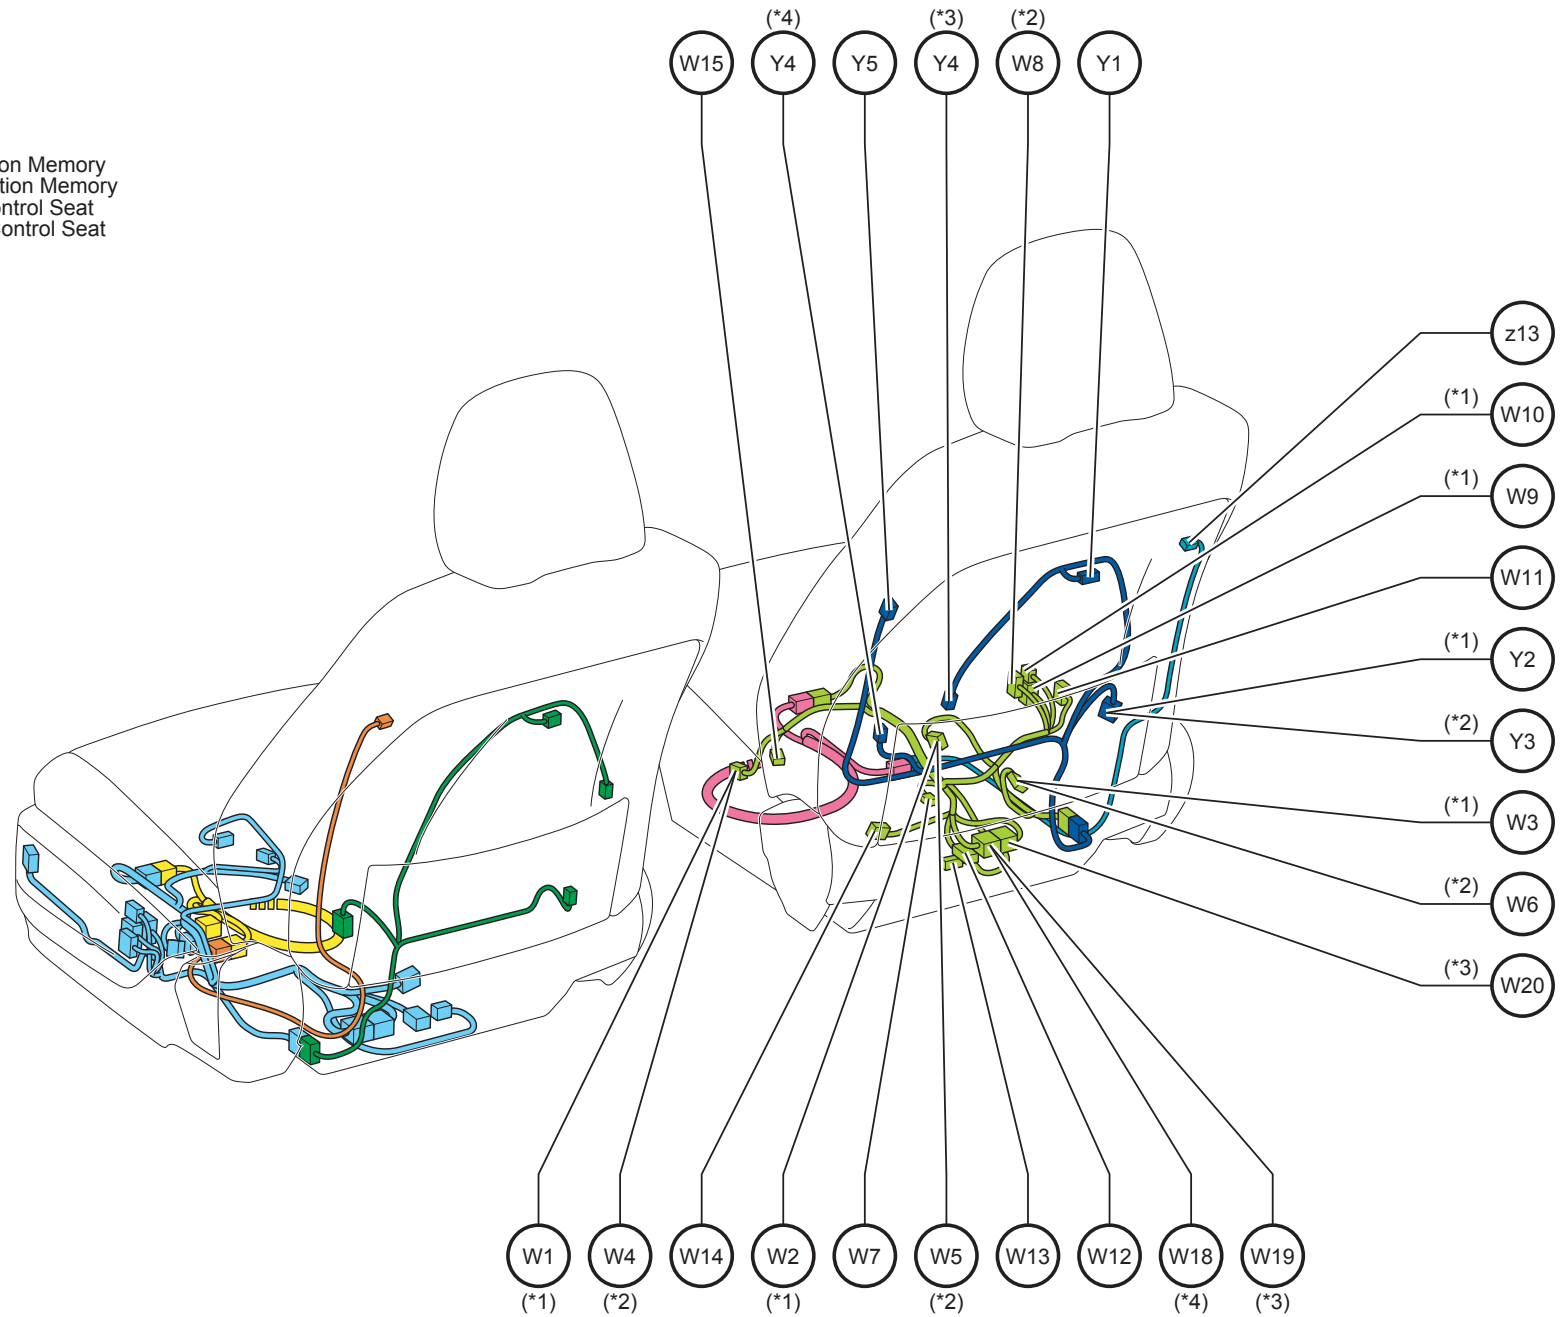

- W 1 Front Power Seat Slide Position Motor RH
- W 2 Front Power Seat Tilt Position Motor RH
- W 3 Front Power Seat Lift Position Motor RH
- W 4 Front Power Seat Slide Position Motor RH
- W 5 Front Power Seat Tilt Position Motor RH
- W 6 Front Power Seat Lift Position Motor RH
- W 7 Belt Warning Occupant Detection Sensor (Front Seat Cushion Pad Separate Type)
- W 8 Front Power Seat Switch RH
- W 9 Position Control ECU Assembly RH (Front Power Seat Switch RH)
- W 10 Position Control ECU Assembly RH (Front Power Seat Switch RH)
- W 11 Front Power Seat Lumbar Support Switch RH
- W 12 Front Seat Heater Assembly RH (Front Seat Cushion Cover Separate Type)
- W 13 Rear Foot Light RH (No. 1 Interior Illumination Light Assembly RH)
- W 14 Seat Cushion Climate Control Blower Assembly RH
- W 15 Front Seat Inner Belt Assembly RH
- W 18 Junction Connector
- W 19 Junction Connector
- W 20 Junction Connector

- Y 1 Seat Back Climate Control Blower RH
- Y 2 Front Power Seat Reclining Position Motor RH
- Y 3 Front Power Seat Reclining Position Motor RH
- Y 4 Front Power Seat Lumbar Support Motor RH
- Y 5 Shoulder Switch (Power Seat Switch Assembly)

- z 13 Front Seat Airbag Assembly RH

Position of Parts in Seat <LHD Front Seat>

