



Position of Parts in Instrument Panel <LHD>

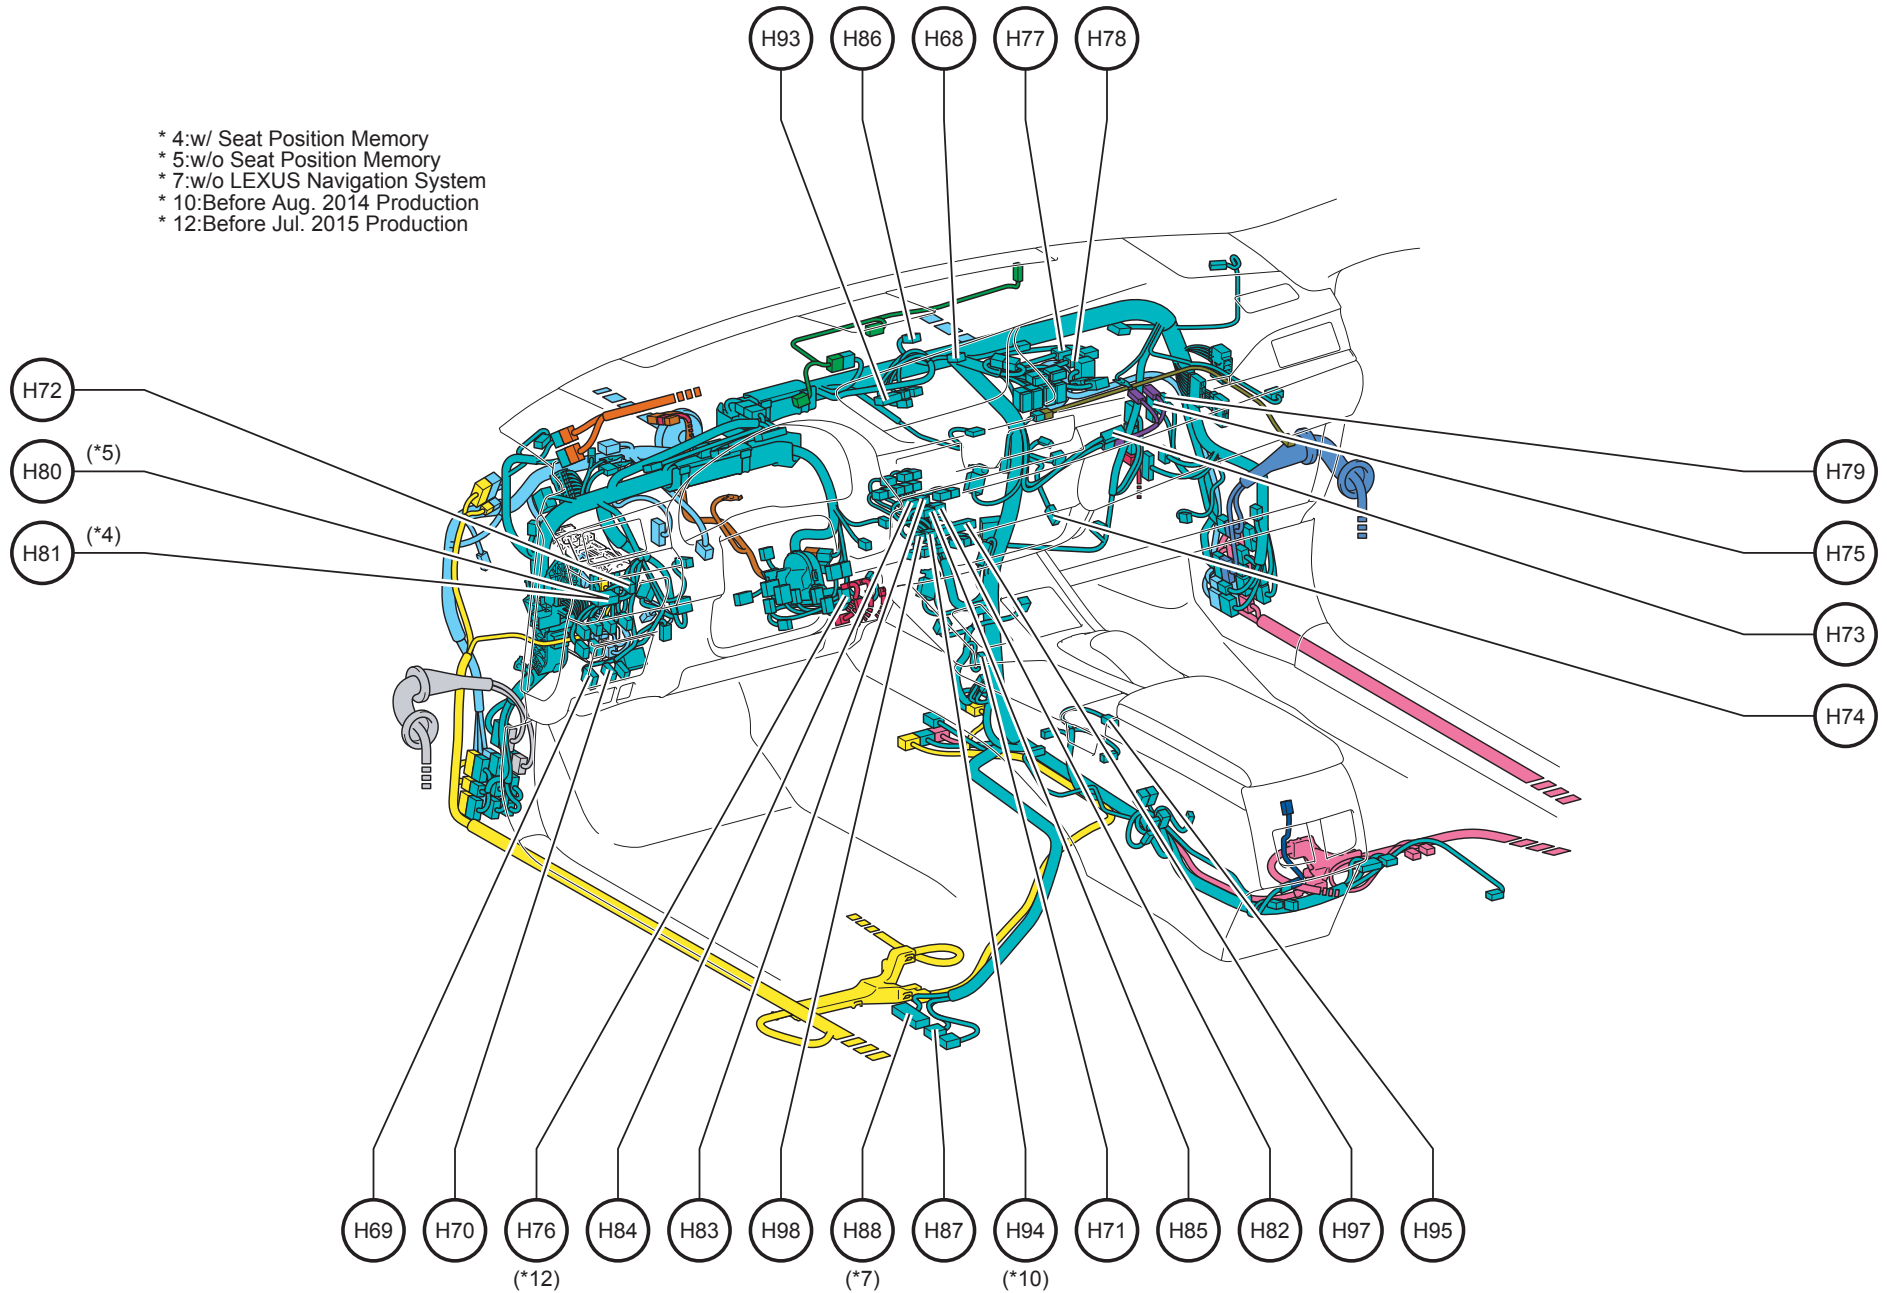

- H 68 Telltale Light Assembly
- H 69 Luggage Door Opening Switch Assembly
- H 70 Fuel Lid Opener Switch
- H 71 Integration Control & Panel Assembly
- H 72 Retractable Outer Mirror Switch
- H 73 Instrument Panel Ambient Light (Interior Illumination Light Sub-Assembly)
- H 74 Luggage Door Opening Switch Assembly Cancel
- H 75 Driving Support ECU Assembly
- H 76 Spiral Cable Sub-Assembly
- H 77 Seat Belt Control ECU
- H 78 Seat Belt Control ECU
- H 79 Tire Pressure Monitor Initiator Driver
- H 80 Outer Mirror Switch Assembly
- H 81 Outer Mirror Switch Assembly
- H 82 Radio Receiver Assembly
- H 83 Radio Receiver Assembly
- H 84 Radio Receiver Assembly
- H 85 Radio Receiver Assembly
- H 86 Accessory Meter Assembly
- H 87 Stereo Component Amplifier Assembly
- H 88 Stereo Component Amplifier Assembly
- H 93 Multi-Media Module Display
- H 94 Radio Receiver Assembly
- H 95 Remote Operation Switch
- H 97 Multi-Media Module Receiver Assembly or Radio Receiver Assembly
- H 98 Multi-Media Module Receiver Assembly or Radio Receiver Assembly

Position of Parts in Instrument Panel <LHD>

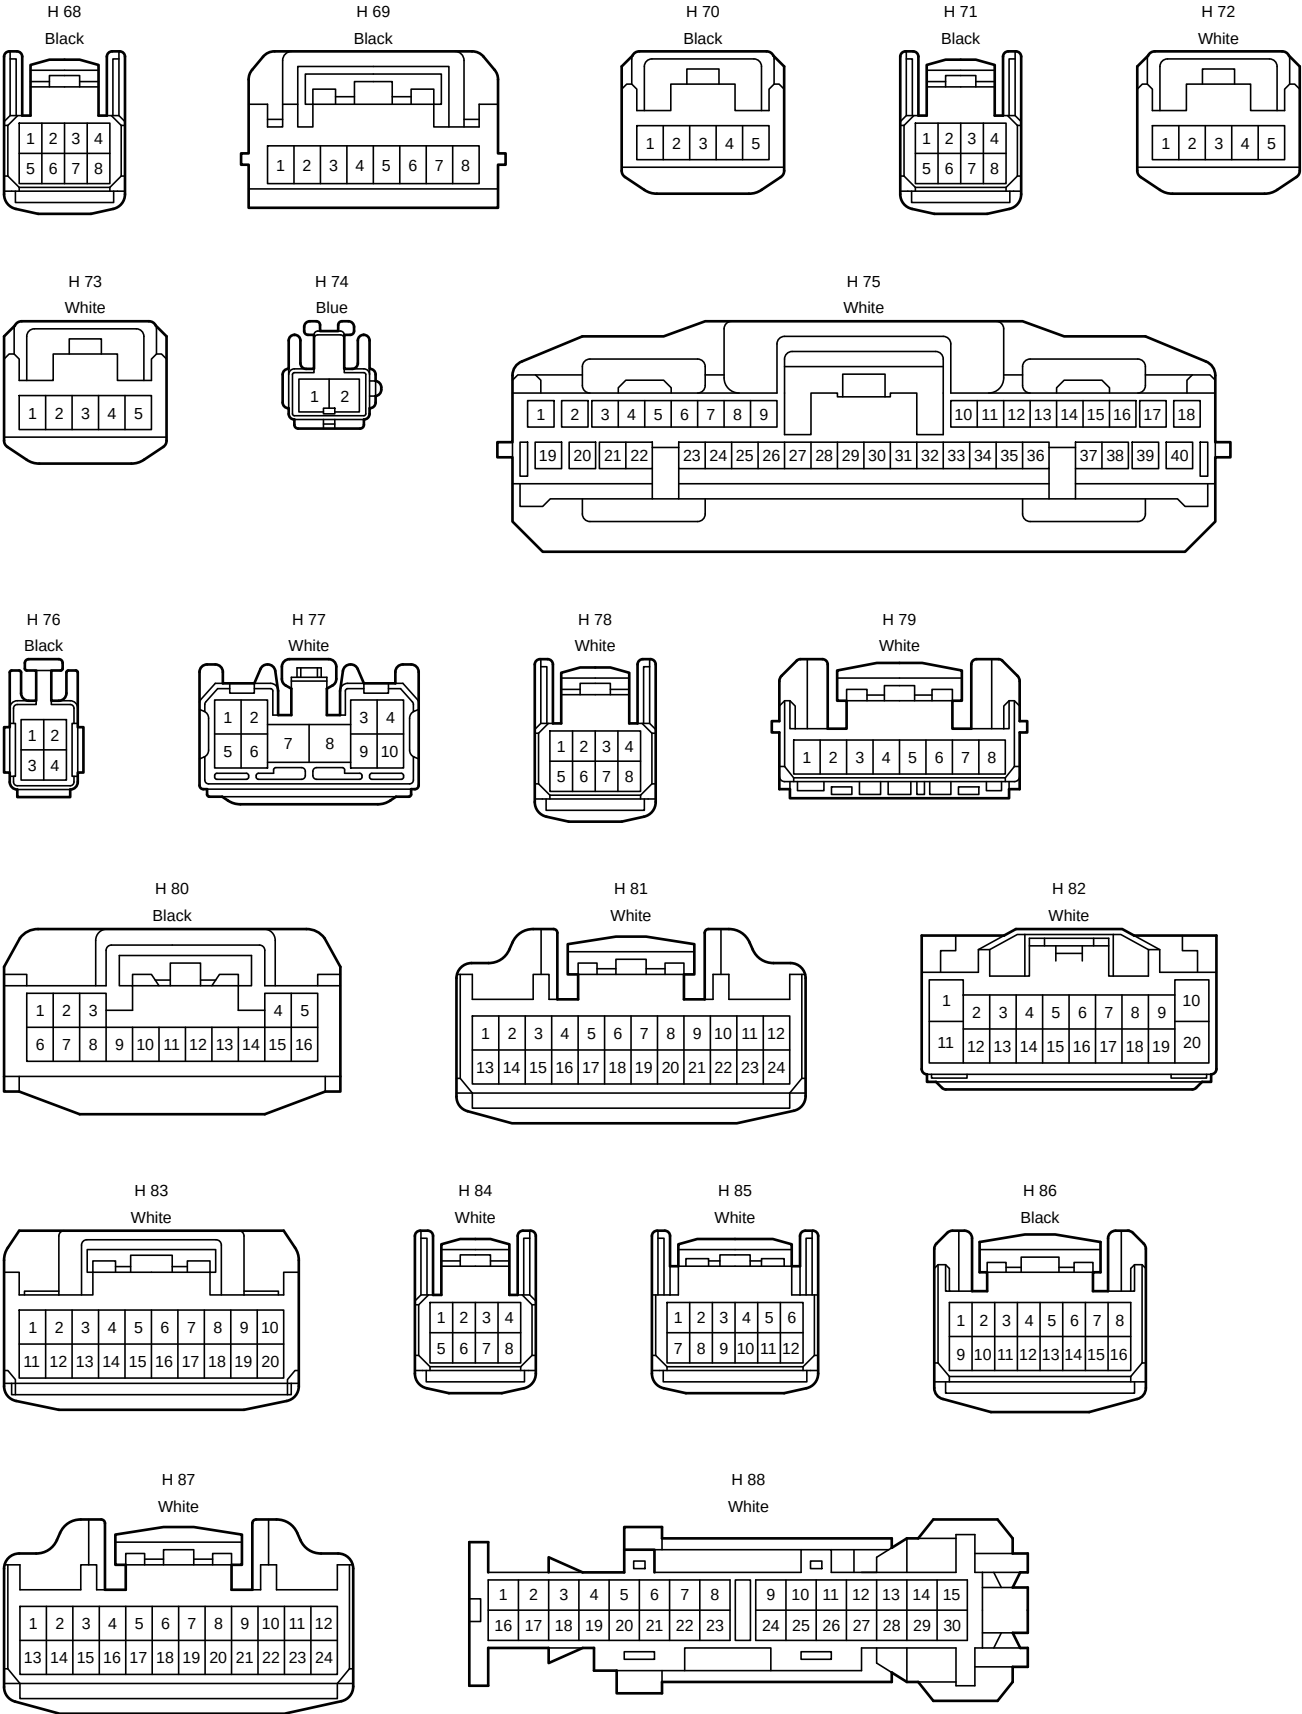

Position of Parts in Instrument Panel <LHD>

