



Position of Parts in Instrument Panel <LHD>

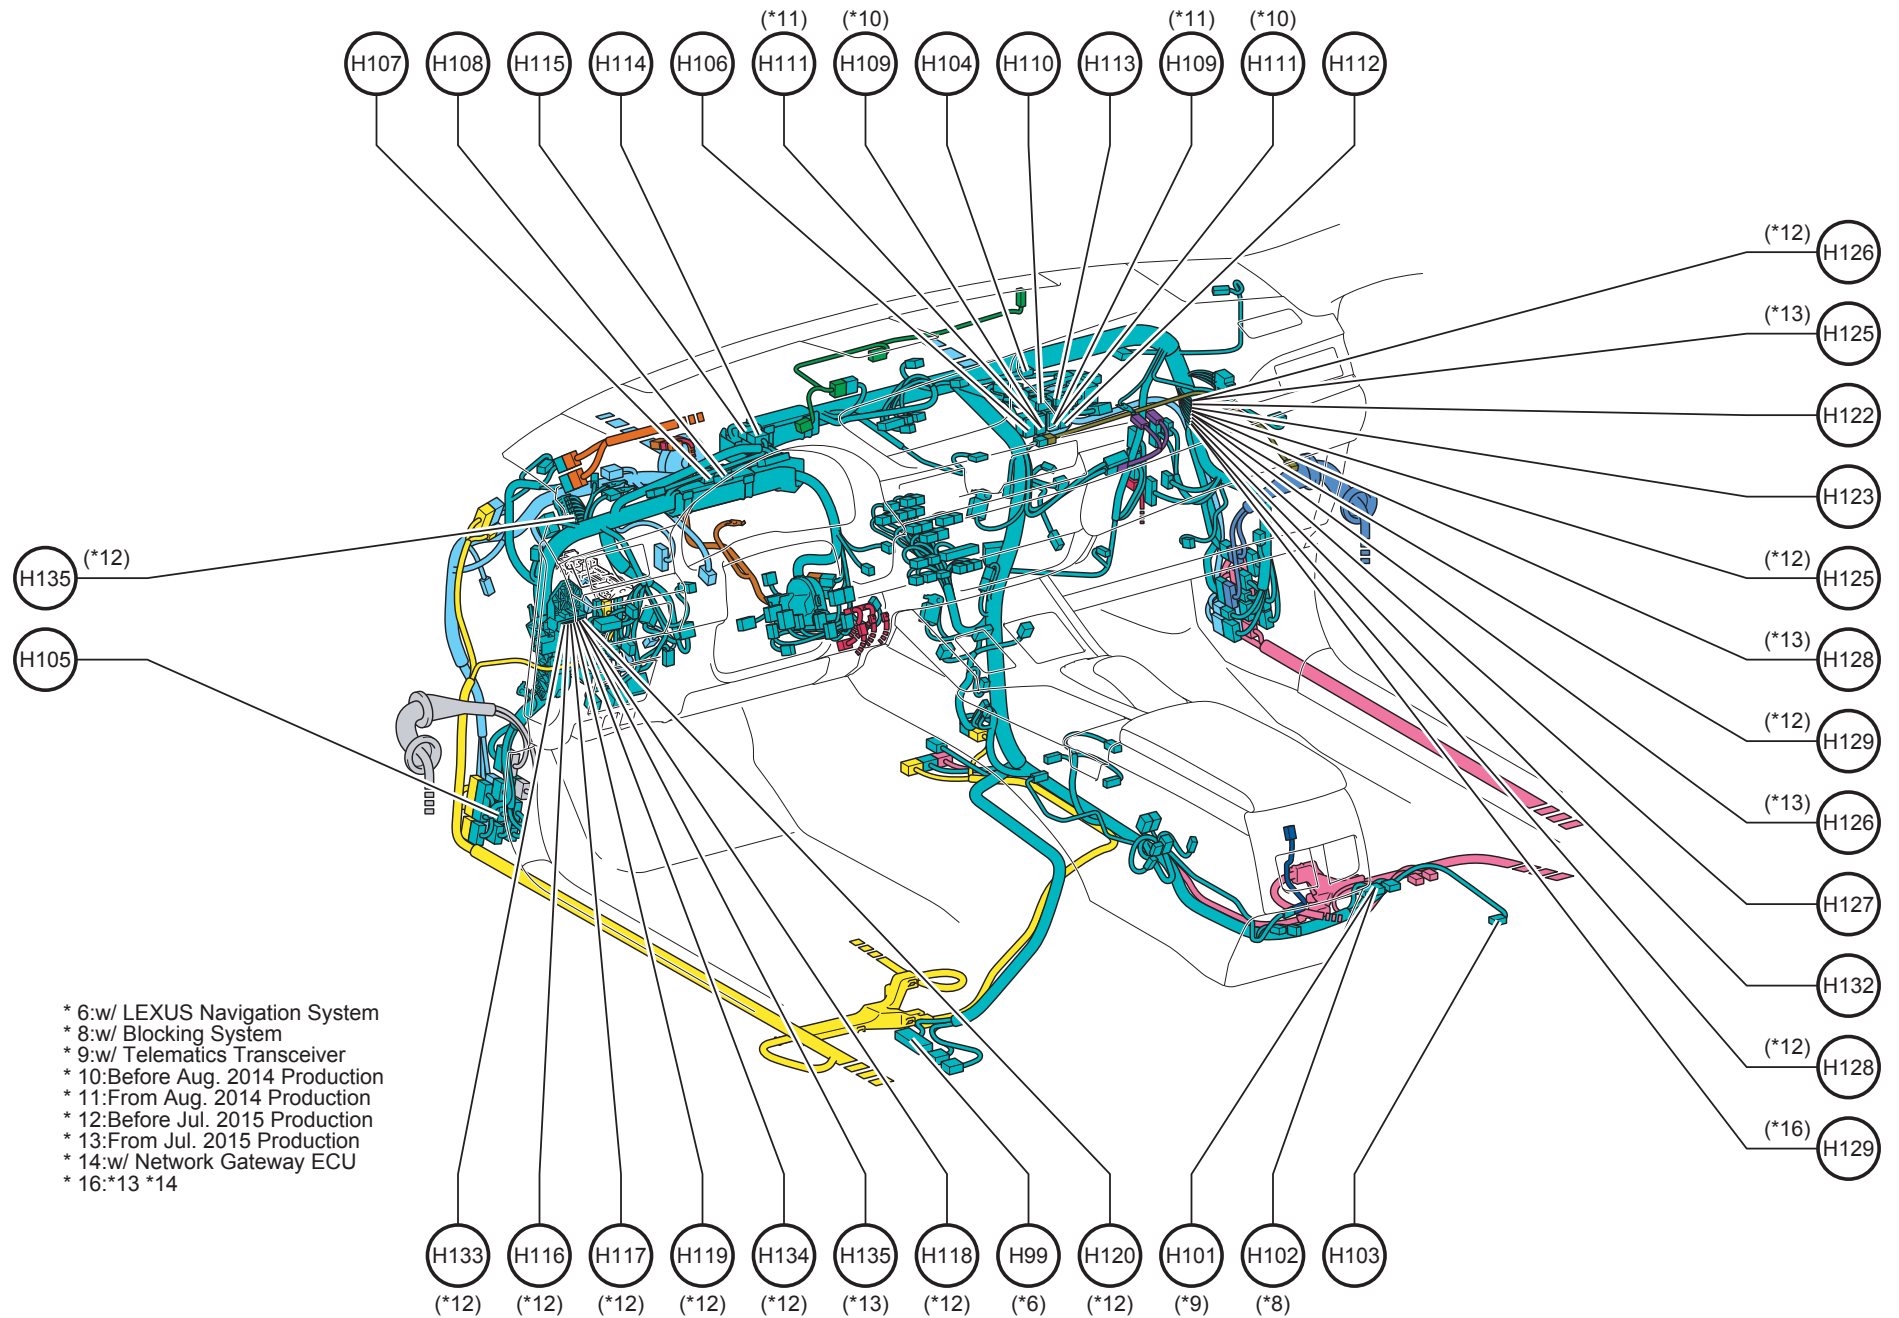


H 99 Stereo Component Amplifier Assembly
H 101 Telematics Transceiver
H 102 Telephone Transceiver Assembly
H 103 Back-Up Battery (Mayday Battery)
H 104 Diode (Shift Position Indicator)
H 105 Junction Connector
H 106 Junction Connector
H 107 Junction Connector
H 108 Junction Connector
H 109 Junction Connector
H 110 Junction Connector
H 111 Junction Connector
H 112 Junction Connector
H 113 Junction Connector
H 114 Junction Connector
H 115 Junction Connector
H 116 Junction Connector
H 117 Junction Connector
H 118 Junction Connector
H 119 Junction Connector
H 120 Junction Connector
H 122 Junction Connector
H 123 Junction Connector
H 125 Junction Connector
H 126 Junction Connector
H 127 Junction Connector
H 128 Junction Connector
H 129 Junction Connector
H 132 Junction Connector
H 133 Junction Connector
H 134 Junction Connector
H 135 Junction Connector

Position of Parts in Instrument Panel <LHD>


H 99
White

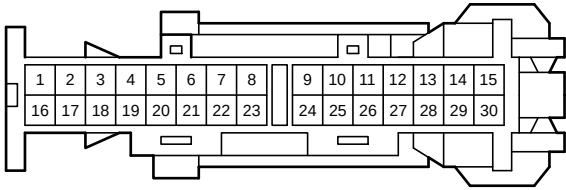


H101
White

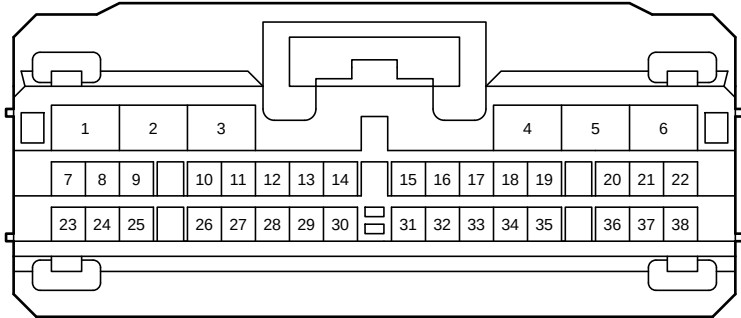

H102
White

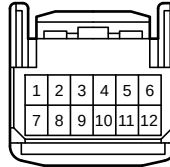


H103
White

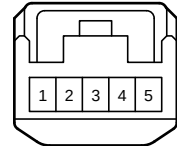


H104
Black




H105
Gray

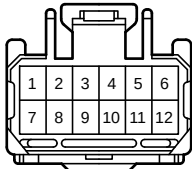


H106
Blue

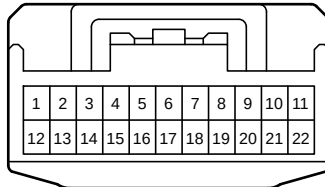


H107
Gray

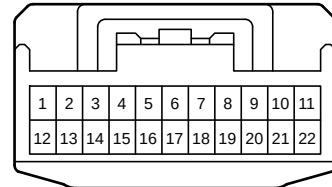


H108
Gray

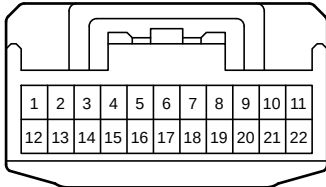


H109
Black

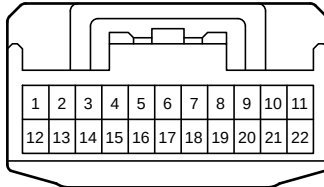


H110
Black

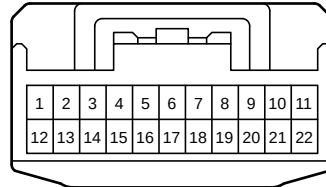


H111
Gray

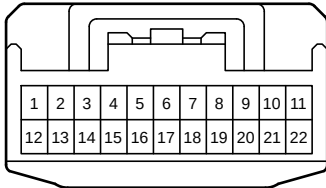


H112
White

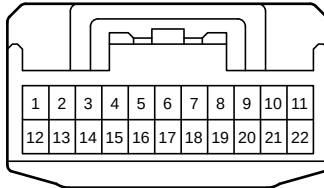


H113
White

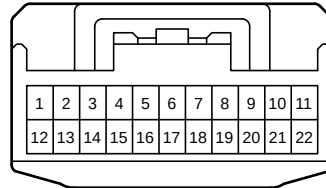


H114
Black

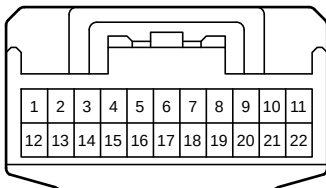


H115
Black

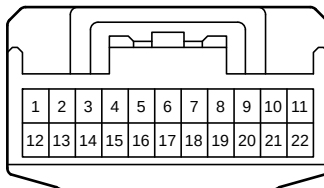


H116
White

 

H117
White

 

H118
White

 

Position of Parts in Instrument Panel <LHD>

