



Position of Parts in Instrument Panel <LHD>

- * 10: Before Aug. 2014 Production
- * 11: From Aug. 2014 Production
- * 12: Before Jul. 2015 Production
- * 13: From Jul. 2015 Production

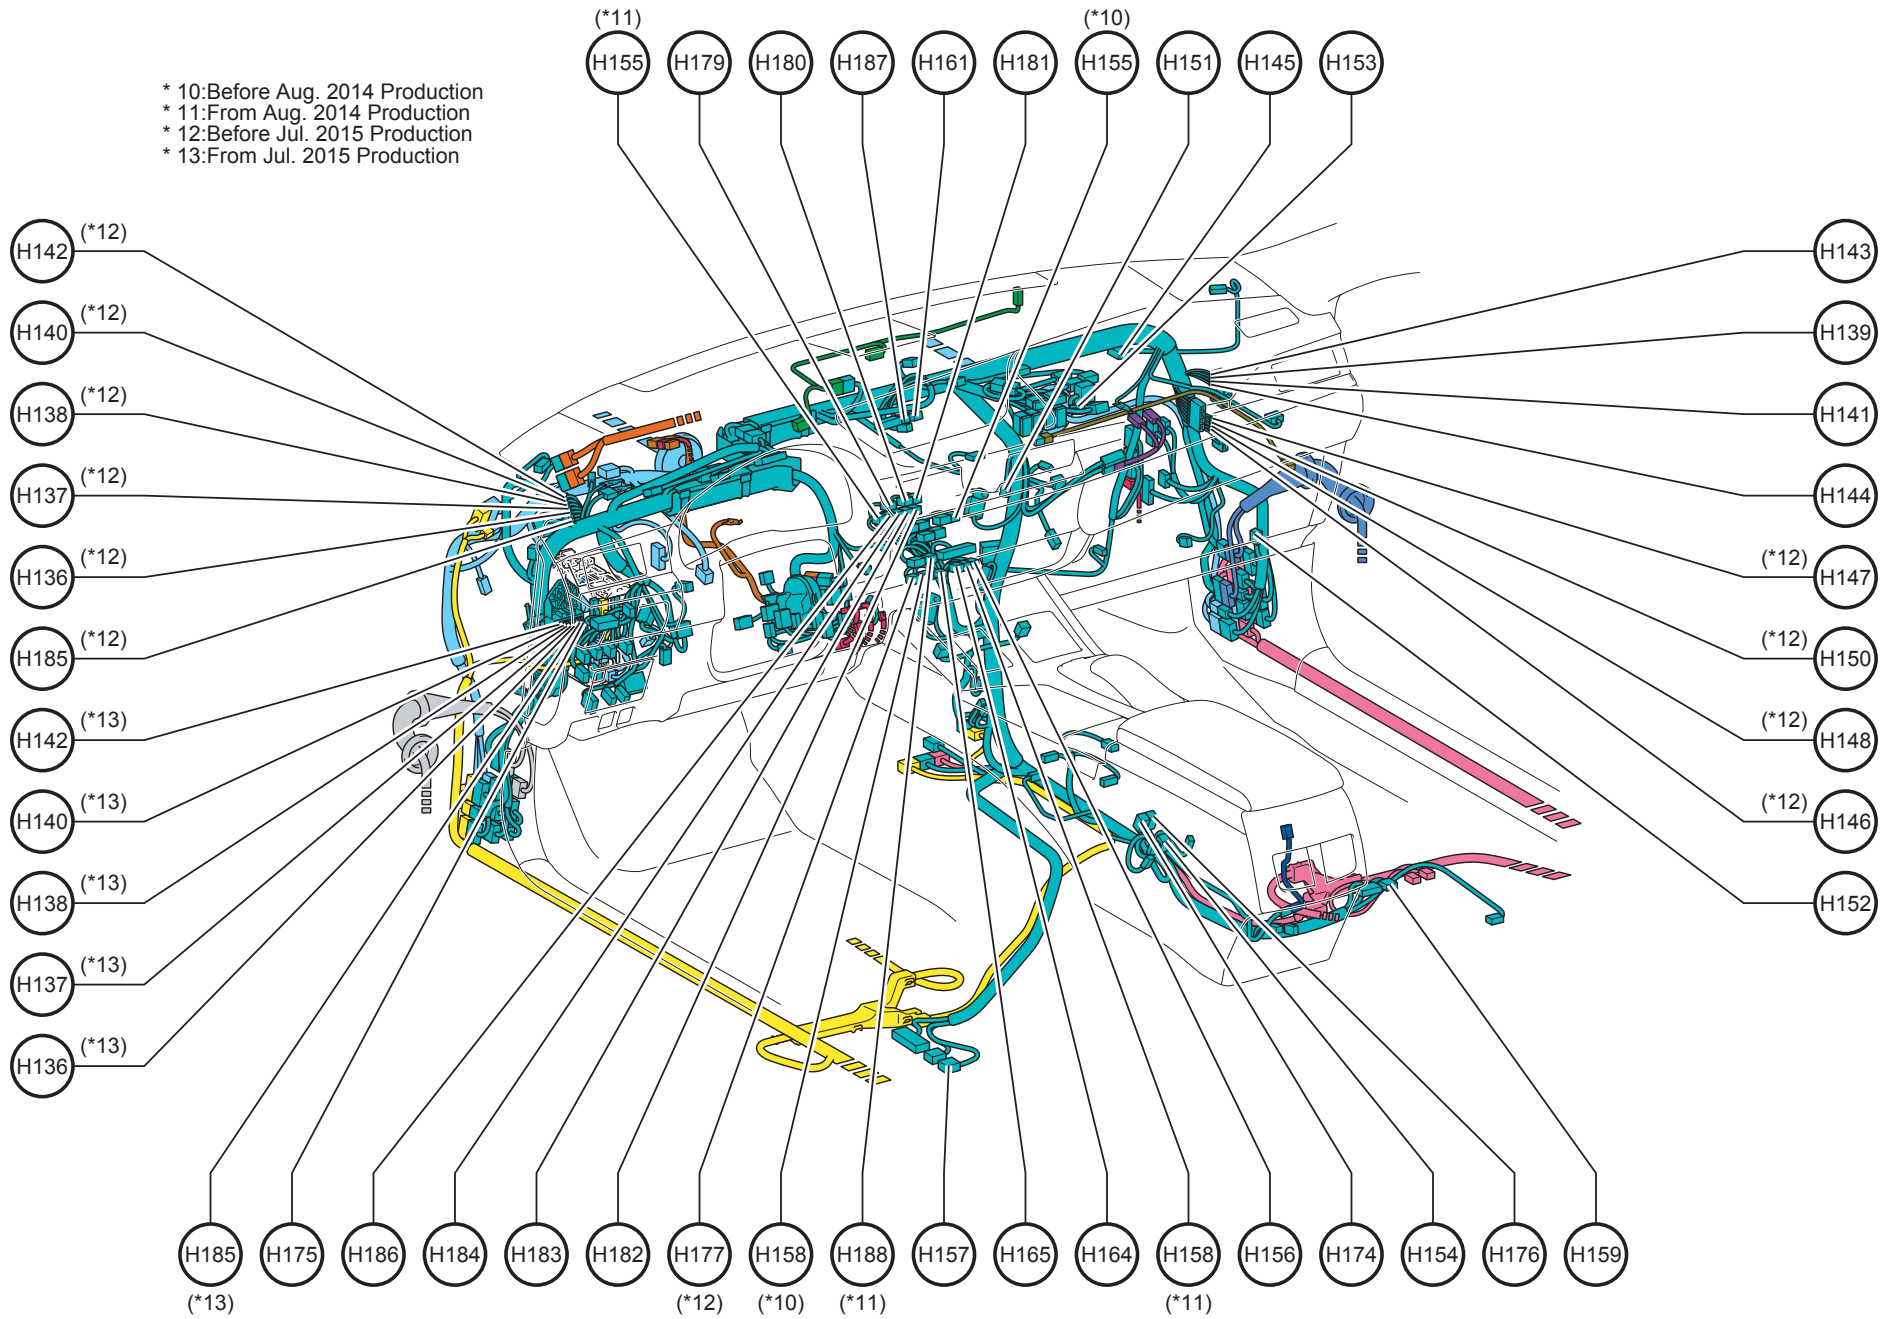

H 136	Junction Connector
H 137	Junction Connector
H 138	Junction Connector
H 139	Junction Connector
H 140	Junction Connector
H 141	Junction Connector
H 142	Junction Connector
H 143	Junction Connector
H 144	Junction Connector
H 145	Junction Terminal
H 146	Junction Connector
H 147	Junction Connector
H 148	Junction Connector
H 150	Junction Connector
H 151	Option Connector (Engine Starter)
H 152	Option Connector (Glass Breakage Sensor)
H 153	Panel Relay
H 154	No. 1 Stereo Jack Adapter Assembly
H 155	Radio Receiver Assembly
H 156	Multi-Media Module Receiver Assembly or Radio Receiver Assembly
H 157	Stereo Component Amplifier Assembly
H 158	Multi-Media Module Receiver Assembly or Radio Receiver Assembly
H 159	Telematics Transceiver
H 161	Multi-Media Module Display
H 164	Multi-Media Module Receiver Assembly or Radio Receiver Assembly
H 165	Multi-Media Module Receiver Assembly or Radio Receiver Assembly
H 174	No. 1 Stereo Jack Adapter Assembly
H 175	Junction Connector
H 176	No. 1 Stereo Jack Adapter Assembly
H 177	Multi-Media Module Receiver Assembly or Radio Receiver Assembly
H 179	Radio Receiver Assembly
H 180	Radio Receiver Assembly
H 181	Radio Receiver Assembly
H 182	Radio Receiver Assembly
H 183	Radio Receiver Assembly
H 184	Radio Receiver Assembly
H 185	Junction Connector
H 186	Radio Receiver Assembly
H 187	Multi-Media Module Display
H 188	Multi-Media Module Receiver Assembly or Radio Receiver Assembly

Position of Parts in Instrument Panel <LHD>

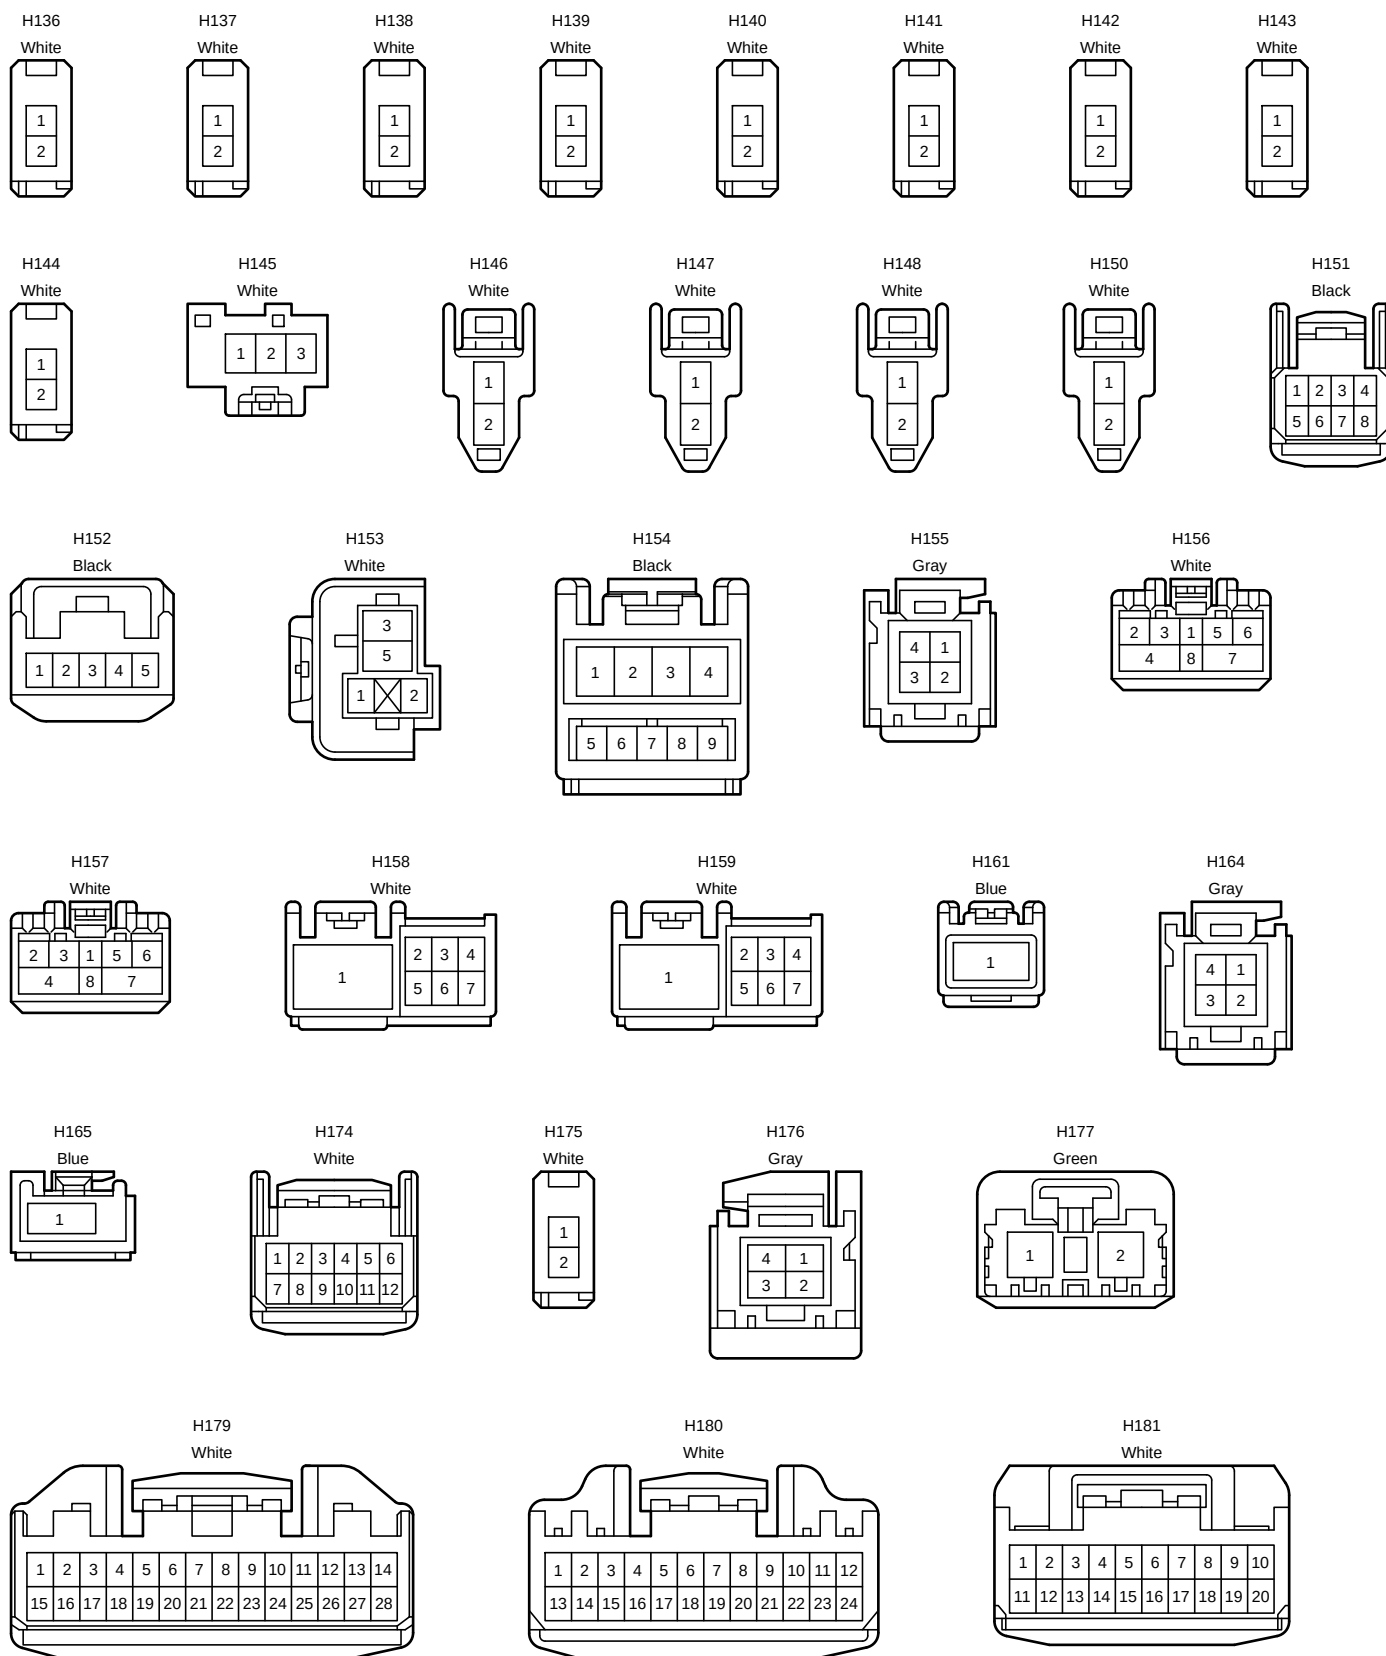

Position of Parts in Instrument Panel <LHD>

