


Position of Parts in Seat <RHD Front Seat>

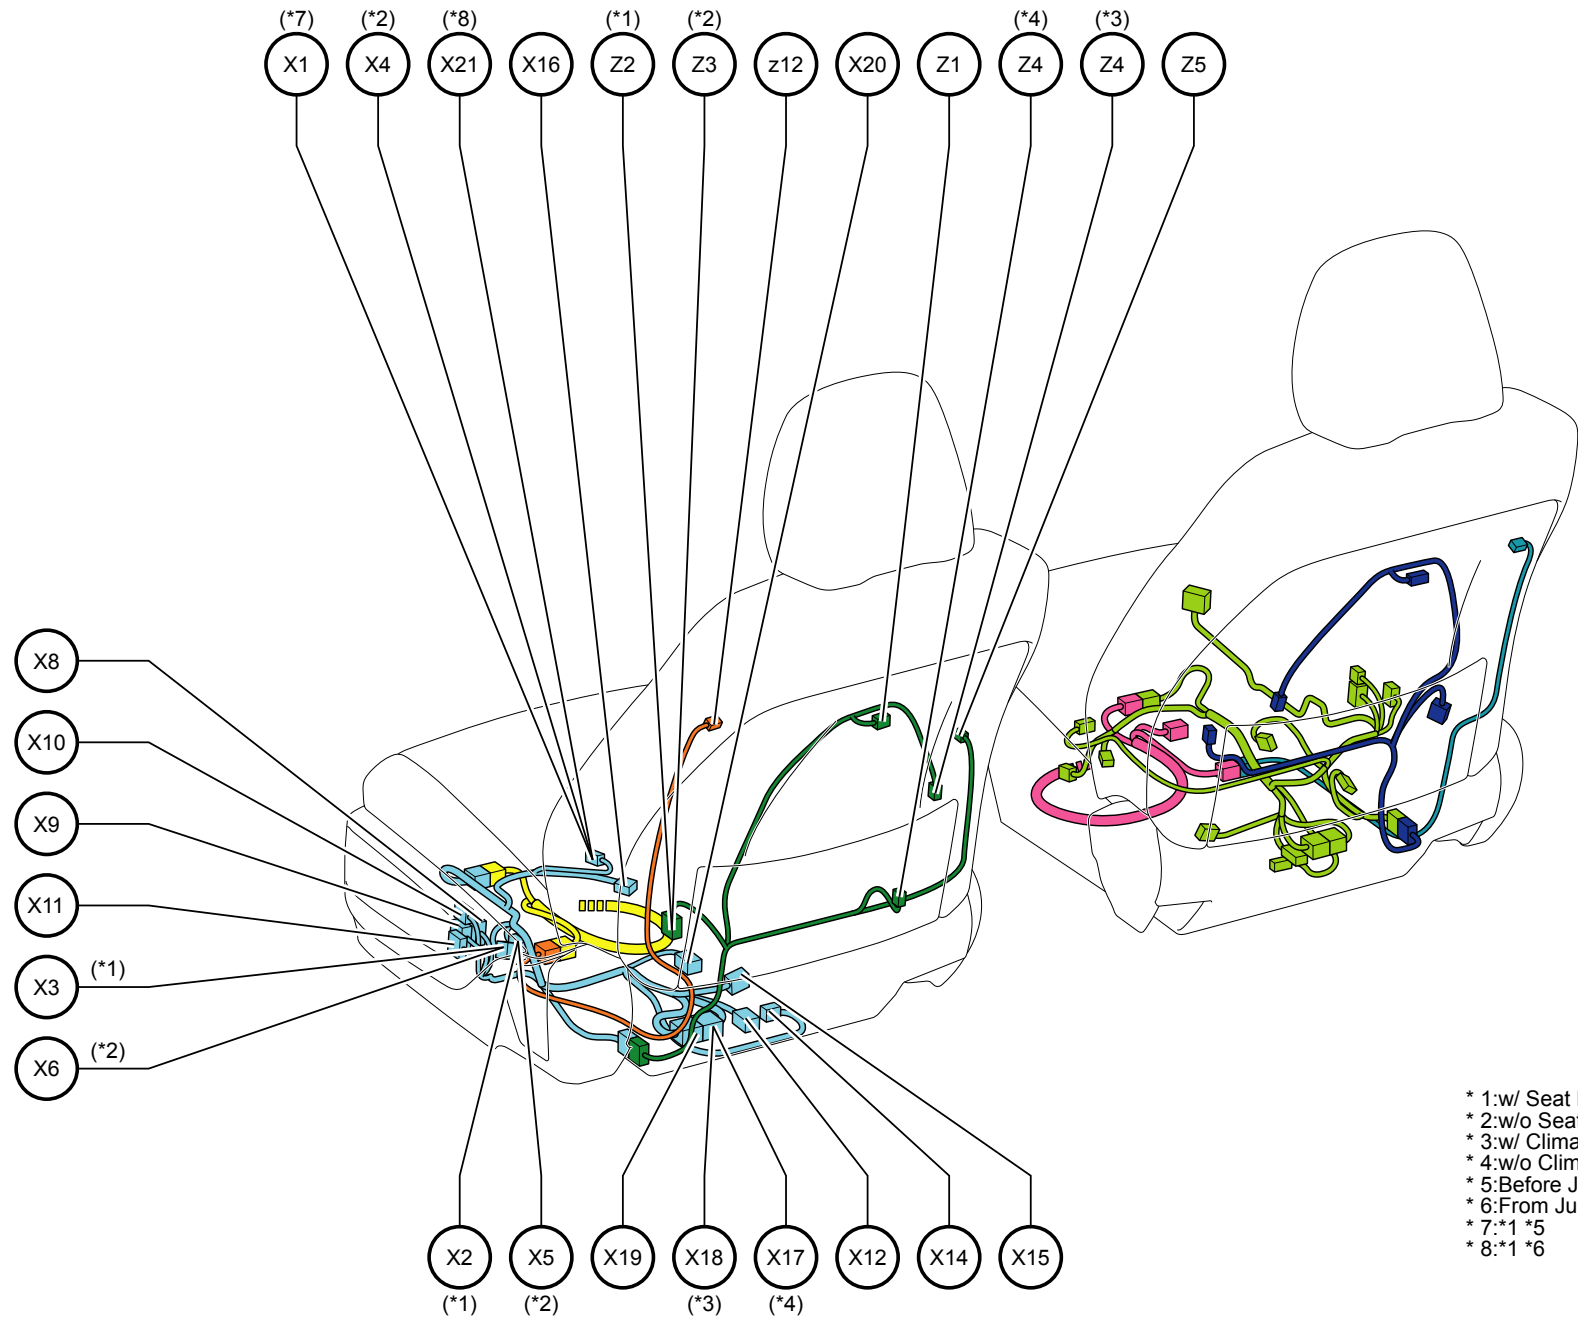

- * 1:w/ Seat Position Memory
- * 2:w/o Seat Position Memory
- * 3:w/ Climate Control Seat
- * 4:w/o Climate Control Seat
- * 5:Before Jul. 2015 Production
- * 6:From Jul. 2015 Production
- * 7:*1 *5
- * 8:*1 *6

- X 1 Front Power Seat Slide Position Motor LH
- X 2 Front Power Seat Tilt Position Motor LH
- X 3 Front Power Seat Lift Position Motor LH
- X 4 Front Power Seat Slide Position Motor LH
- X 5 Front Power Seat Tilt Position Motor LH
- X 6 Front Power Seat Lift Position Motor LH
- X 8 Front Power Seat Switch LH
- X 9 Position Control ECU Assembly LH (Front Power Seat Switch LH)
- X 10 Position Control ECU Assembly LH (Front Power Seat Switch LH)
- X 11 Front Power Seat Lumbar Support Switch LH
- X 12 Front Seat Heater Assembly LH (Front Seat Cushion Cover Separate Type)
- X 14 Rear Foot Light LH (No. 1 Interior Illumination Light Assembly LH)
- X 15 Seat Cushion Climate Control Blower Assembly LH
- X 16 Front Seat Inner Belt Assembly LH
- X 17 Junction Connector
- X 18 Junction Connector
- X 19 Junction Connector
- X 20 Belt Warning Occupant Detection Sensor (Front Seat Cushion Pad Separate Type)
- X 21 Front Power Seat Slide Position Motor LH

- Z 1 Seat Back Climate Control Blower LH
- Z 2 Front Power Seat Reclining Position Motor LH
- Z 3 Front Power Seat Reclining Position Motor LH
- Z 4 Front Power Seat Lumbar Support Motor LH
- Z 5 Shoulder Switch (Power Seat Switch Assembly)

- z 12 Front Seat Airbag Assembly LH

Position of Parts in Seat <RHD Front Seat>

