




# Position of Parts in Engine Compartment <RHD>

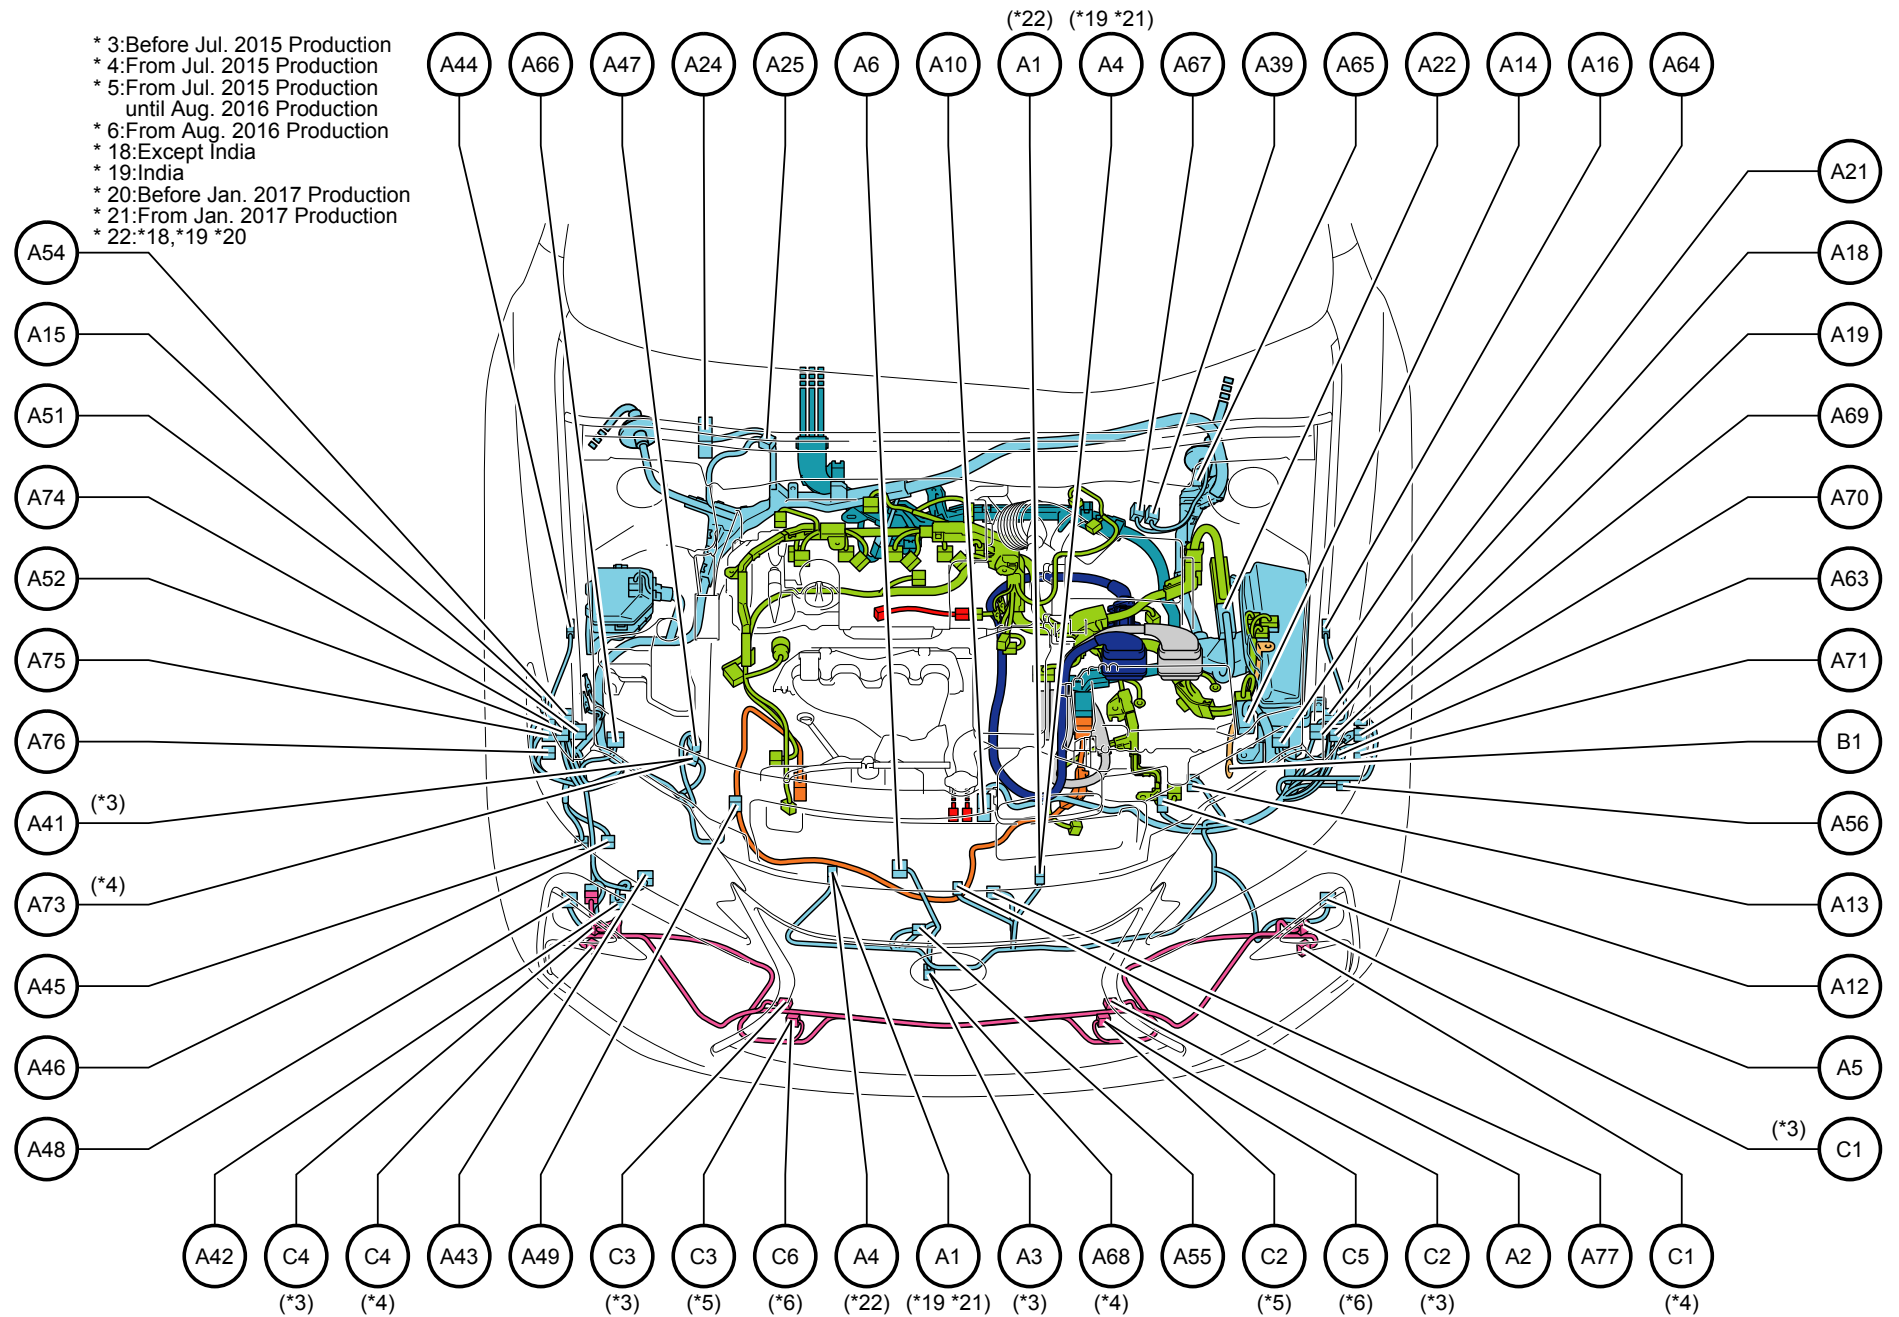

- A 1 Low Pitched Horn Assembly
- A 2 Engine Hood Courtesy Switch (Hood Lock Assembly)
- A 3 Ambient Temperature Sensor (Thermistor Assembly)
- A 4 High Pitched Horn Assembly
- A 5 Fog Light Assembly LH
- A 6 Exhaust Gas Sensor
- A 10 Cooling Fan ECU
- A 12 Front Airbag Sensor LH
- A 13 Inverter with Converter Assembly
- A 14 Inverter with Converter Assembly
- A 15 Wireless Door Lock Buzzer
- A 16 Front Speed Sensor LH
- A 18 Headlight Assembly LH
- A 19 Headlight Assembly LH
- A 21 Headlight Assembly LH
- A 22 ECM
- A 24 Skid Control ECU with Actuator (Brake Booster with Master Cylinder Assembly)
- A 25 Windshield Wiper Motor Assembly
- A 39 Brake Booster Pump Assembly
- A 41 Inverter Water Pump Assembly
- A 42 Headlight Cleaner Motor and Pump Assembly
- A 43 Headlight Cleaner Control Relay
- A 44 Front Speed Sensor RH
- A 45 Windshield Washer Motor and Pump Assembly
- A 46 Level Warning Switch Assembly
- A 47 Pressure Sensor (A/C Tube & Accessory Assembly)
- A 48 Fog Light Assembly RH
- A 49 Front Airbag Sensor RH
- A 51 Headlight Assembly RH
- A 52 Headlight Assembly RH
- A 54 Headlight Assembly RH
- A 55 Millimeter Wave Radar Sensor Assembly
- A 56 Front Tire Pressure Monitor Initiator
- A 63 Junction Connector
- A 64 Headlight Assembly LH
- A 65 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
- A 66 Headlight Assembly RH
- A 67 Brake Booster Pump Assembly
- A 68 Ambient Temperature Sensor (Thermistor Assembly)
- A 69 Headlight Assembly LH
- A 70 Headlight Assembly LH
- A 71 Headlight Assembly LH
- A 73 Inverter Water Pump Assembly
- A 74 Headlight Assembly RH
- A 75 Headlight Assembly RH
- A 76 Headlight Assembly RH
- A 77 Millimeter Wave Radar Sensor Assembly
  
- B 1 Inverter with Converter Assembly
  
- C 1 Front No. 1 Ultrasonic Sensor LH
- C 2 Front No. 1 Ultrasonic Sensor Center LH
- C 3 Front No. 1 Ultrasonic Sensor Center RH
- C 4 Front No. 1 Ultrasonic Sensor RH
- C 5 Front No. 1 Ultrasonic Sensor Center LH
- C 6 Front No. 1 Ultrasonic Sensor Center RH

Position of Parts in Engine Compartment <RHD>

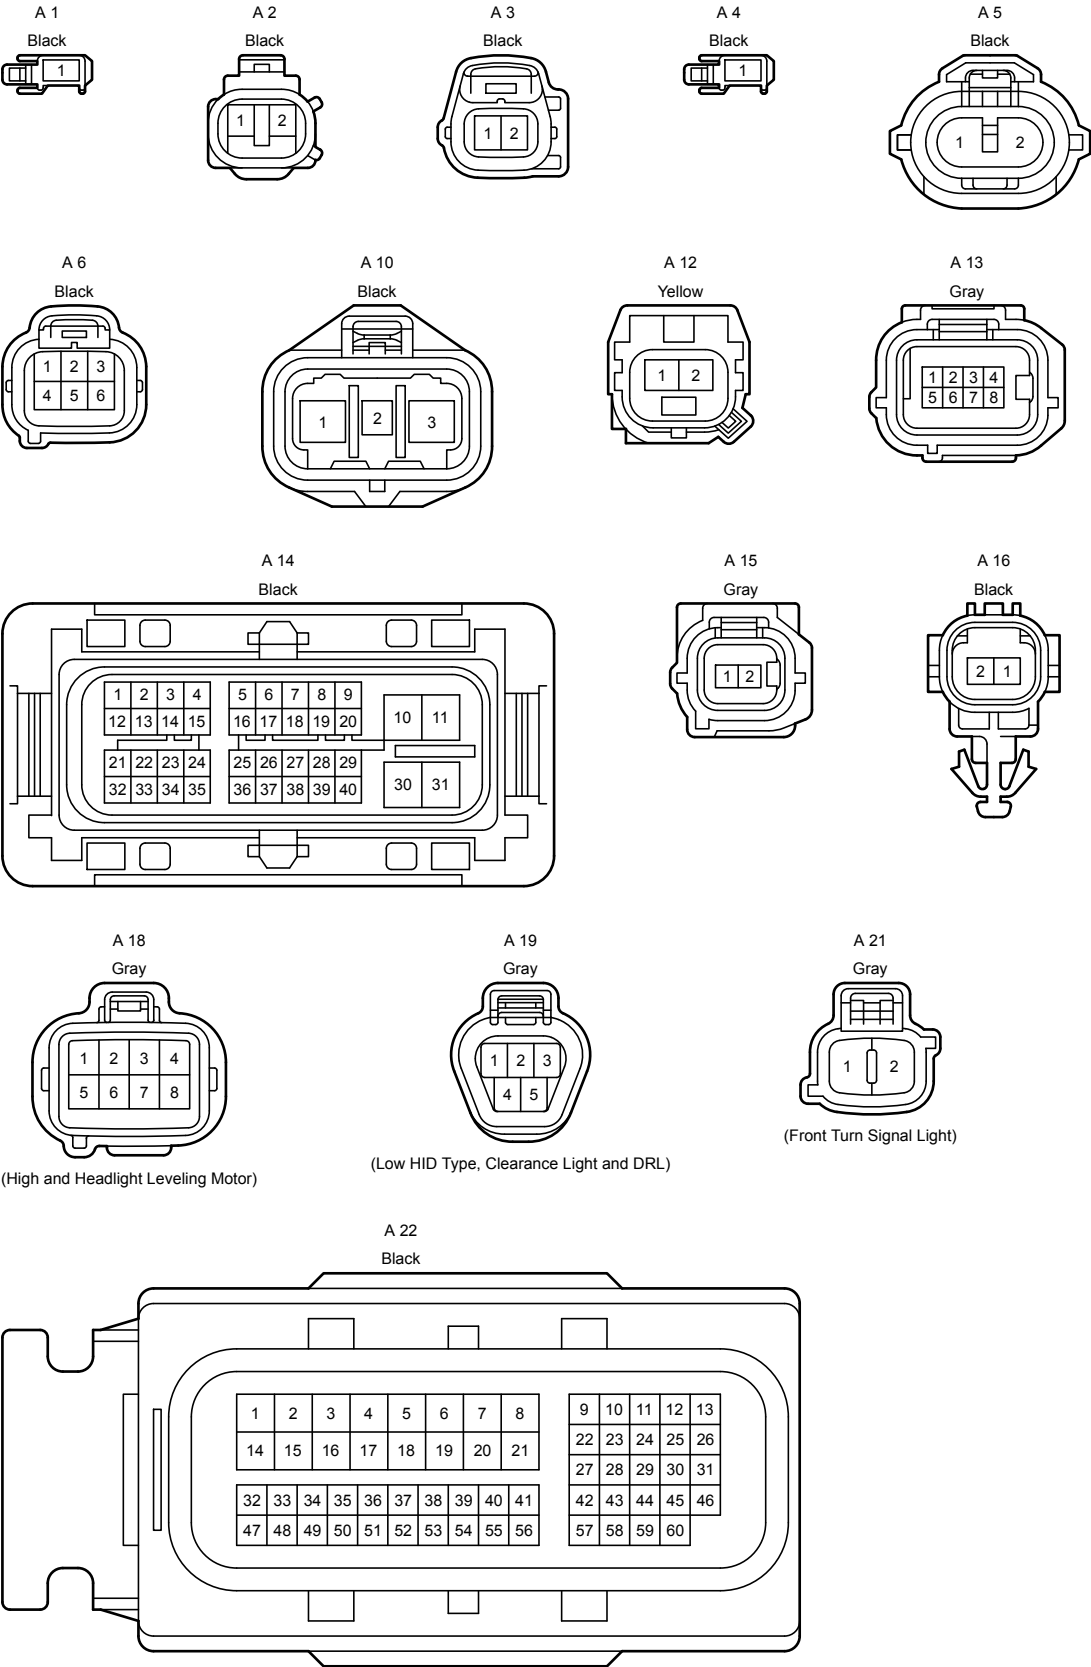

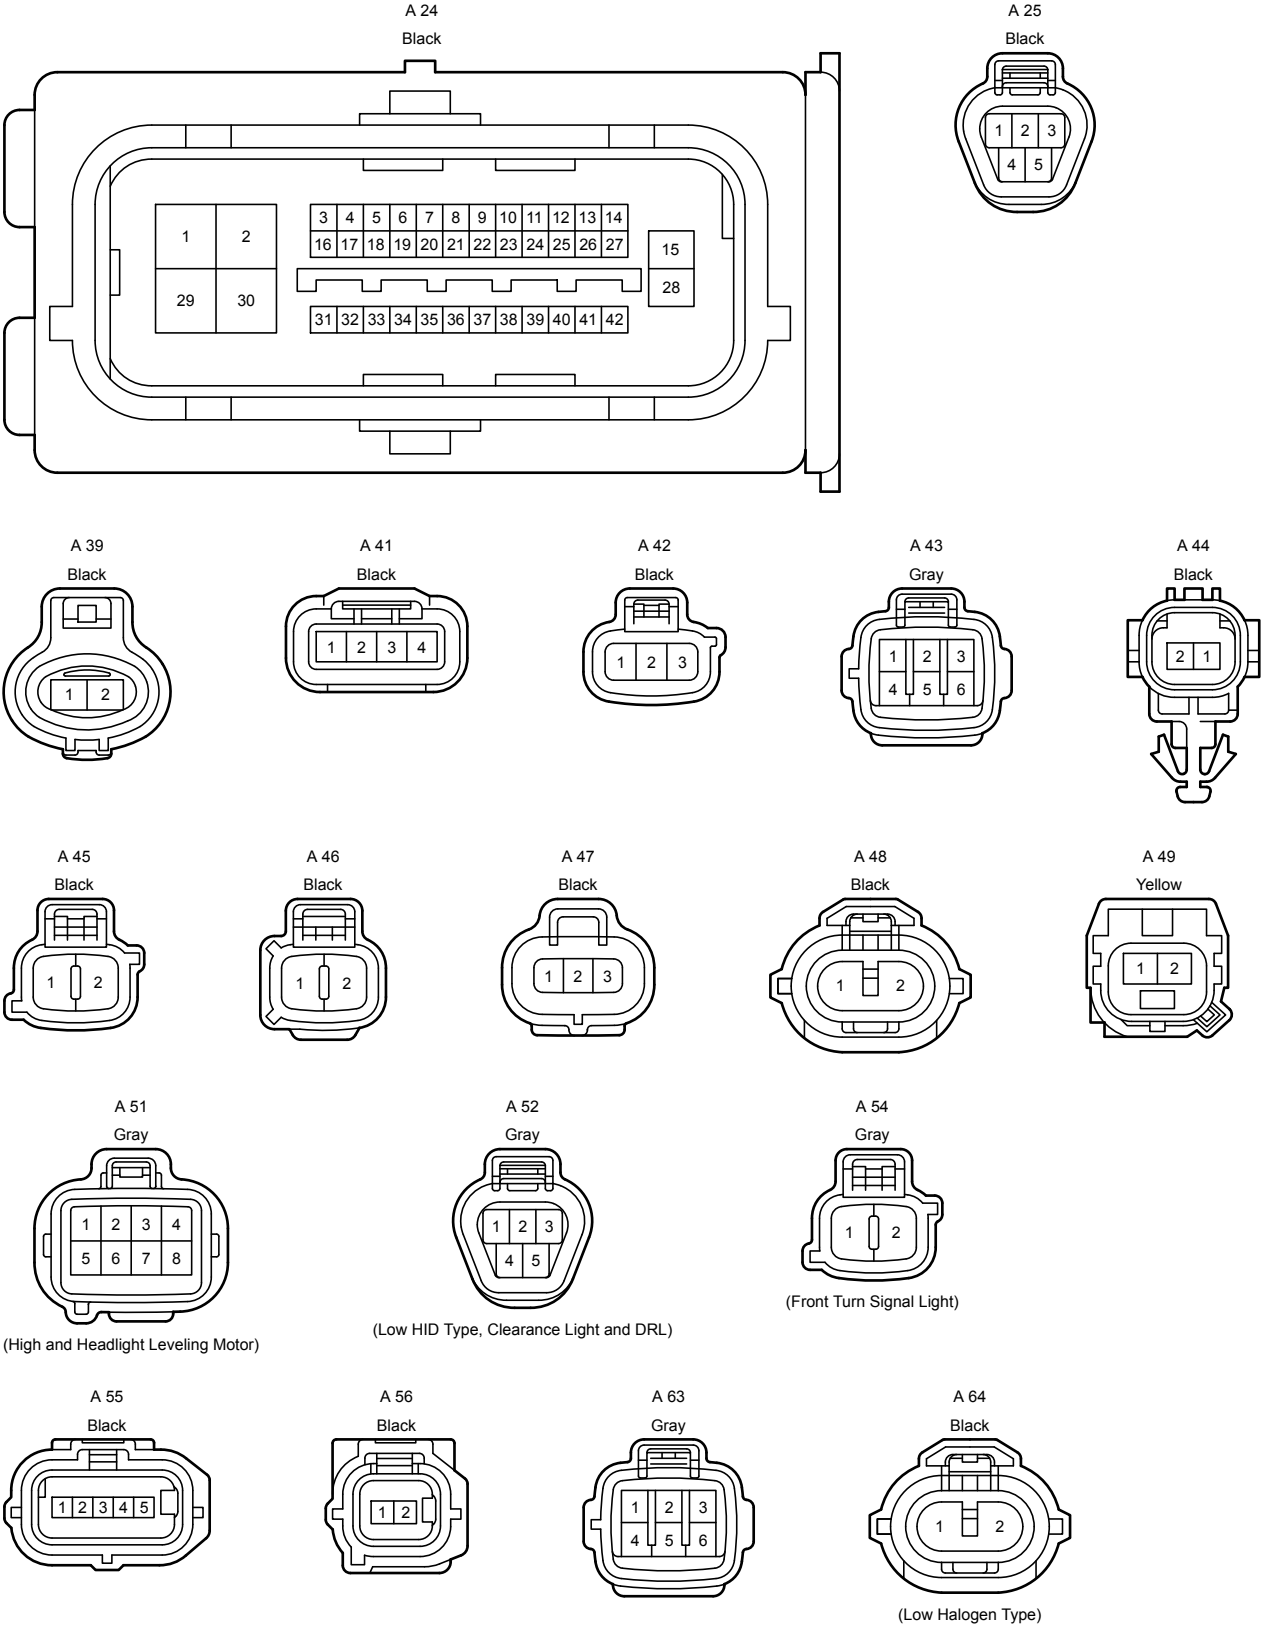

Position of Parts in Engine Compartment <RHD>

