


Position of Parts in Engine Compartment <RHD>

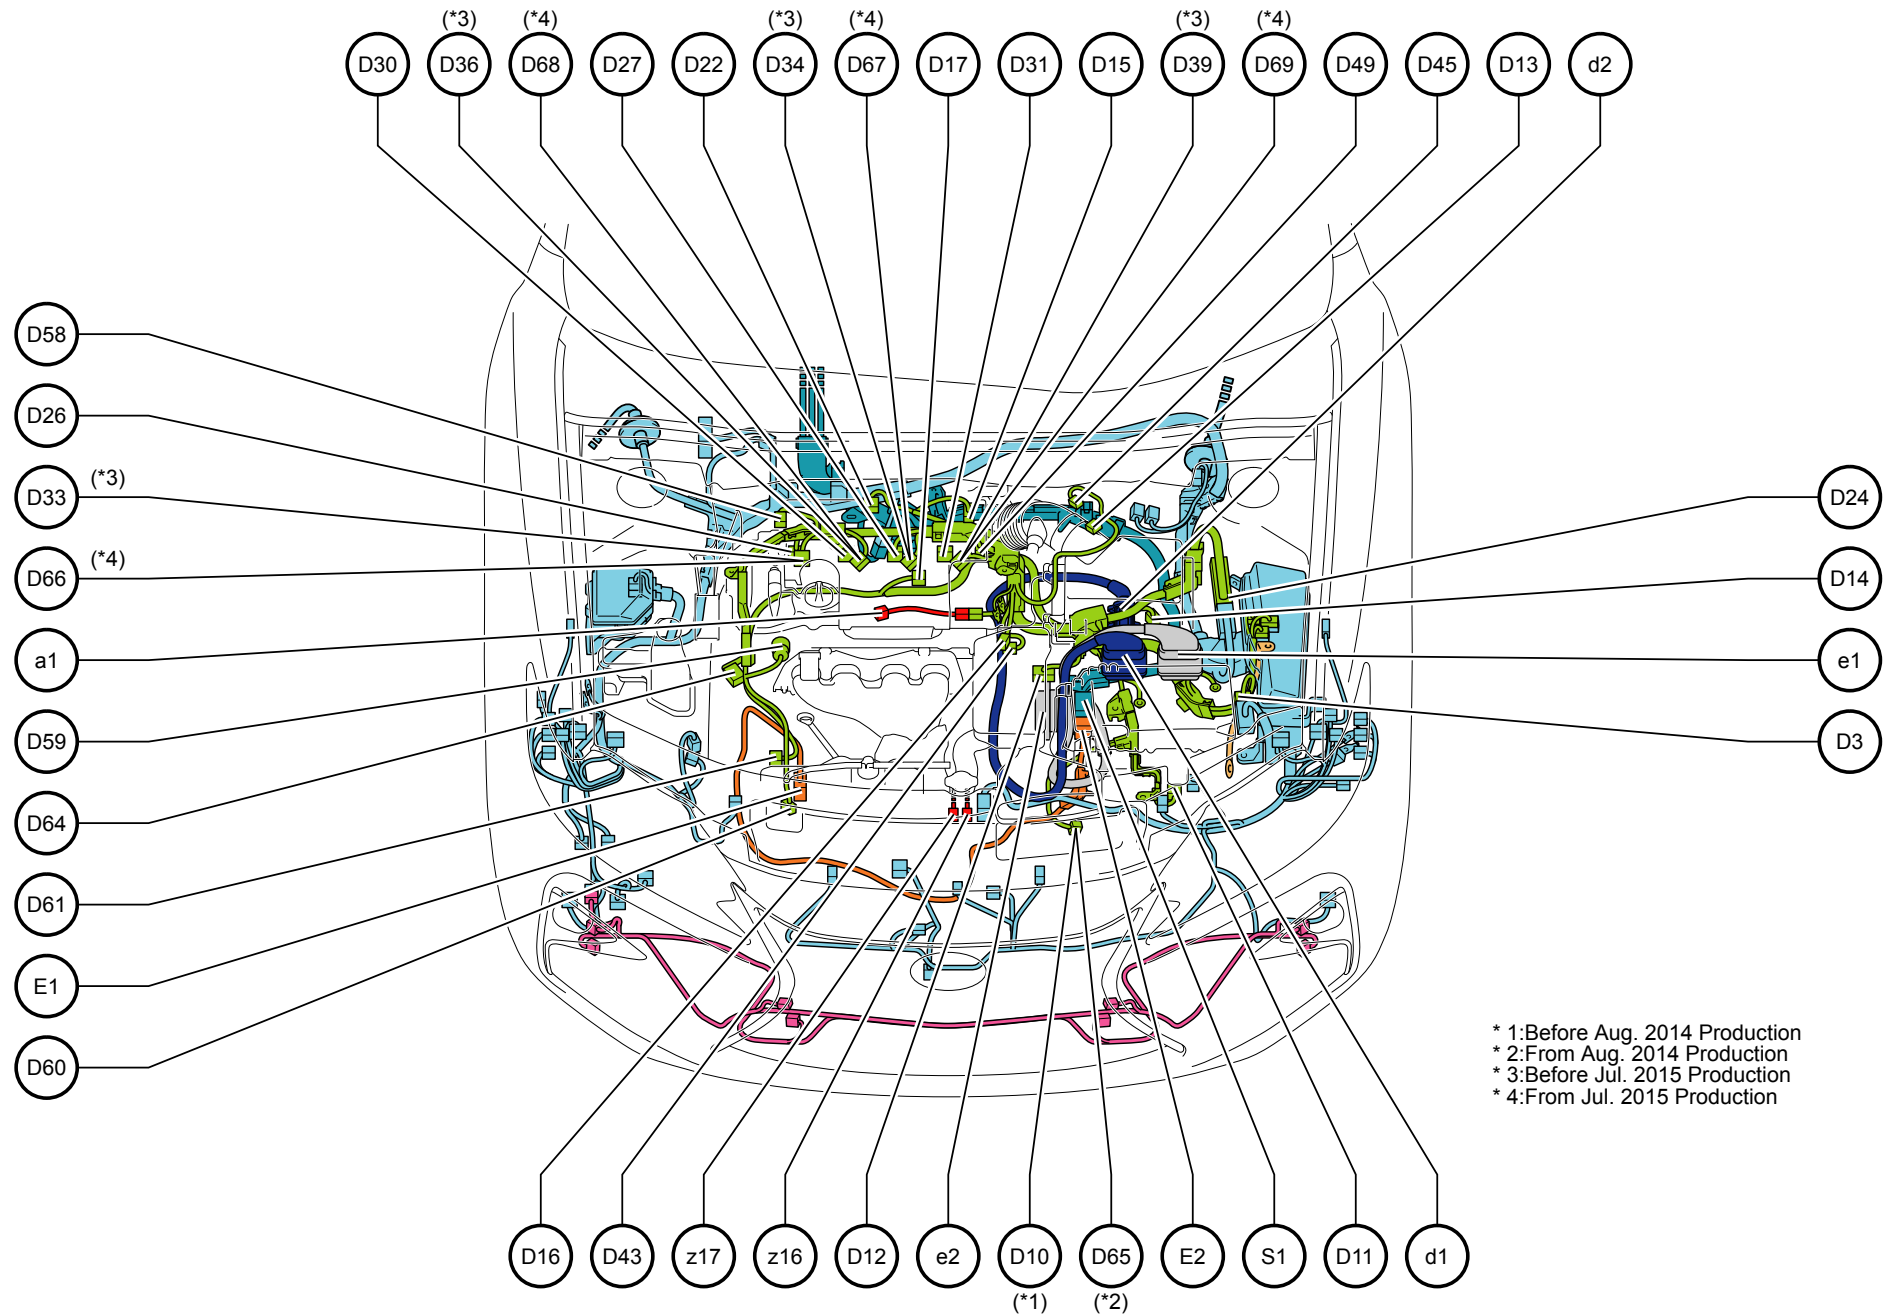

- D 3 Inverter with Converter Assembly
- D 10 Shift Lever Position Sensor
- D 11 Hybrid Vehicle Transaxle Assembly
- D 12 Hybrid Vehicle Transaxle Assembly
- D 13 Intake Mass Air Flow Meter Sub-Assembly
- D 14 Hybrid Vehicle Transaxle Assembly
- D 15 Throttle Body with Motor Assembly
- D 16 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 17 Oxygen Sensor (Bank 1 Sensor 2)
- D 22 E.F.I. Vacuum Sensor Assembly
- D 24 ECM
- D 26 Fuel Injector Assembly No. 1
- D 27 Fuel Injector Assembly No. 3
- D 30 Fuel Injector Assembly No. 2
- D 31 Fuel Injector Assembly No. 4
- D 33 Ignition Coil Assembly No. 1
- D 34 Ignition Coil Assembly No. 3
- D 36 Ignition Coil Assembly No. 2
- D 39 Ignition Coil Assembly No. 4
- D 43 E.F.I. Engine Coolant Temperature Sensor
- D 45 Purge VSV (Vacuum Switching Valve Sub-Assembly)
- D 49 VVT Sensor (Camshaft Position Sensor) (Bank 1 Intake Side)
- D 58 Camshaft Timing Oil Control Valve Assembly (Intake Side)
- D 59 Engine Oil Pressure Switch Assembly
- D 60 Compressor with Motor Assembly
- D 61 Engine Water Pump Assembly
- D 64 Crank Position Sensor
- D 65 Shift Lever Position Sensor
- D 66 Ignition Coil Assembly No. 1
- D 67 Ignition Coil Assembly No. 3
- D 68 Ignition Coil Assembly No. 2
- D 69 Ignition Coil Assembly No. 4

- E 1 Compressor with Motor Assembly
- E 2 Inverter with Converter Assembly

- S 1 Inverter with Converter Assembly


- a 1 Knock Control Sensor (Bank 1)

- d 1 Inverter with Converter Assembly
- d 2 Hybrid Vehicle Transaxle Assembly

- e 1 Inverter with Converter Assembly
- e 2 Hybrid Vehicle Transaxle Assembly

- z 16 Cooling Fan ECU , Cooling Fan Motor
- z 17 Cooling Fan ECU , No. 2 Cooling Fan Motor

Position of Parts in Engine Compartment <RHD>

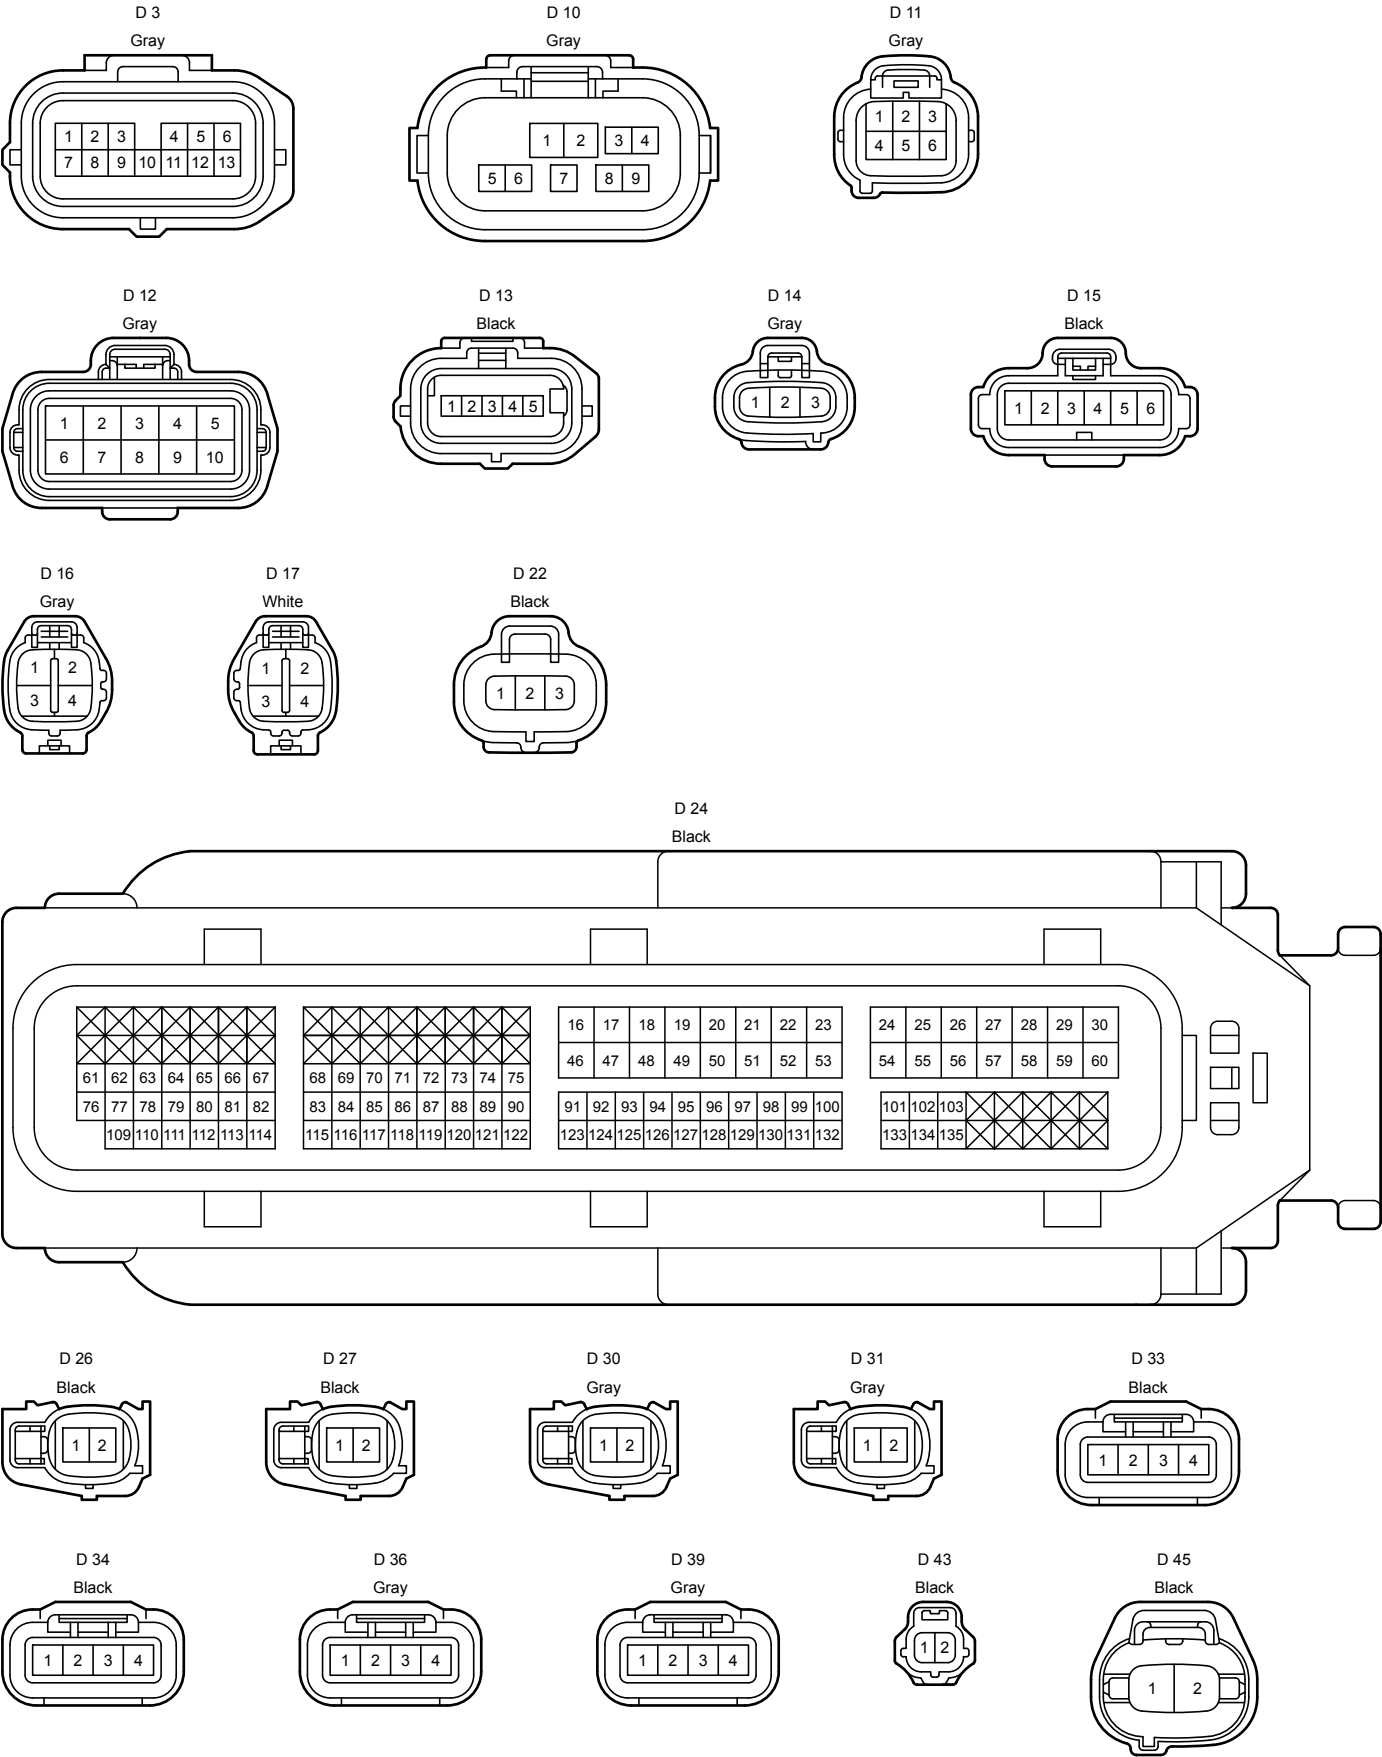

Position of Parts in Engine Compartment <RHD>

