


Position of Parts in Body <LHD>

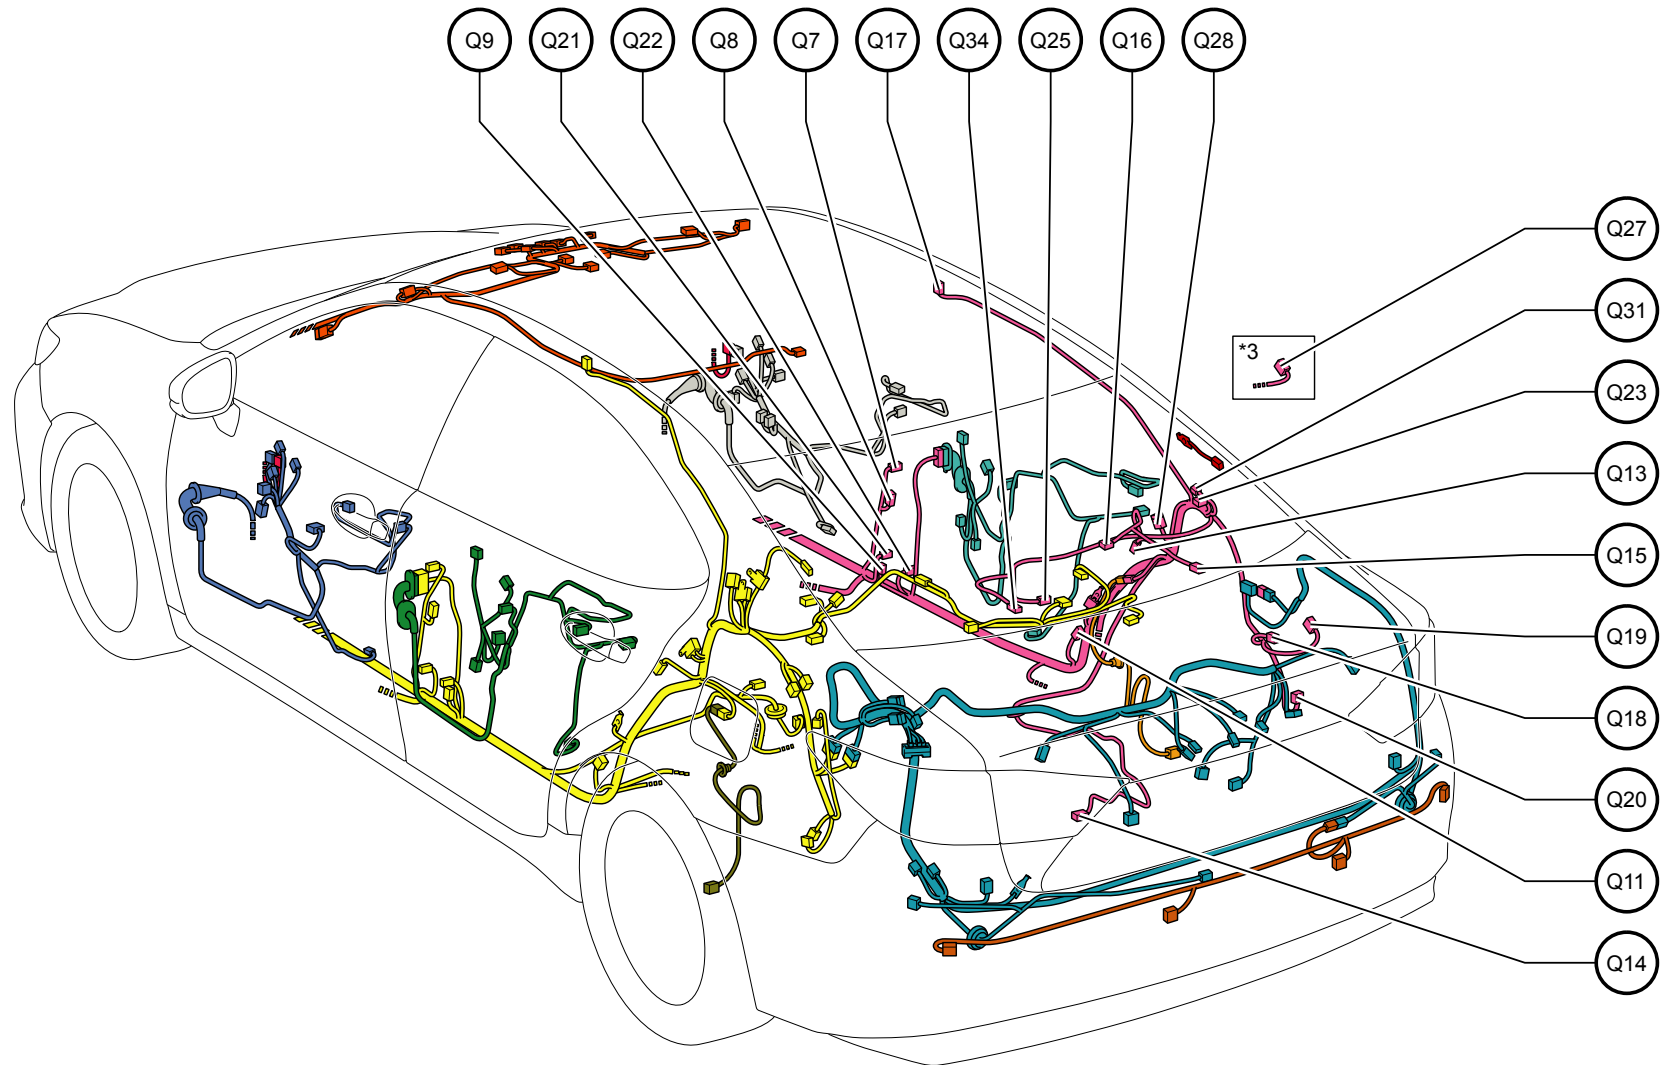

* 3: Refer to the Service Bulletin for the installation position of the parts.

- Q 7 Front Door Courtesy Light Switch Assembly RH
- Q 8 Side Airbag Sensor Assembly RH
- Q 9 Front Seat Outer Belt Assembly RH
- Q 11 Rear Airbag Sensor RH
- Q 13 Rear Door Courtesy Light Switch Assembly RH
- Q 14 Rear Height Control Sensor Sub-Assembly RH
- Q 15 Rear Header Speaker Assembly RH
- Q 16 Stereo Component Speaker Assembly
- Q 17 Curtain Shield Airbag Assembly RH
- Q 18 Battery Thermometer Sensor (Thermistor Assembly)
- Q 19 Security Horn Assembly
- Q 20 Fusible Link Block Assembly
- Q 21 Front Seat Outer Belt Assembly RH
- Q 22 Front Seat Outer Belt Assembly RH
- Q 23 Rear Seat 3 Point Type Belt Assembly Outer RH
- Q 25 No. 1 Indoor Electrical Key Antenna Assembly (Inside Luggage Compartment)
- Q 27 Theft Warning Siren Assembly
- Q 28 Junction Connector
- Q 31 No. 3 Antenna Cord Sub-Assembly
- Q 34 Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)

Position of Parts in Body <LHD>

