
 
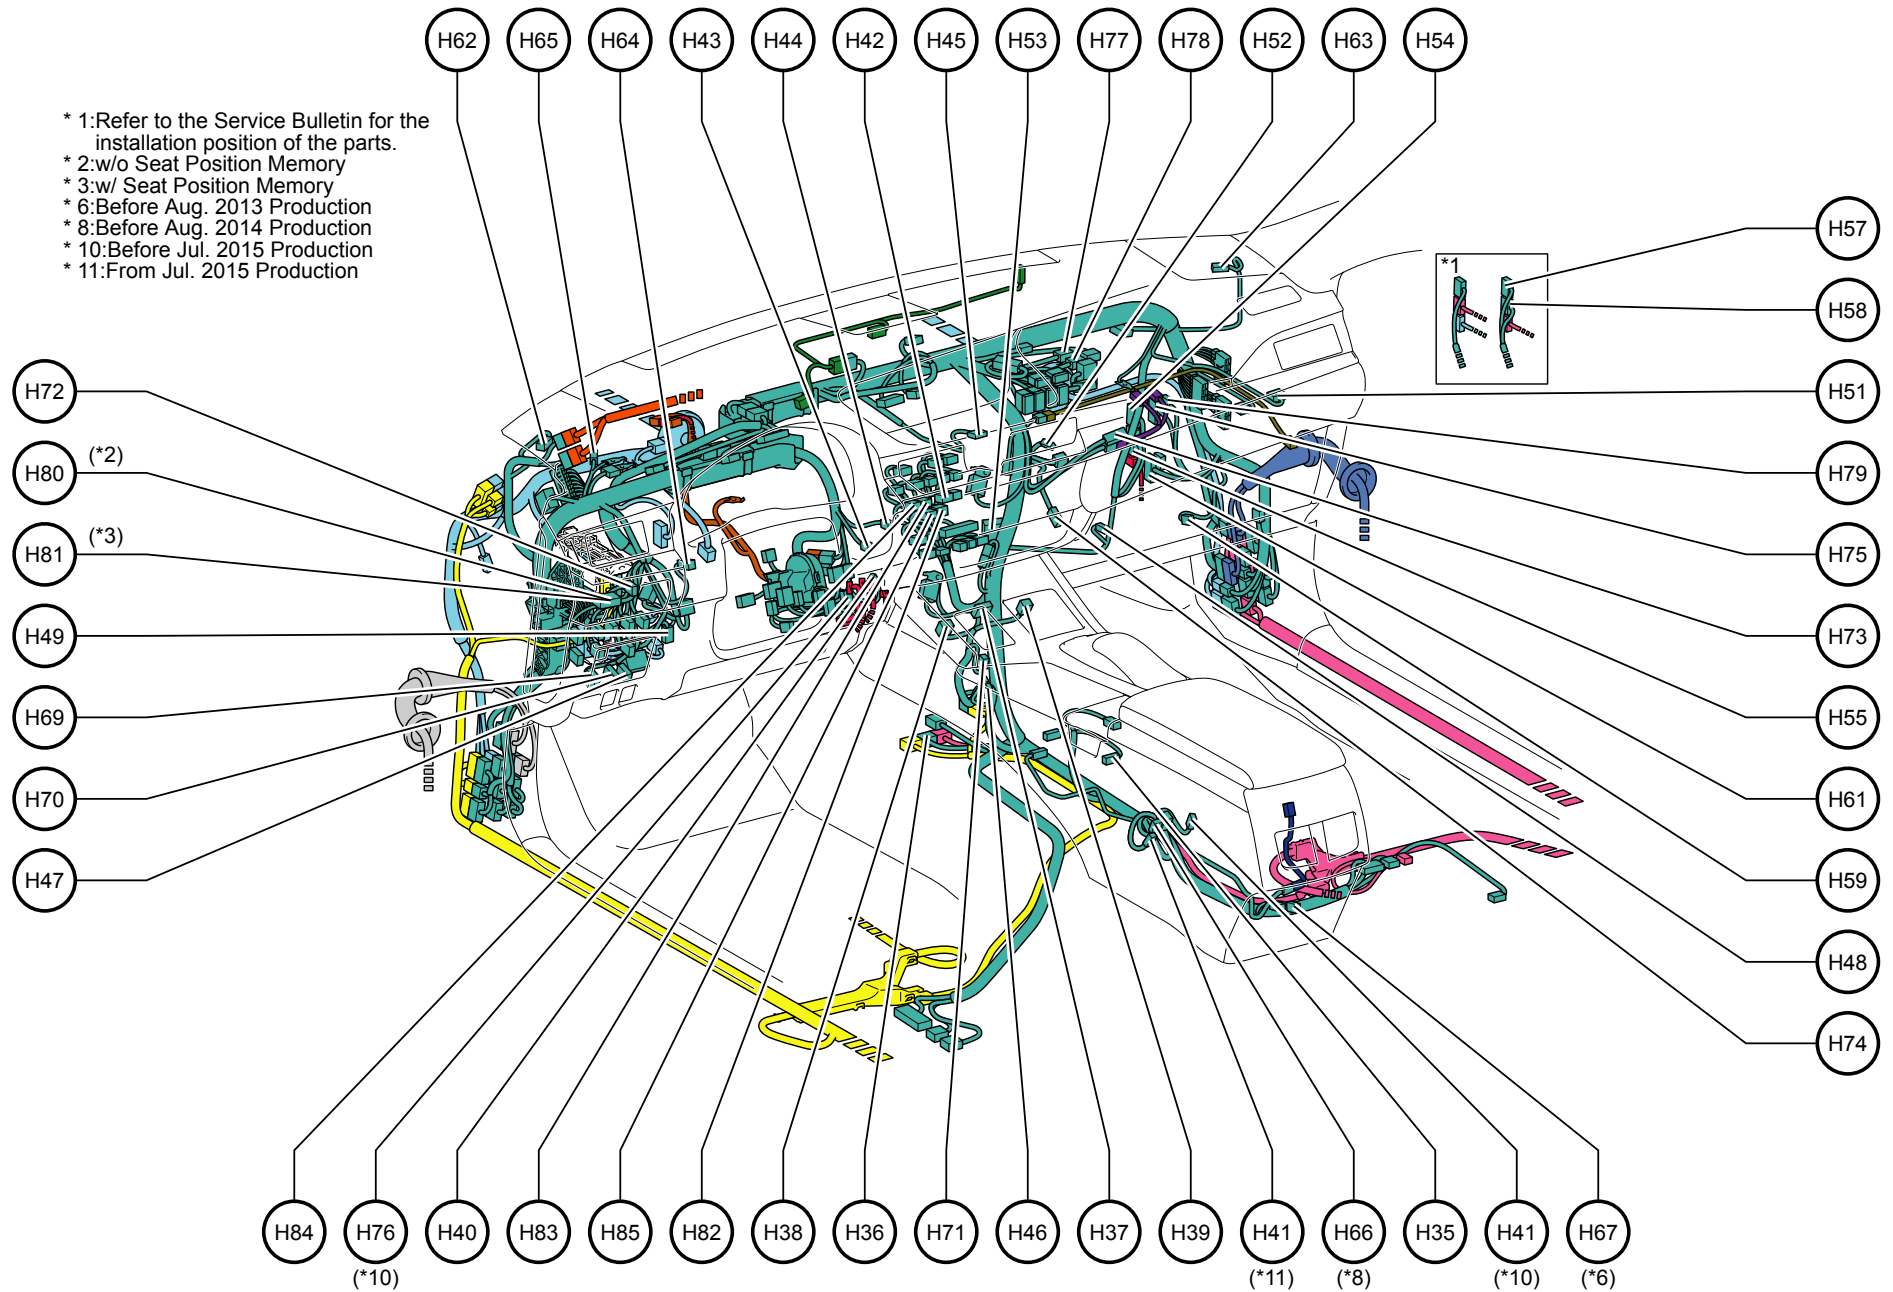

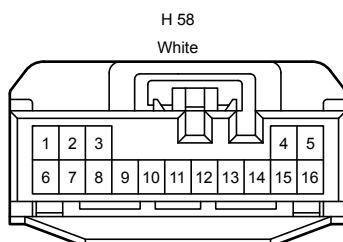
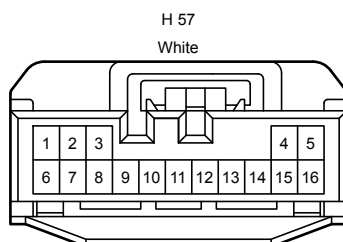
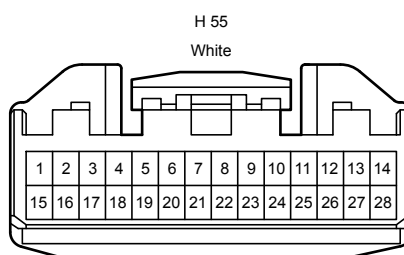
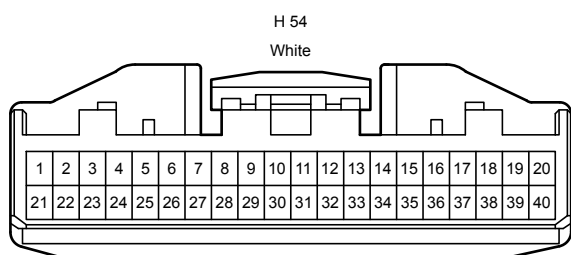
 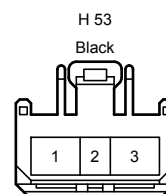
 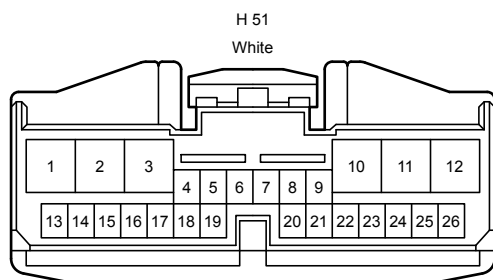
 


 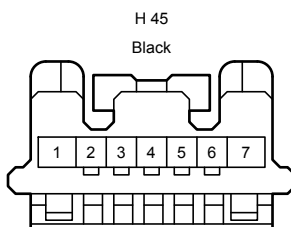
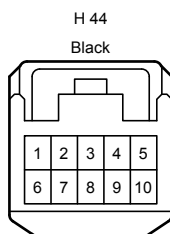
 
 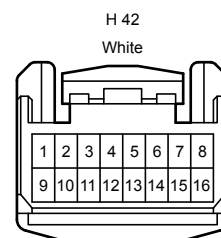


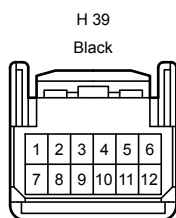
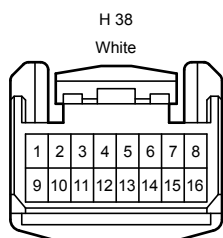
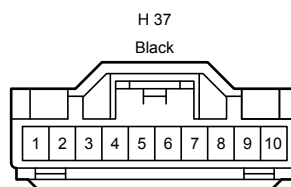


Position of Parts in Instrument Panel <LHD>








 

 





 

 



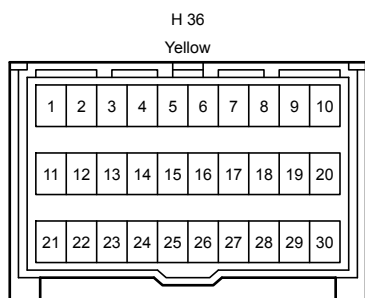


H 35	No. 1 Indoor Electrical Key Antenna Assembly (Front Floor)
H 36	Airbag Sensor Assembly
H 37	Combination Switch Assembly
H 38	Refreshing Seat Switch LH
H 39	Refreshing Seat Switch RH
H 40	No. 1 Clearance Warning Buzzer
H 41	No. 1 Power Outlet Socket Assembly
H 42	Radio Receiver Assembly
H 43	Cooler (Room Temperature Sensor) Thermistor
H 44	Power Switch
H 45	Clock Assembly
H 46	Shift Position Indicator (Indicator Light Wire Sub-Assembly)
H 47	Front Foot Light LH (No. 1 Interior Illumination Light Assembly LH)
H 48	Front Foot Light RH (No. 1 Interior Illumination Light Assembly RH)
H 49	Tire Pressure Warning Reset Switch (No. 1 Tire Pressure Warning Switch)
H 51	Windshield Wiper Relay Assembly
H 52	Glove Box Light Assembly
H 53	Blower Motor with Fan Sub-Assembly
H 54	A/C Amplifier Assembly
H 55	A/C Amplifier Assembly
H 57	Certification ECU
H 58	Certification ECU
H 59	Lower No. 2 Instrument Panel Airbag Assembly
H 61	Clearance Warning ECU Assembly
H 62	Front No. 2 Speaker Assembly LH
H 63	Front No. 2 Speaker Assembly RH
H 64	Trip Switch
H 65	Skid Control Buzzer Assembly
H 66	No. 1 Stereo Jack Adapter Assembly
H 67	Cigarette Lighter Illumination Assembly
H 69	Luggage Door Opening Switch Assembly
H 70	Fuel Lid Opener Switch
H 71	Integration Control & Panel Assembly
H 72	Retractable Outer Mirror Switch
H 73	Instrument Panel Ambient Light (Interior Illumination Light Sub-Assembly)
H 74	Luggage Door Opening Cancel Switch Assembly
H 75	Driving Support ECU Assembly
H 76	Spiral Cable Sub-Assembly
H 77	Seat Belt Control ECU
H 78	Seat Belt Control ECU
H 79	Tire Pressure Monitor Initiator Driver
H 80	Outer Mirror Switch Assembly
H 81	Outer Mirror Switch Assembly
H 82	Radio Receiver Assembly
H 83	Radio Receiver Assembly
H 84	Radio Receiver Assembly
H 85	Radio Receiver Assembly

Position of Parts in Instrument Panel <LHD>

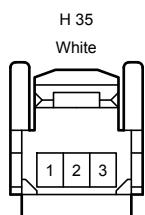


Position of Parts in Instrument Panel <LHD>

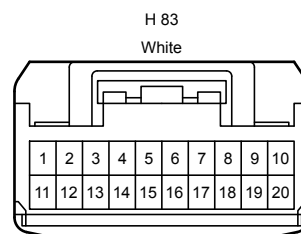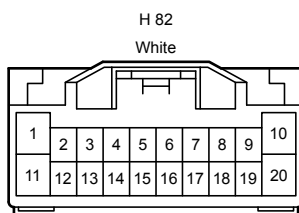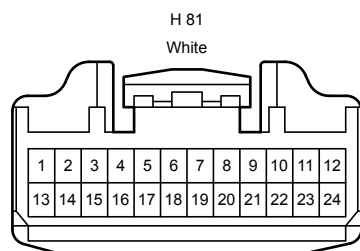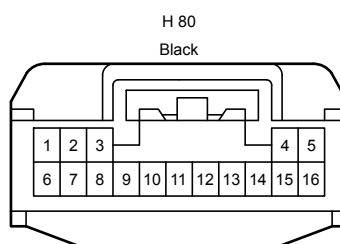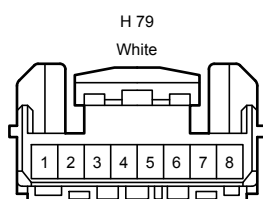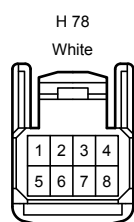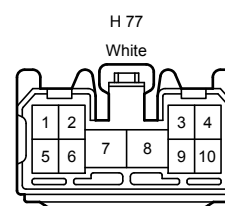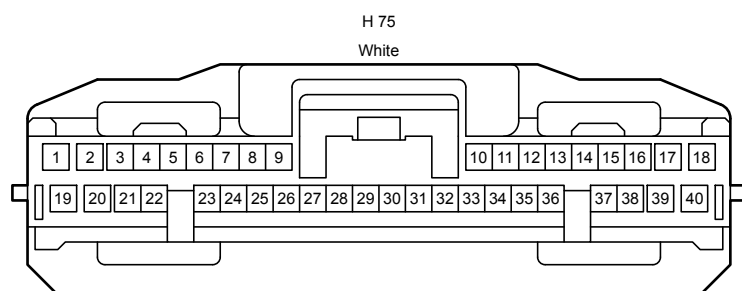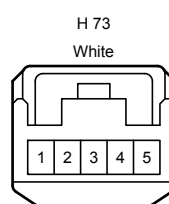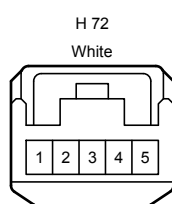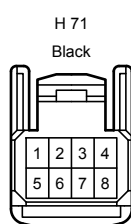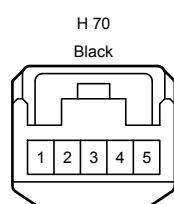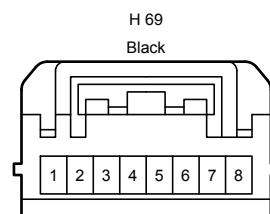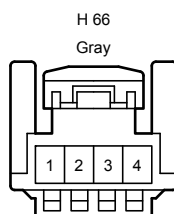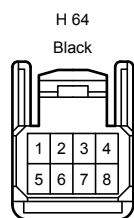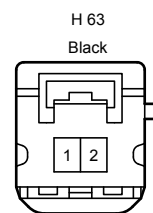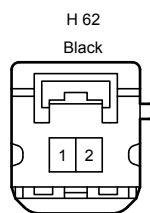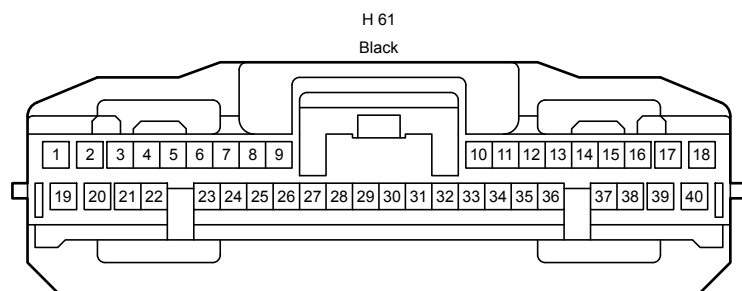

H 84

White

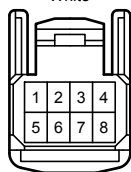

H 85

White

