



Position of Parts in Instrument Panel <LHD>

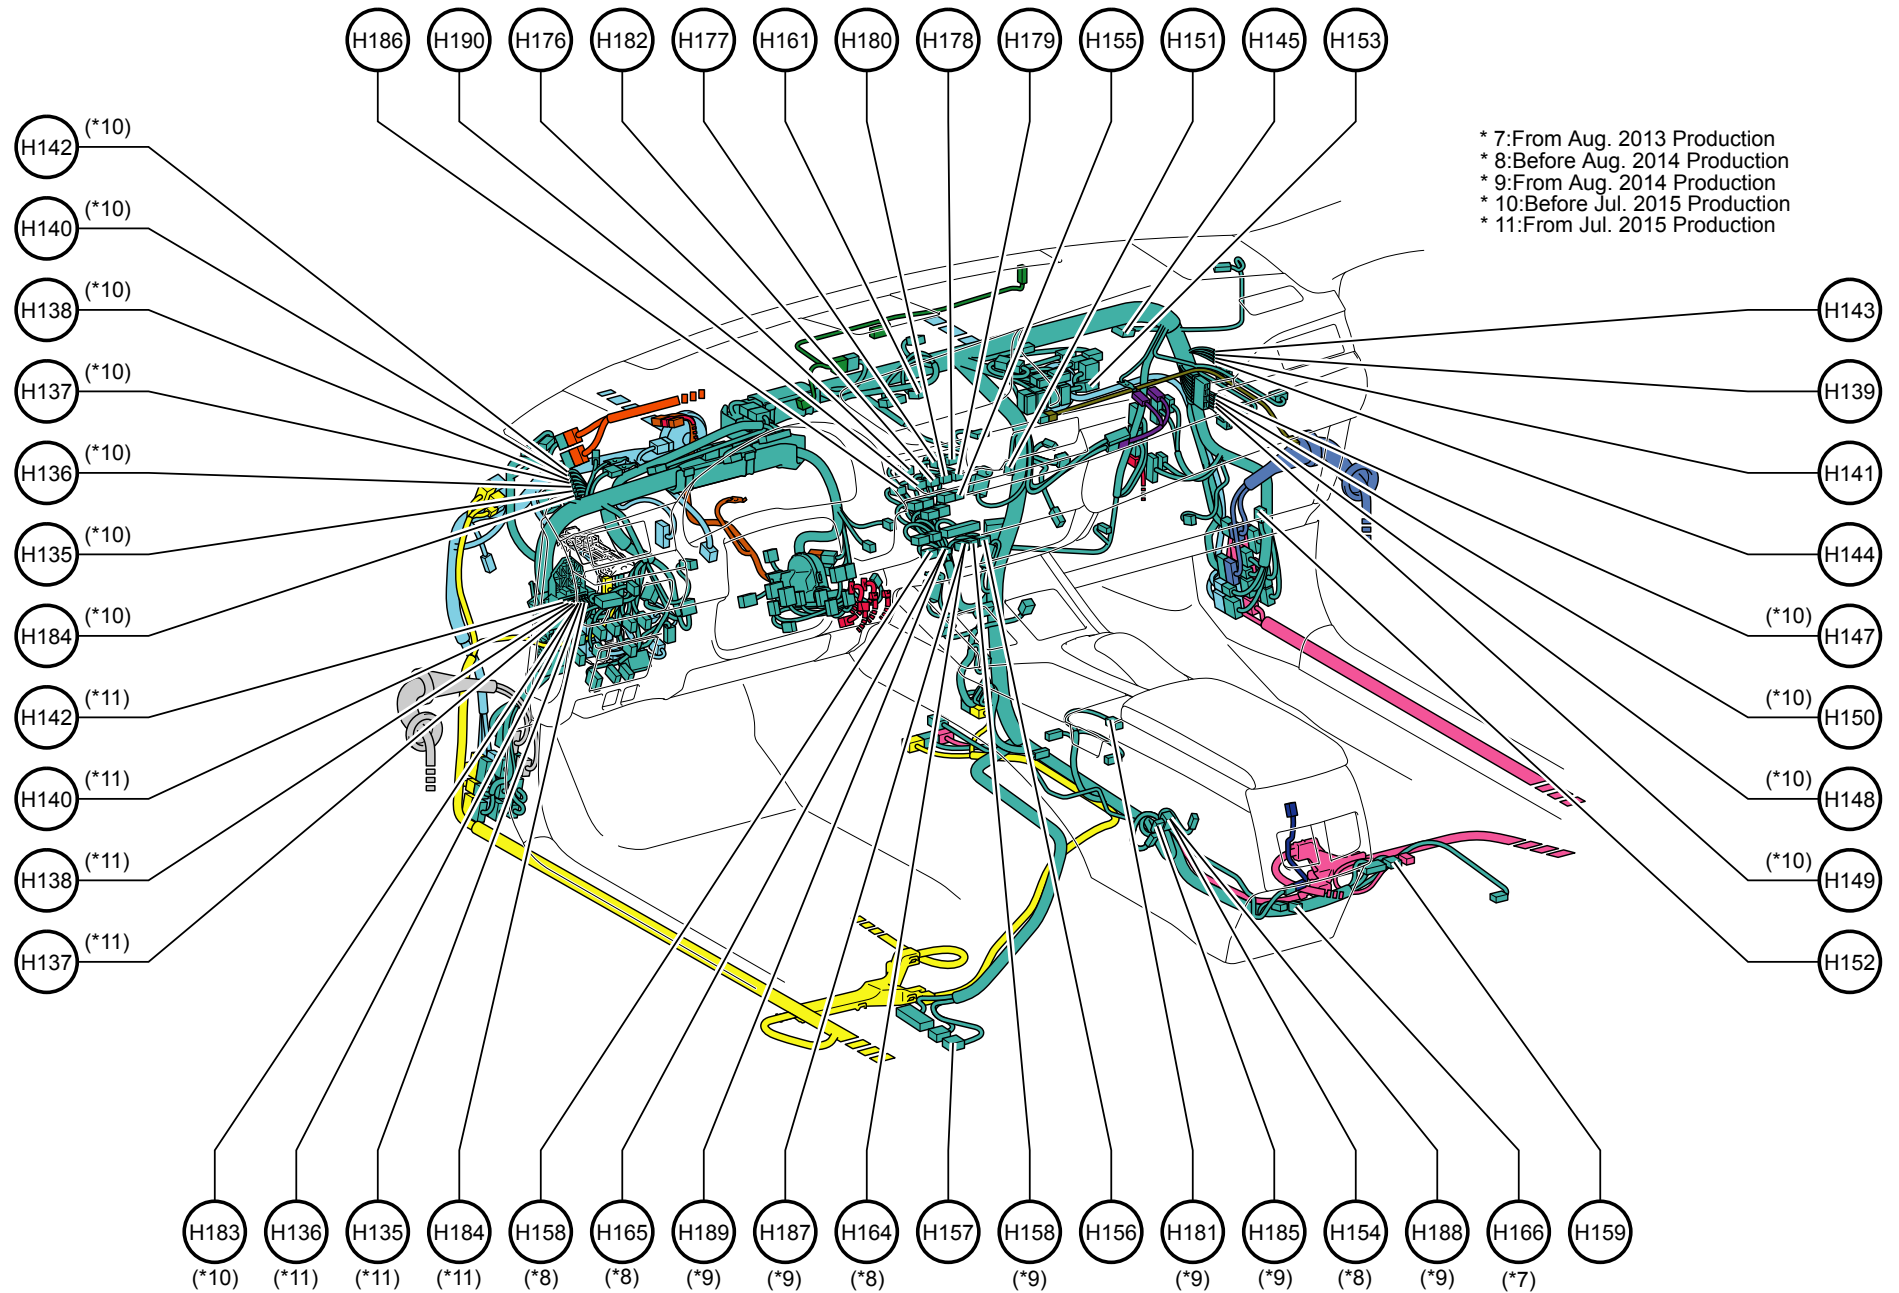

H 135	Junction Connector
H 136	Junction Connector
H 137	Junction Connector
H 138	Junction Connector
H 139	Junction Connector
H 140	Junction Connector
H 141	Junction Connector
H 142	Junction Connector
H 143	Junction Connector
H 144	Junction Connector
H 145	Junction Terminal
H 147	Junction Connector
H 148	Junction Connector
H 149	Junction Connector
H 150	Junction Connector
H 151	Option Connector (Remote Engine Starter)
H 152	Option Connector (Glass Breakage Sensor)
H 153	Panel Relay
H 154	No. 1 Stereo Jack Adapter Assembly
H 155	Radio Receiver Assembly
H 156	Multi-Media Module Receiver Assembly or Radio Receiver Assembly
H 157	Stereo Component Amplifier Assembly
H 158	Multi-Media Module Receiver Assembly or Radio Receiver Assembly
H 159	Telematics Transceiver
H 161	Multi-Media Module Display
H 164	Multi-Media Module Receiver Assembly or Radio Receiver Assembly
H 165	Multi-Media Module Receiver Assembly or Radio Receiver Assembly
H 166	Cigarette Lighter Illumination Assembly
H 176	Radio Receiver Assembly
H 177	Radio Receiver Assembly
H 178	Radio Receiver Assembly
H 179	Radio Receiver Assembly
H 180	Radio Receiver Assembly
H 181	Remote Operation Switch
H 182	Radio Receiver Assembly
H 183	Junction Connector
H 184	Junction Connector
H 185	No. 1 Stereo Jack Adapter Assembly
H 186	Radio Receiver Assembly
H 187	Multi-Media Module Receiver Assembly or Radio Receiver Assembly
H 188	No. 1 Stereo Jack Adapter Assembly
H 189	Multi-Media Module Receiver Assembly or Radio Receiver Assembly
H 190	Radio Receiver Assembly

Position of Parts in Instrument Panel <LHD>

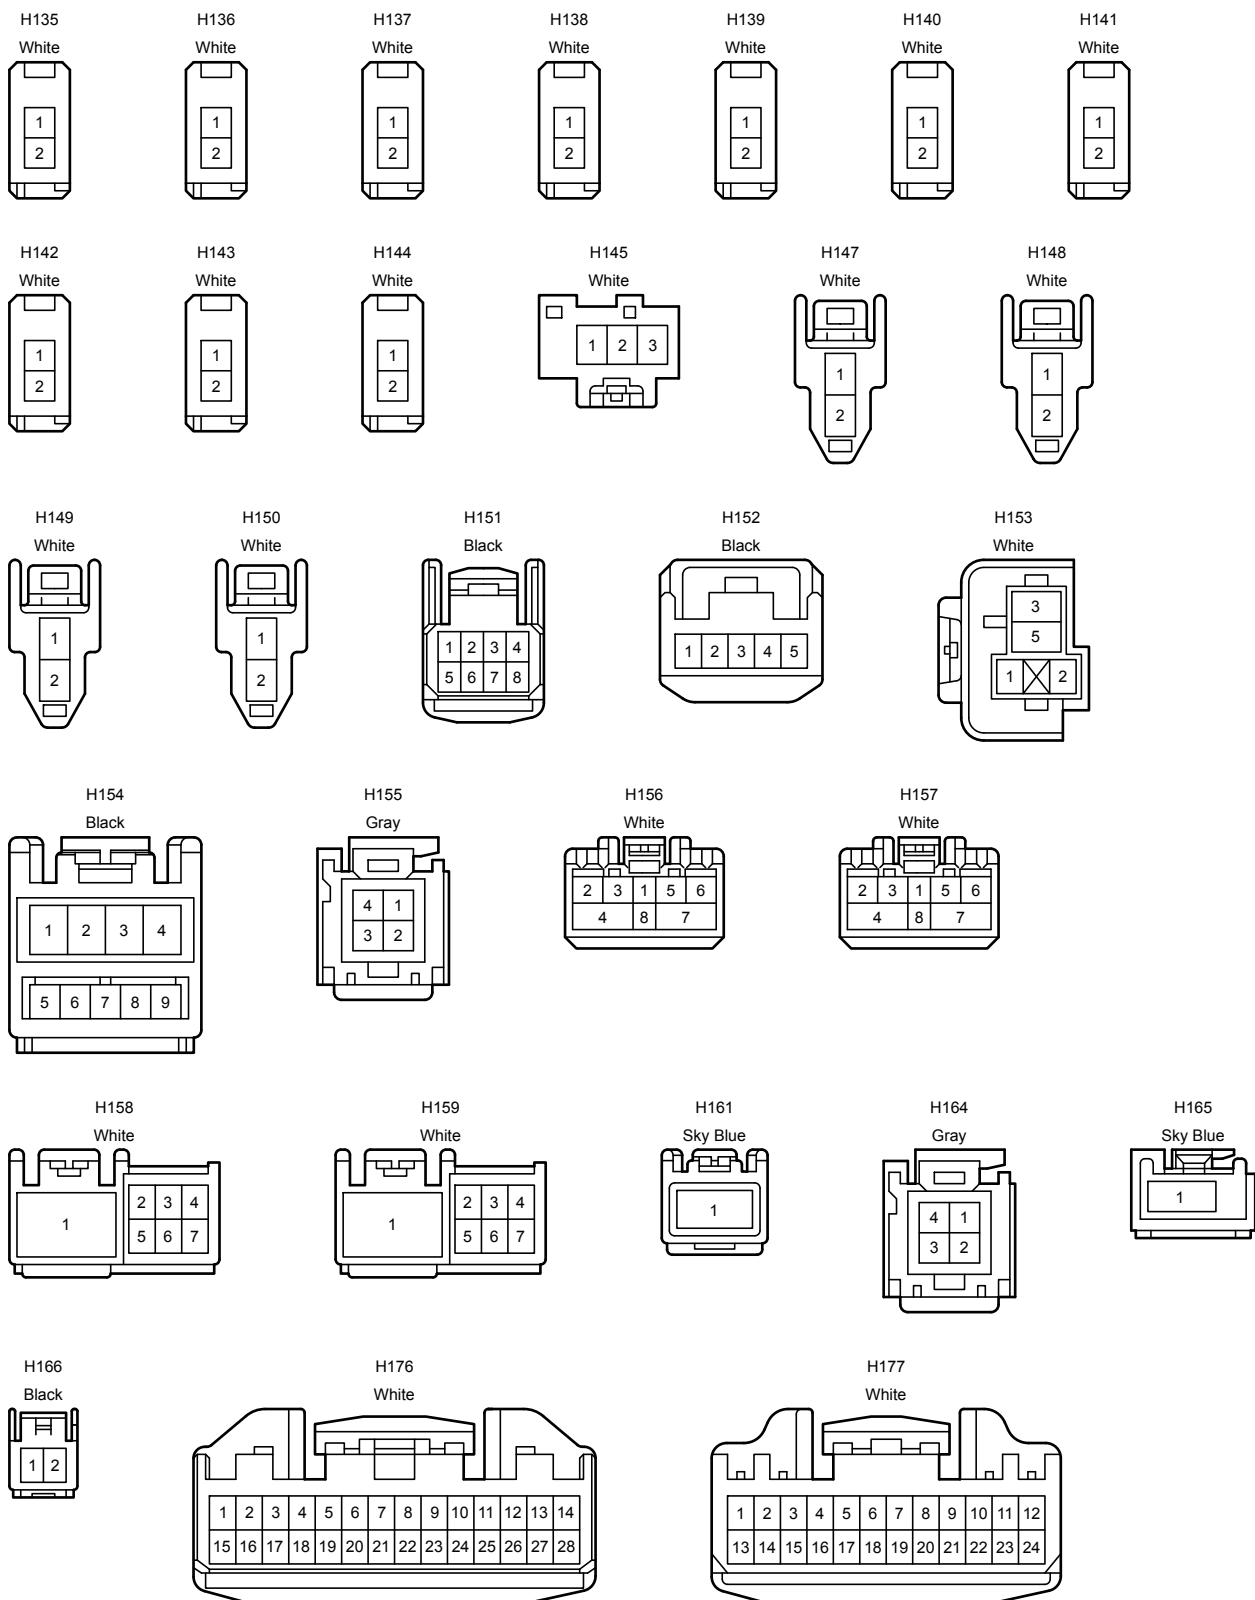

Position of Parts in Instrument Panel <LHD>

