




Cruise Control (A25A-FKS), ECT and A/T Indicator (A25A-FKS), Engine Control (A25A-FKS)

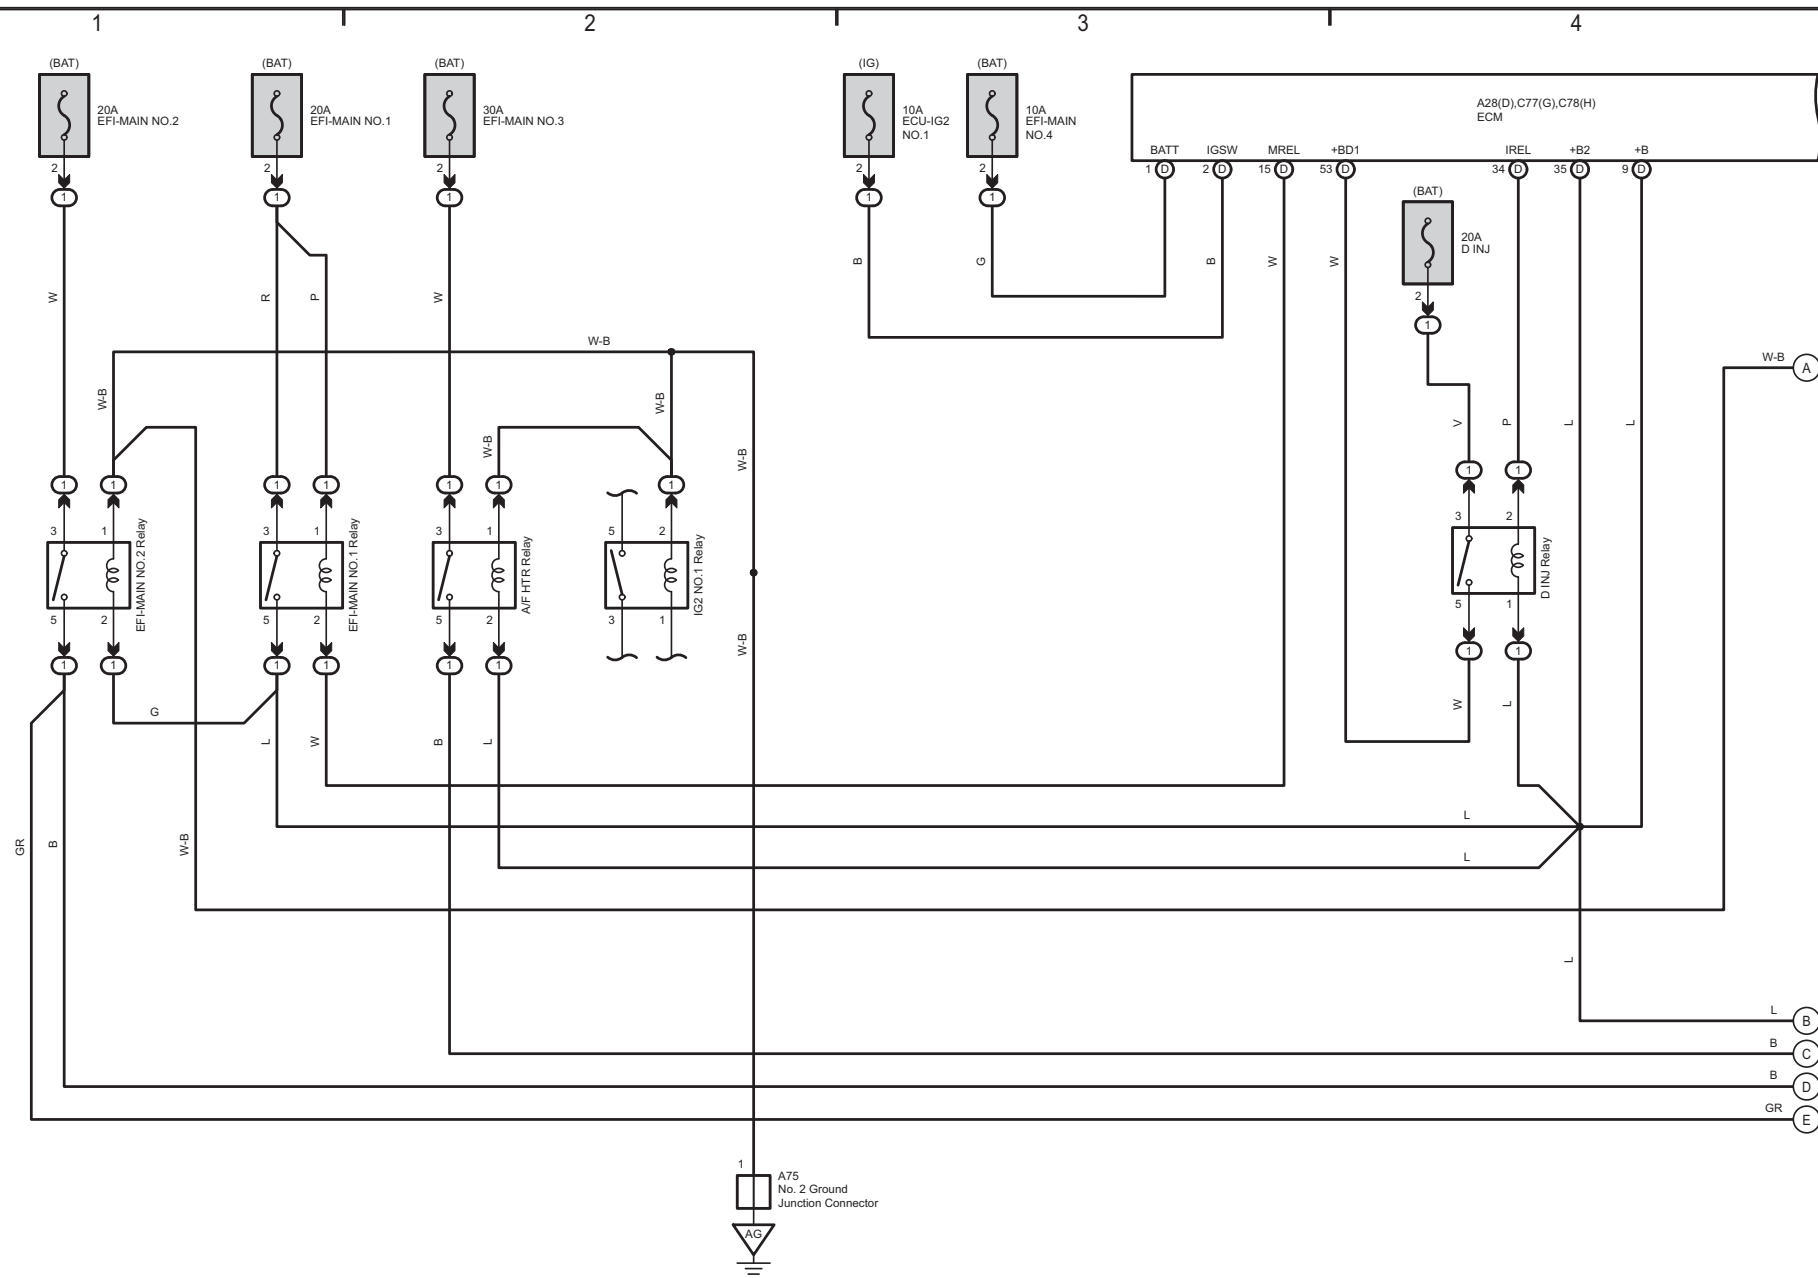


Cruise Control (A25A-FKS), ECT and A/T Indicator (A25A-FKS), Engine Control (A25A-FKS)

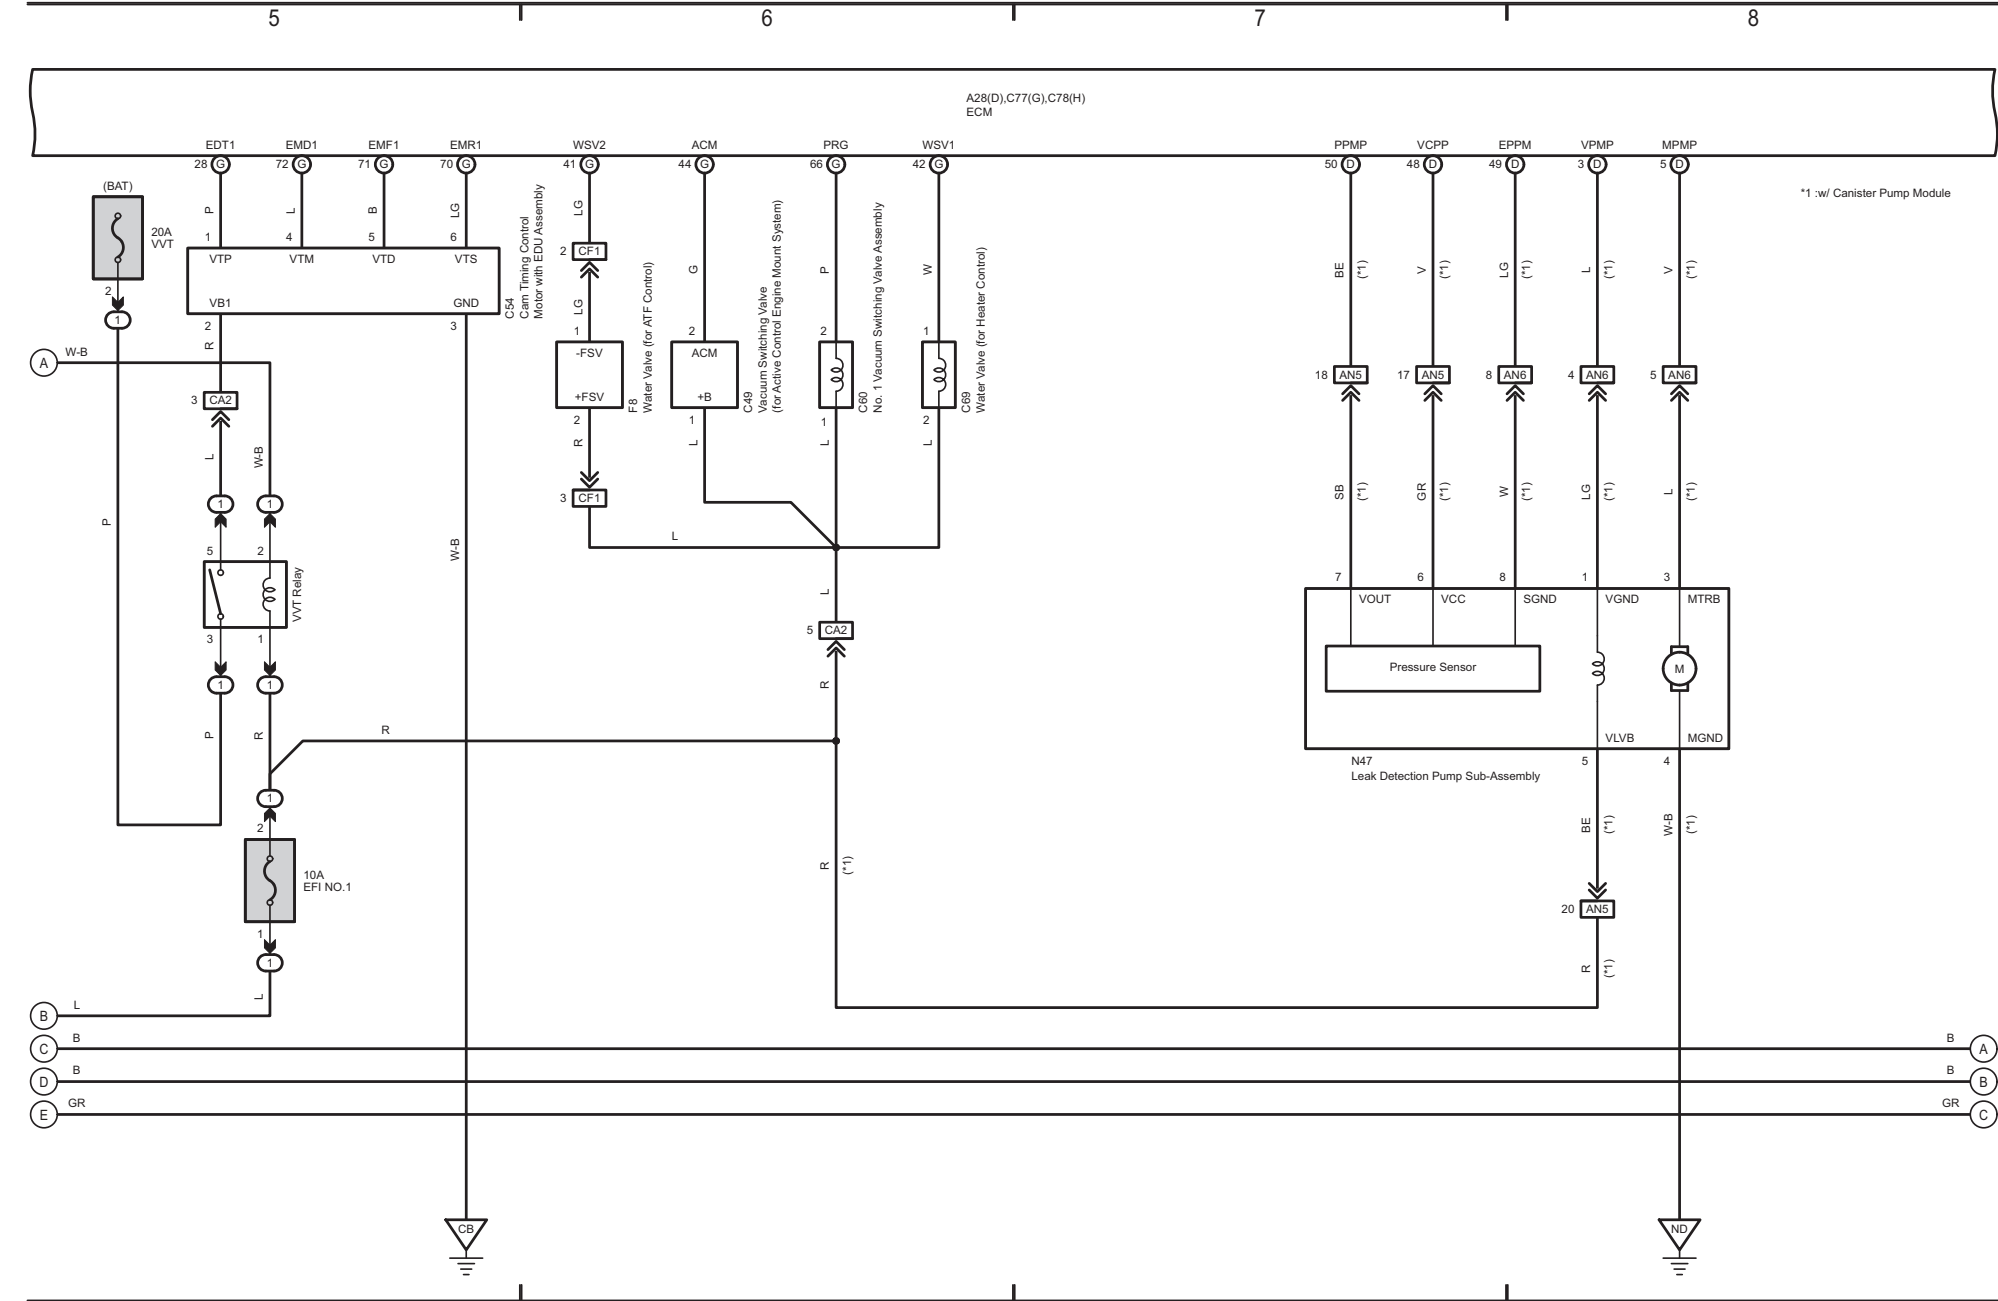


Cruise Control (A25A-FKS), ECT and A/T Indicator (A25A-FKS), Engine Control (A25A-FKS)

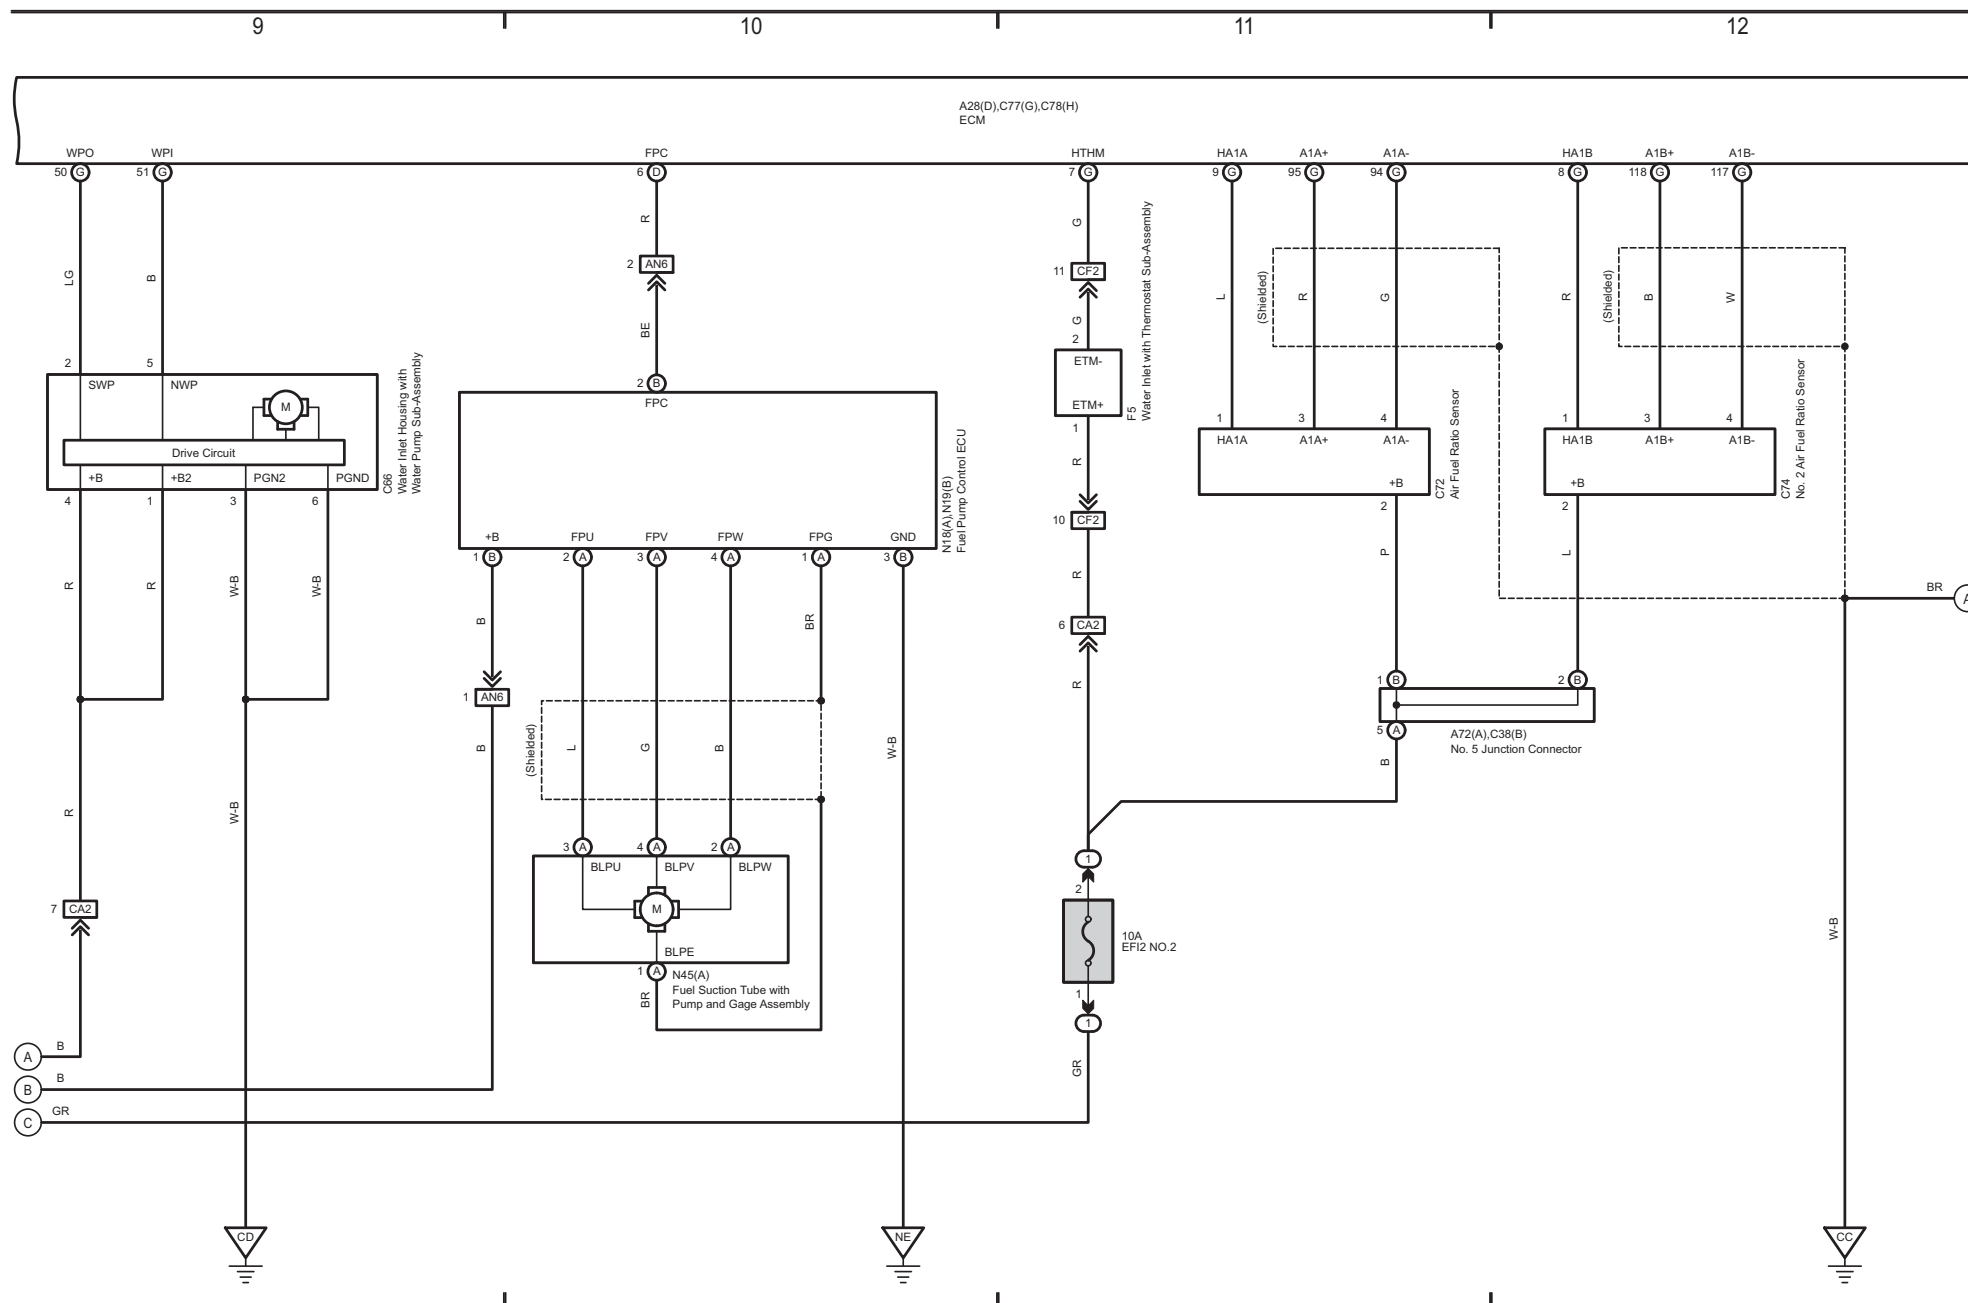


Cruise Control (A25A-FKS), ECT and A/T Indicator (A25A-FKS), Engine Control (A25A-FKS)

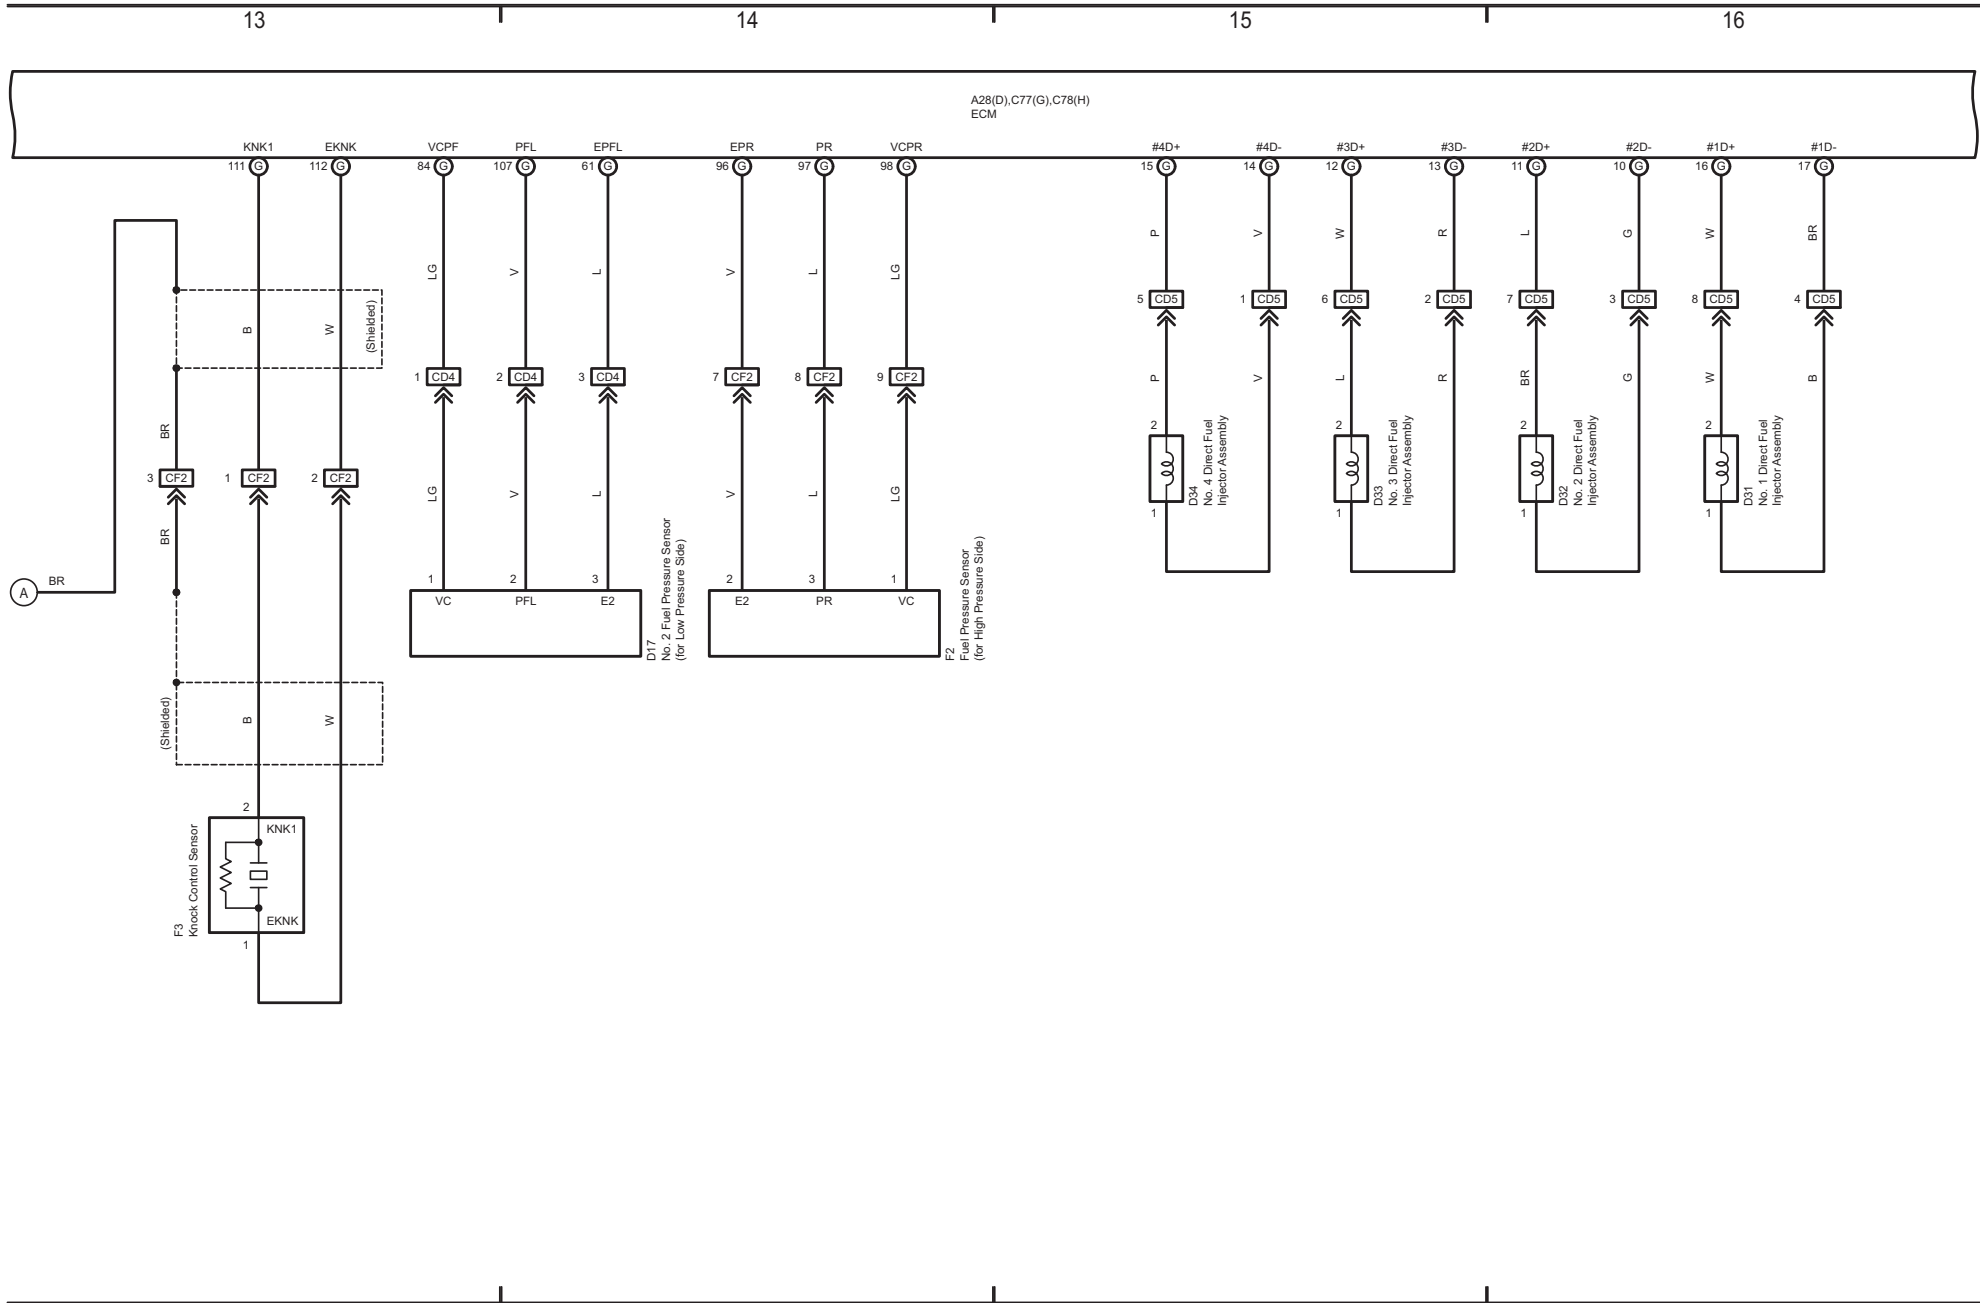


Cruise Control (A25A-FKS), ECT and A/T Indicator (A25A-FKS), Engine Control (A25A-FKS)

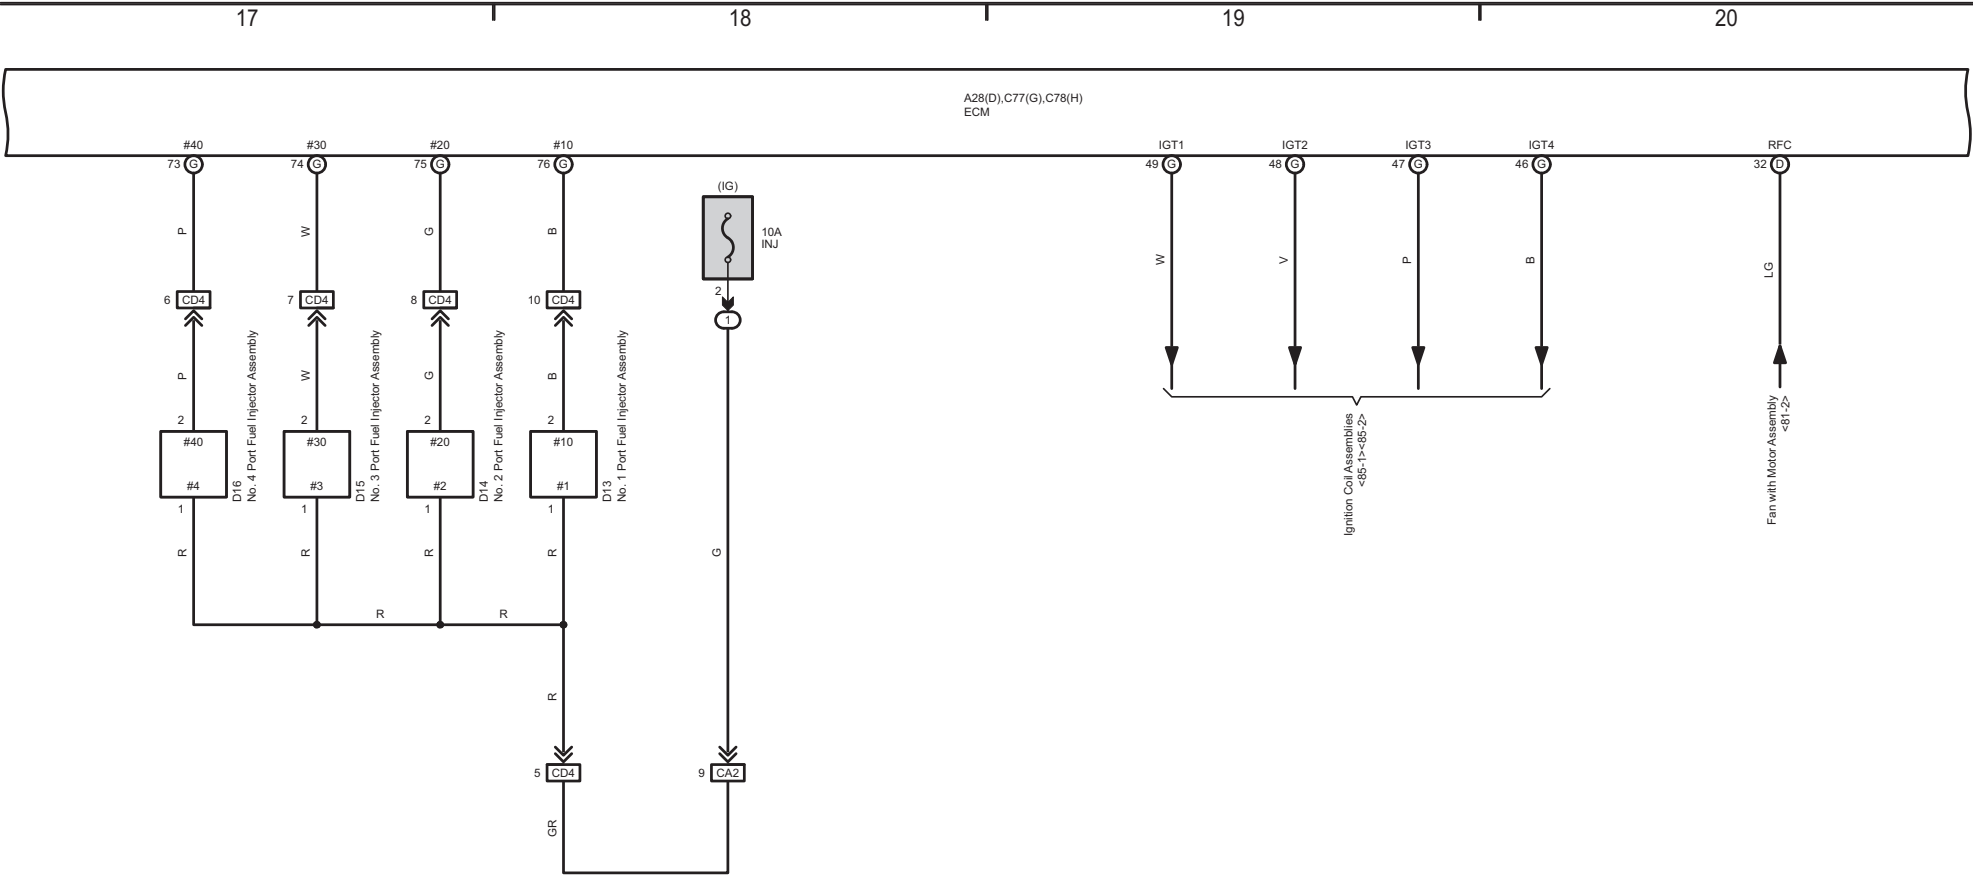


Cruise Control (A25A-FKS), ECT and A/T Indicator (A25A-FKS), Engine Control (A25A-FKS)

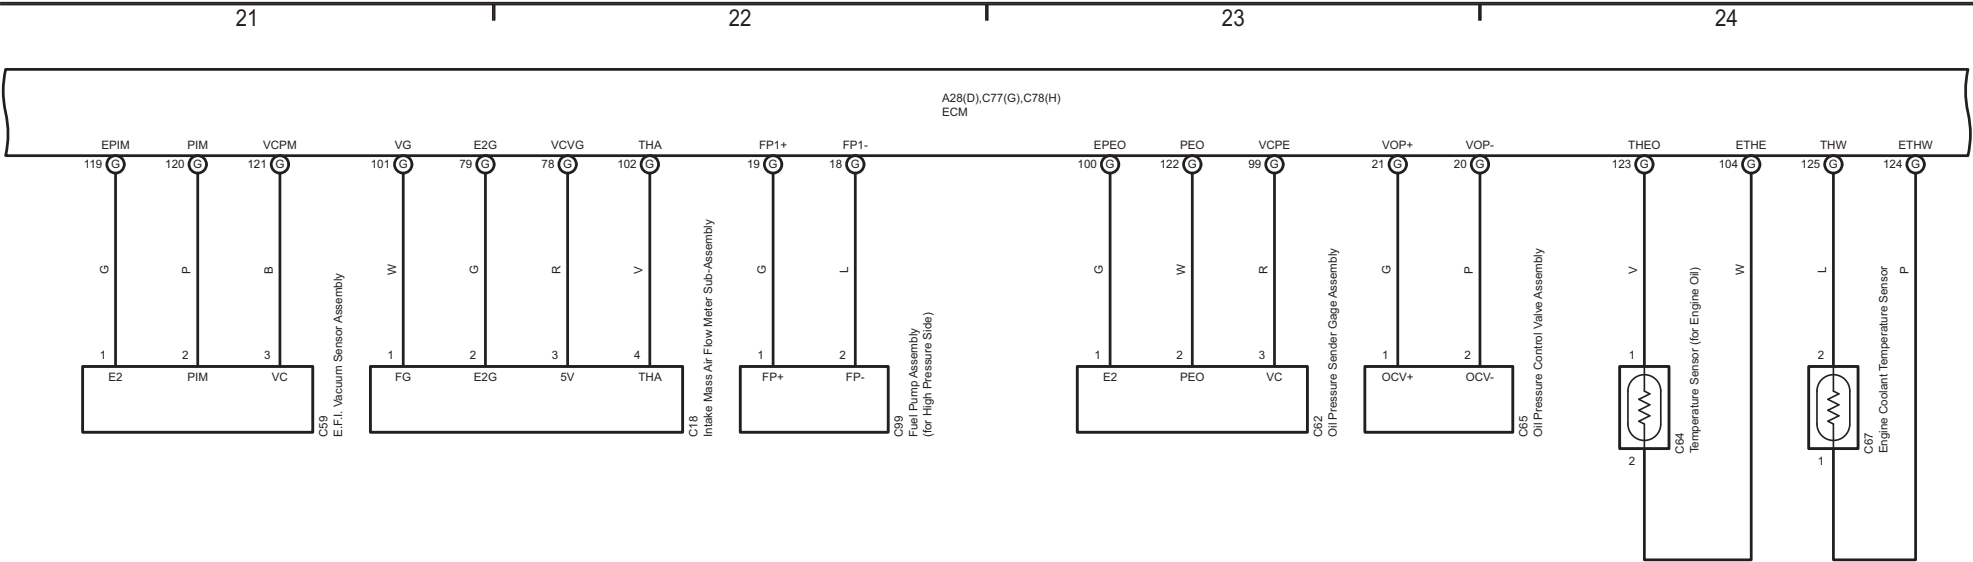


Cruise Control (A25A-FKS), ECT and A/T Indicator (A25A-FKS), Engine Control (A25A-FKS)

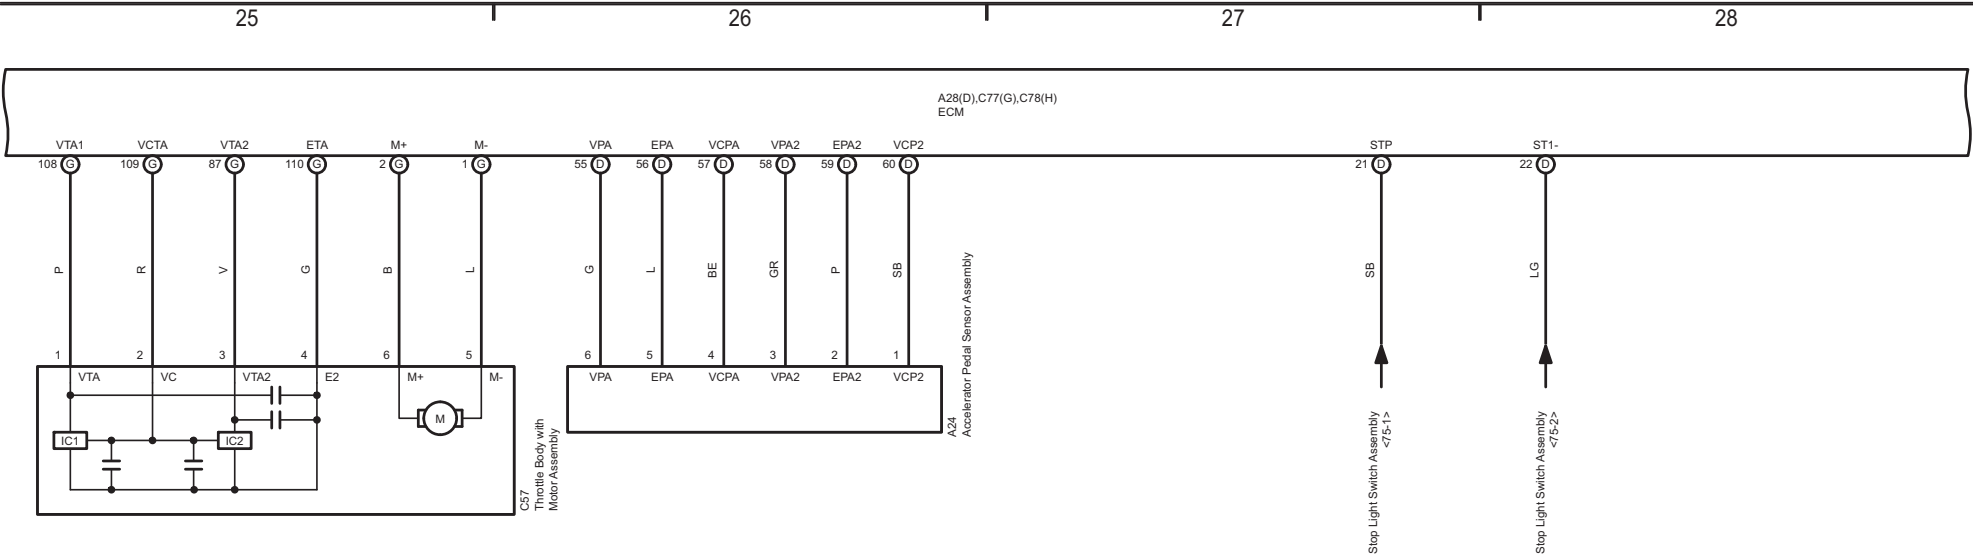


Cruise Control (A25A-FKS), ECT and A/T Indicator (A25A-FKS), Engine Control (A25A-FKS)

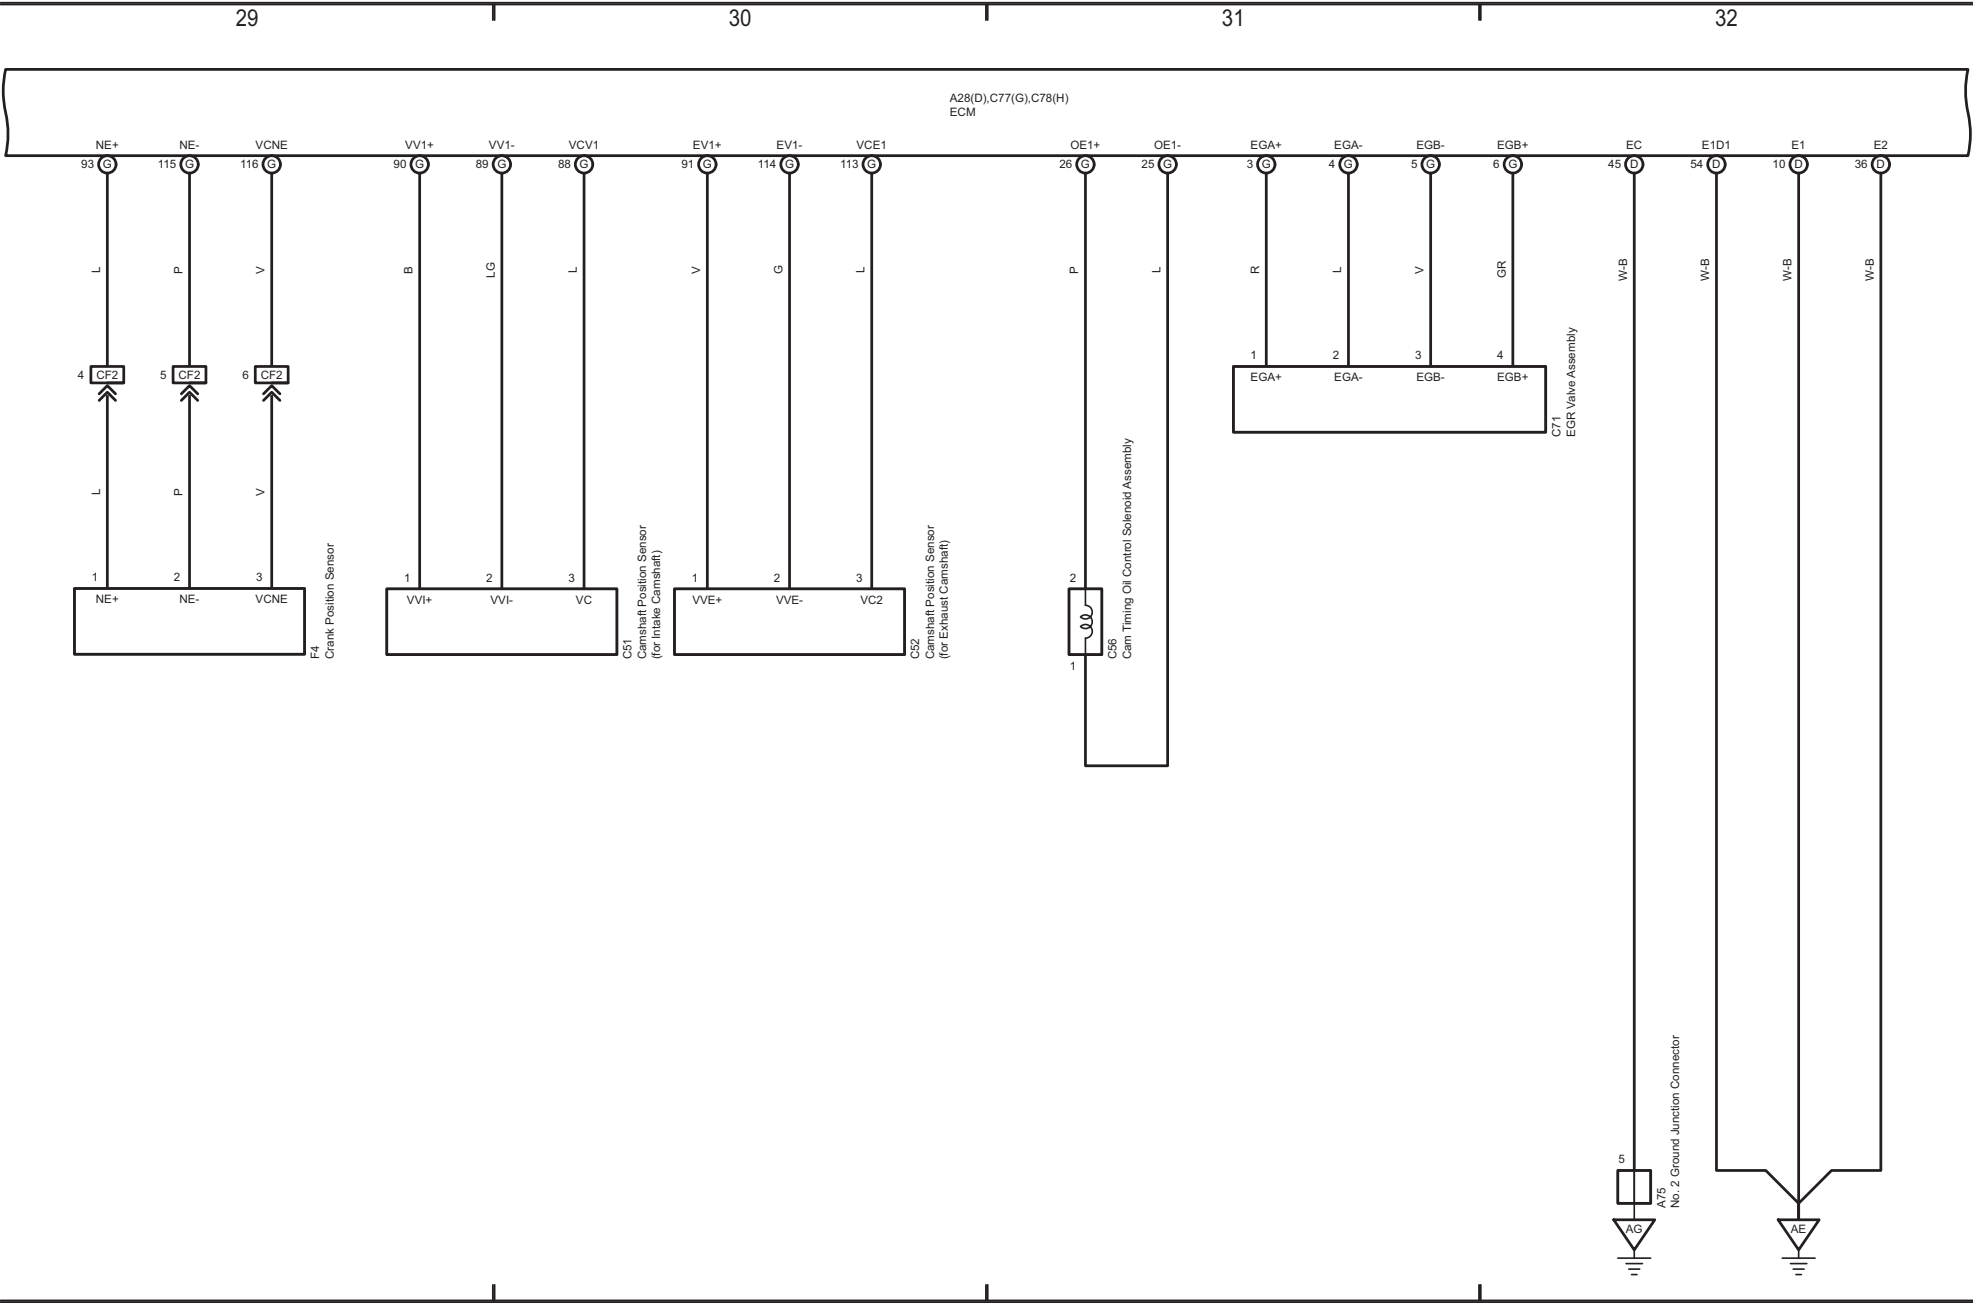


Cruise Control (A25A-FKS), ECT and A/T Indicator (A25A-FKS), Engine Control (A25A-FKS)

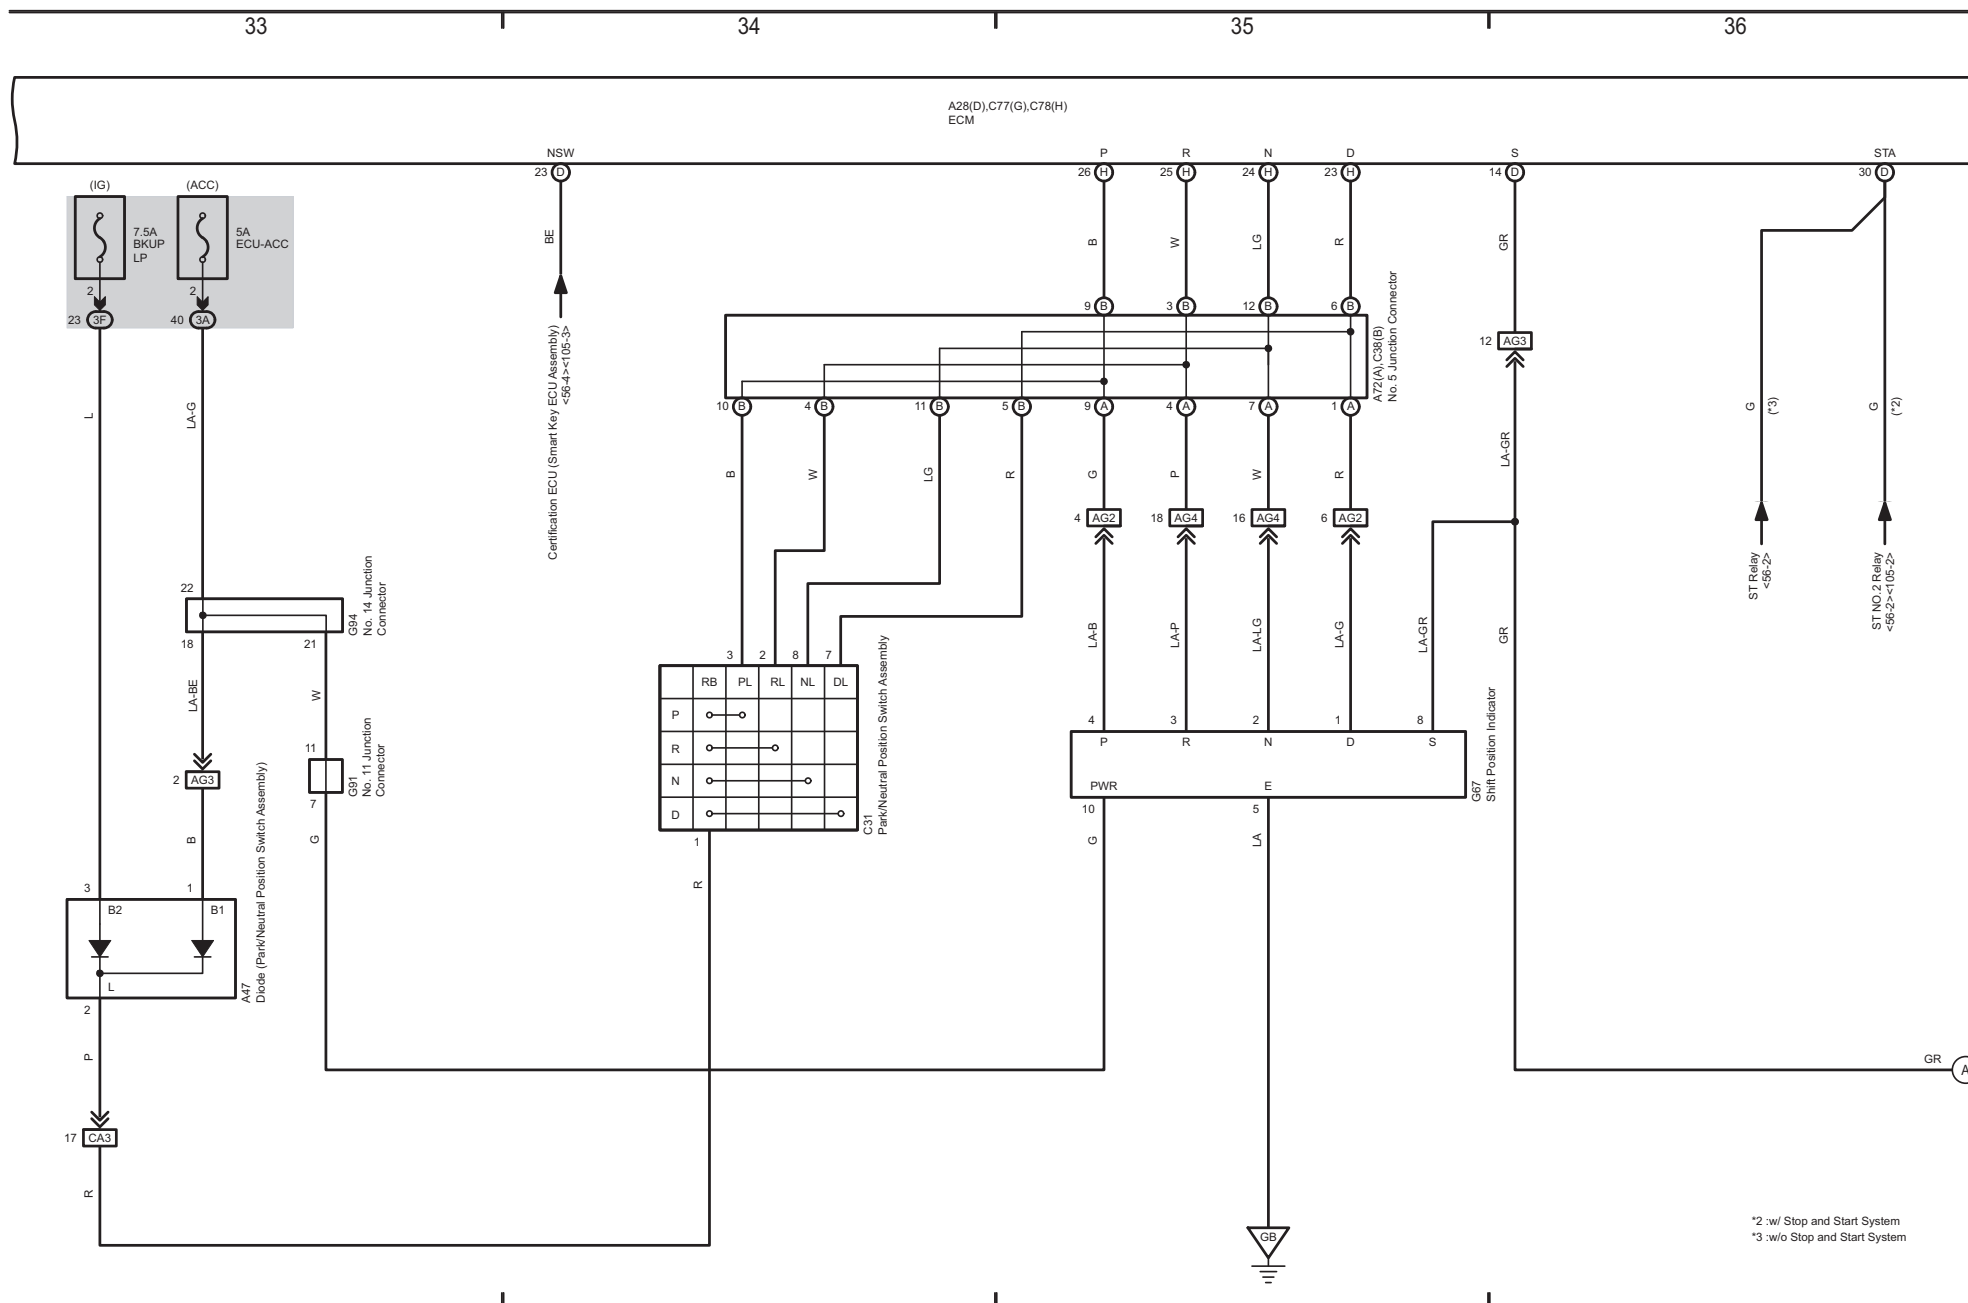

Cruise Control (A25A-FKS), ECT and A/T Indicator (A25A-FKS), Engine Control (A25A-FKS)

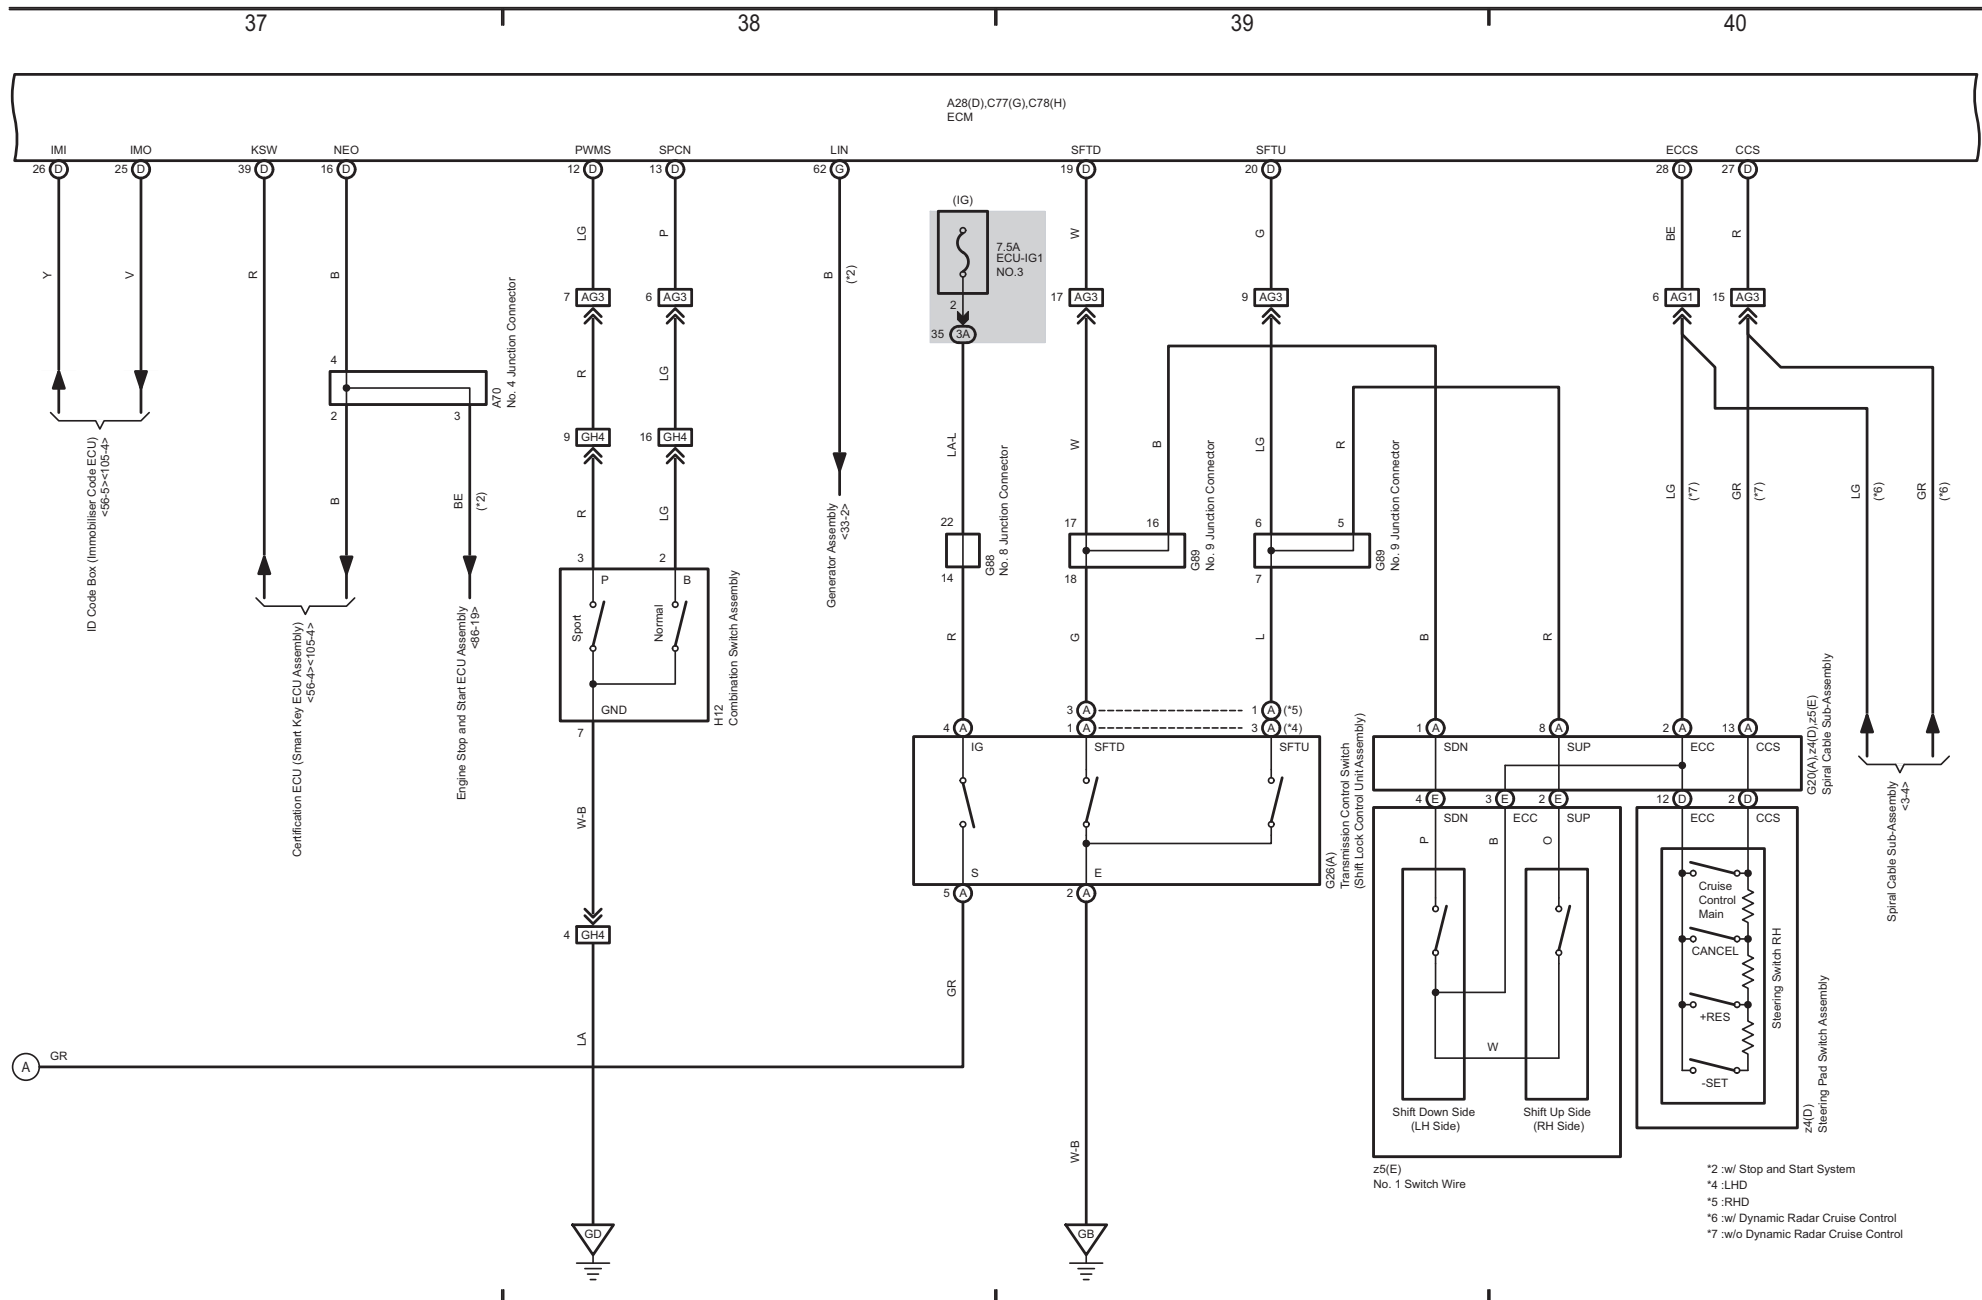

Cruise Control (A25A-FKS), ECT and A/T Indicator (A25A-FKS), Engine Control (A25A-FKS)

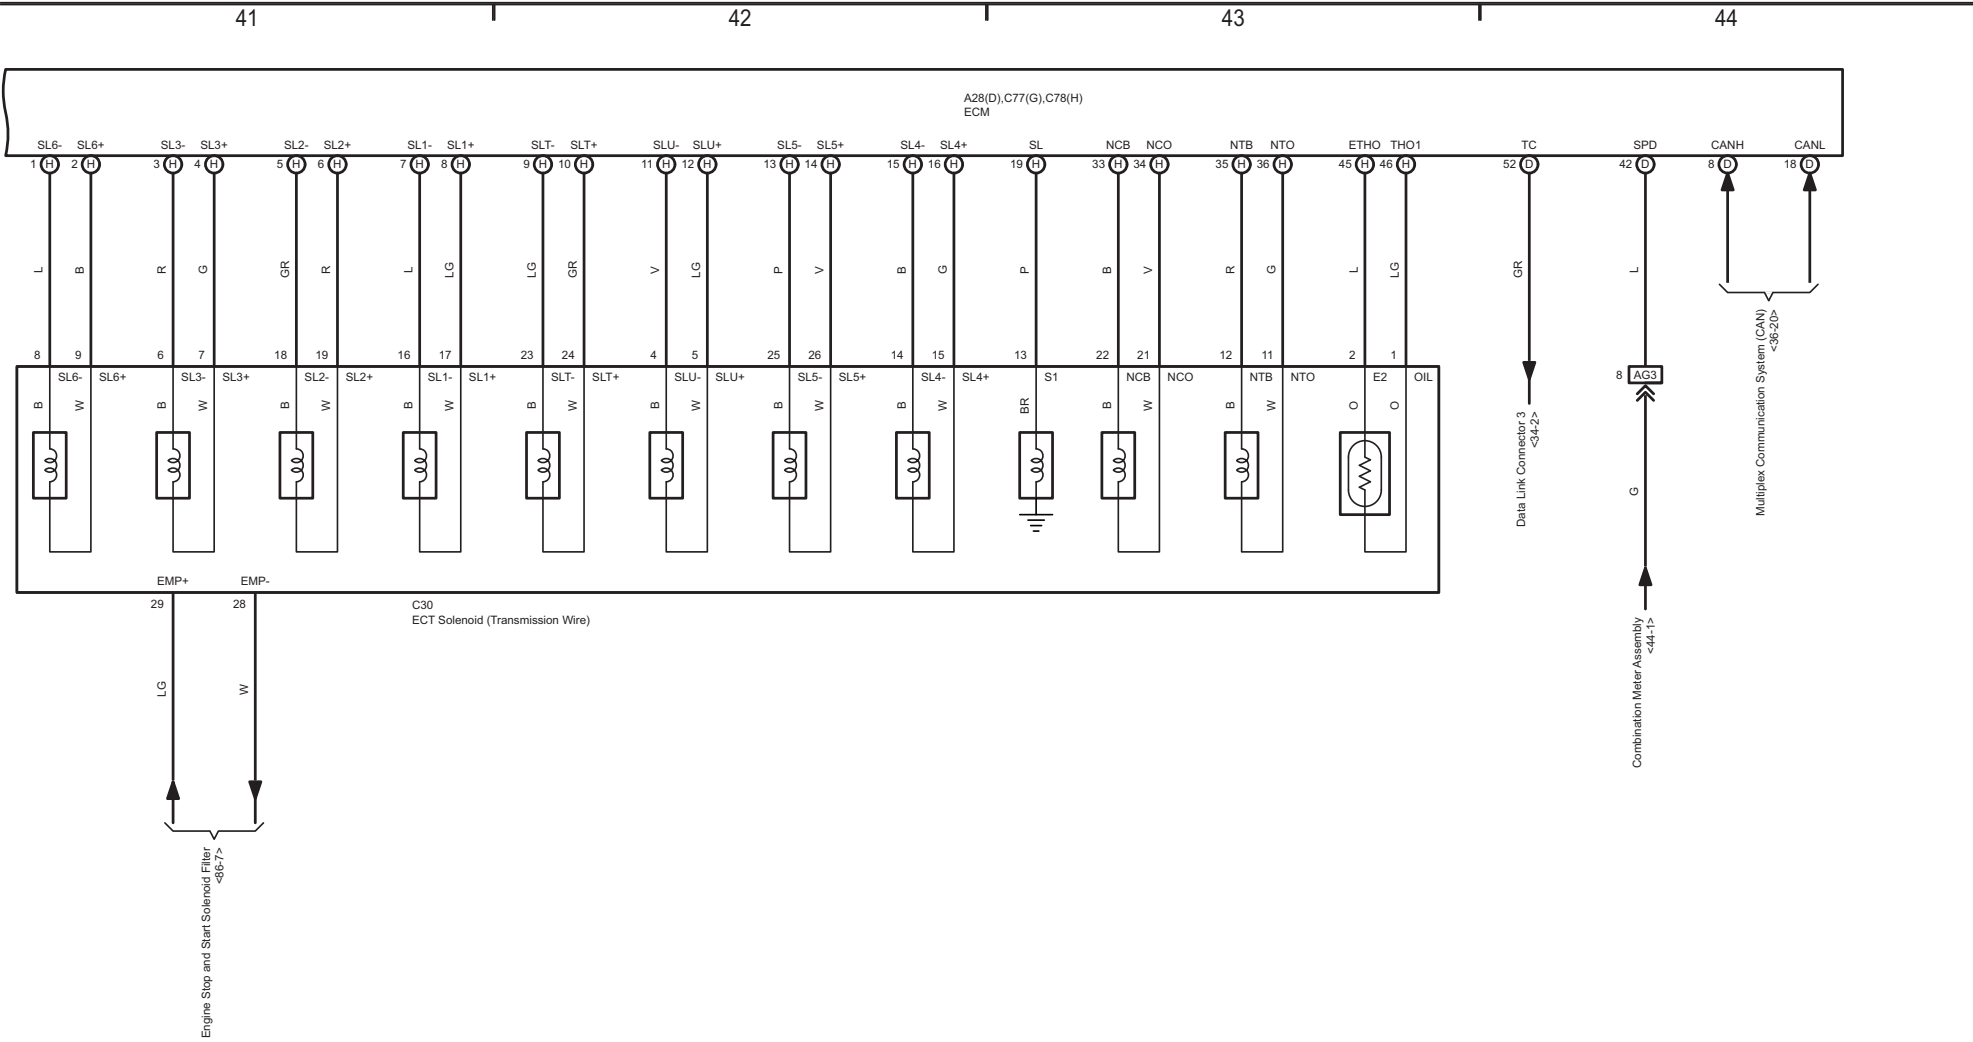

Cruise Control (A25A-FKS), ECT and A/T Indicator (A25A-FKS), Engine Control (A25A-FKS)

