




[Engine Room Relay Block Assembly No. 1 and Engine Room Junction Block Assembly No. 1 Inner Circuit (2GR-FKS, 6AR-FSE, A25A-FKS)(1/5)]

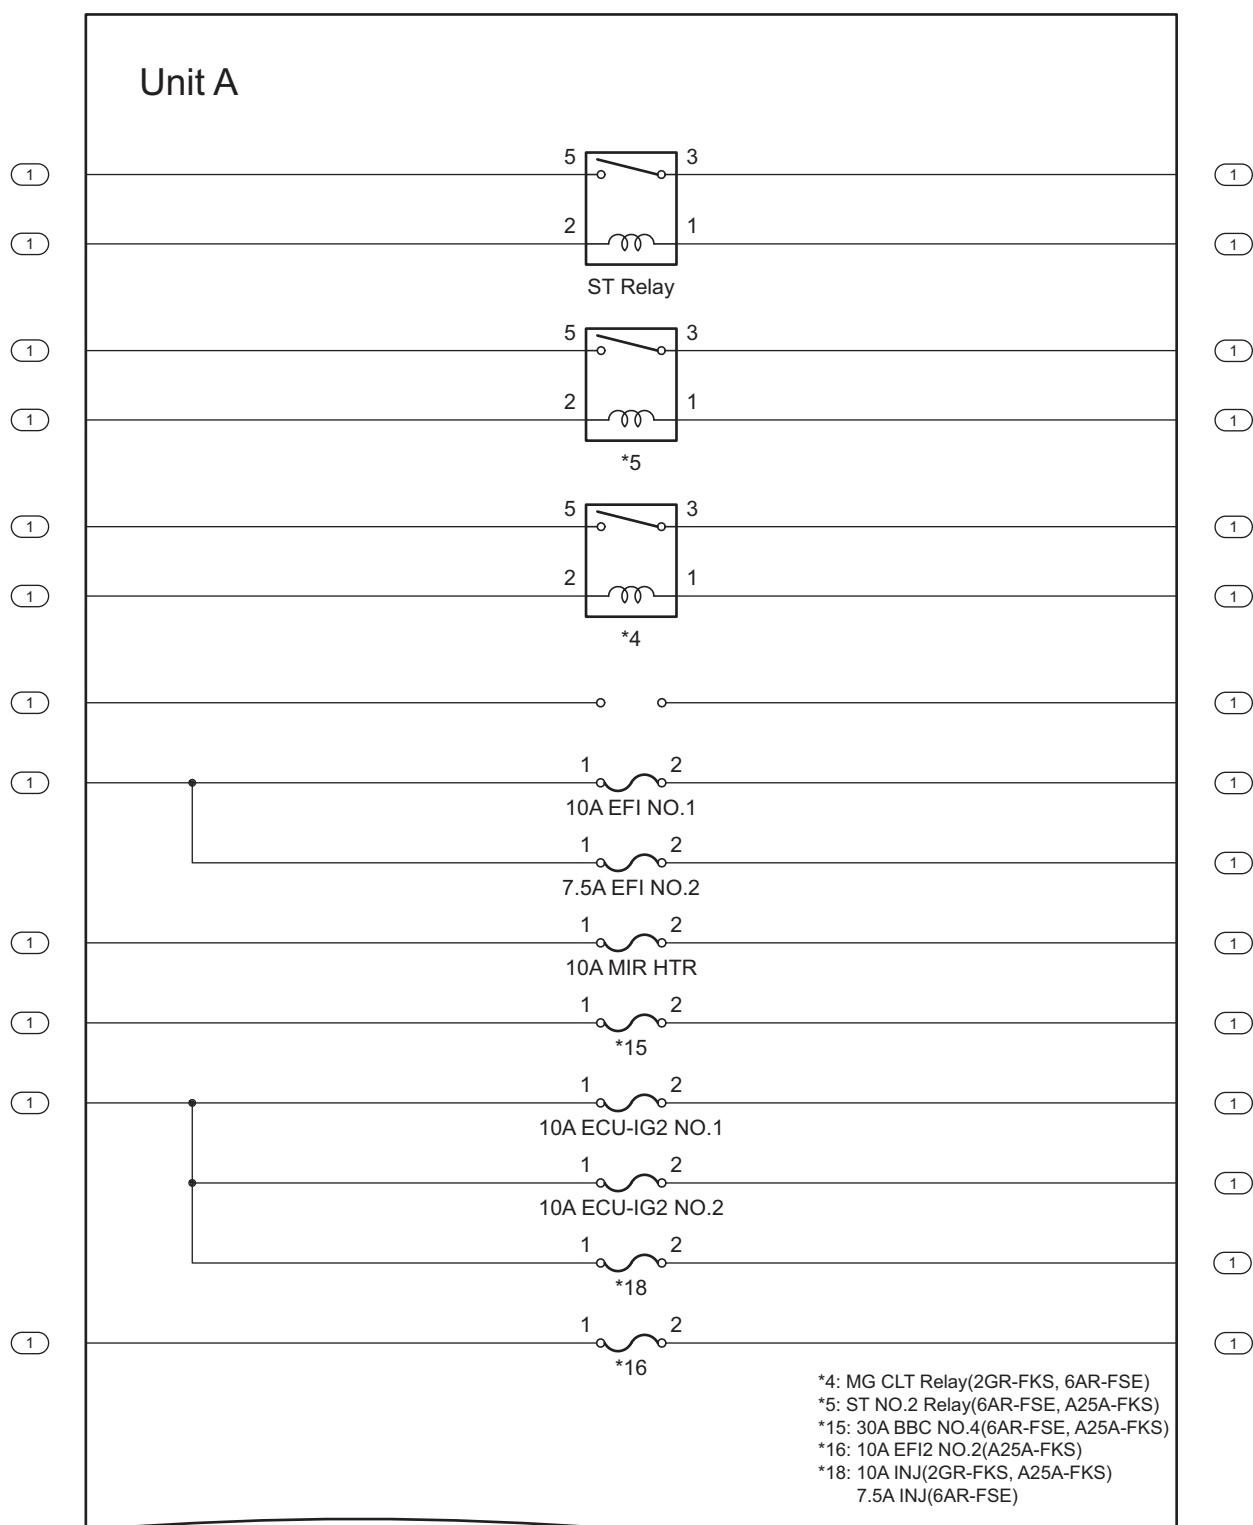


[Engine Room Relay Block Assembly No. 1 and Engine Room Junction Block Assembly No. 1 Inner Circuit (2GR-FKS, 6AR-FSE, A25A-FKS)(2/5)]

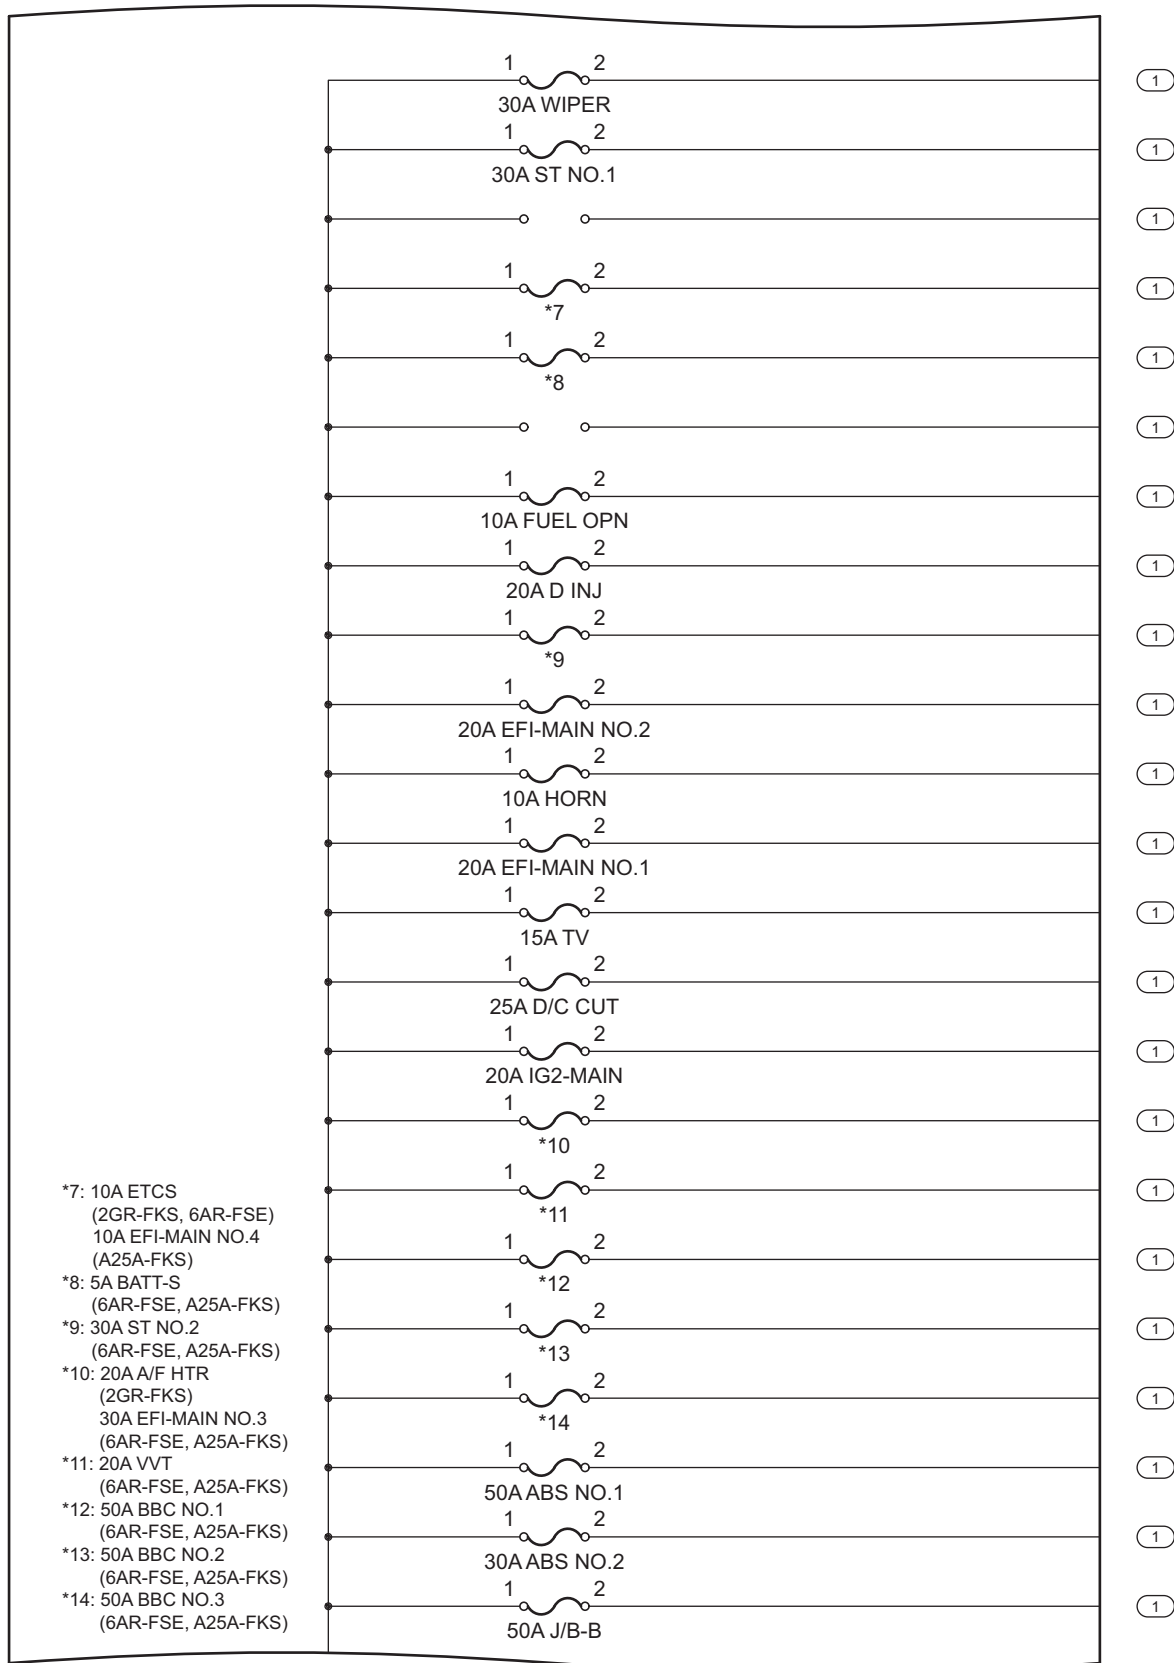


[Engine Room Relay Block Assembly No. 1 and Engine Room Junction Block Assembly No. 1 Inner Circuit (2GR-FKS, 6AR-FSE, A25A-FKS)(3/5)]

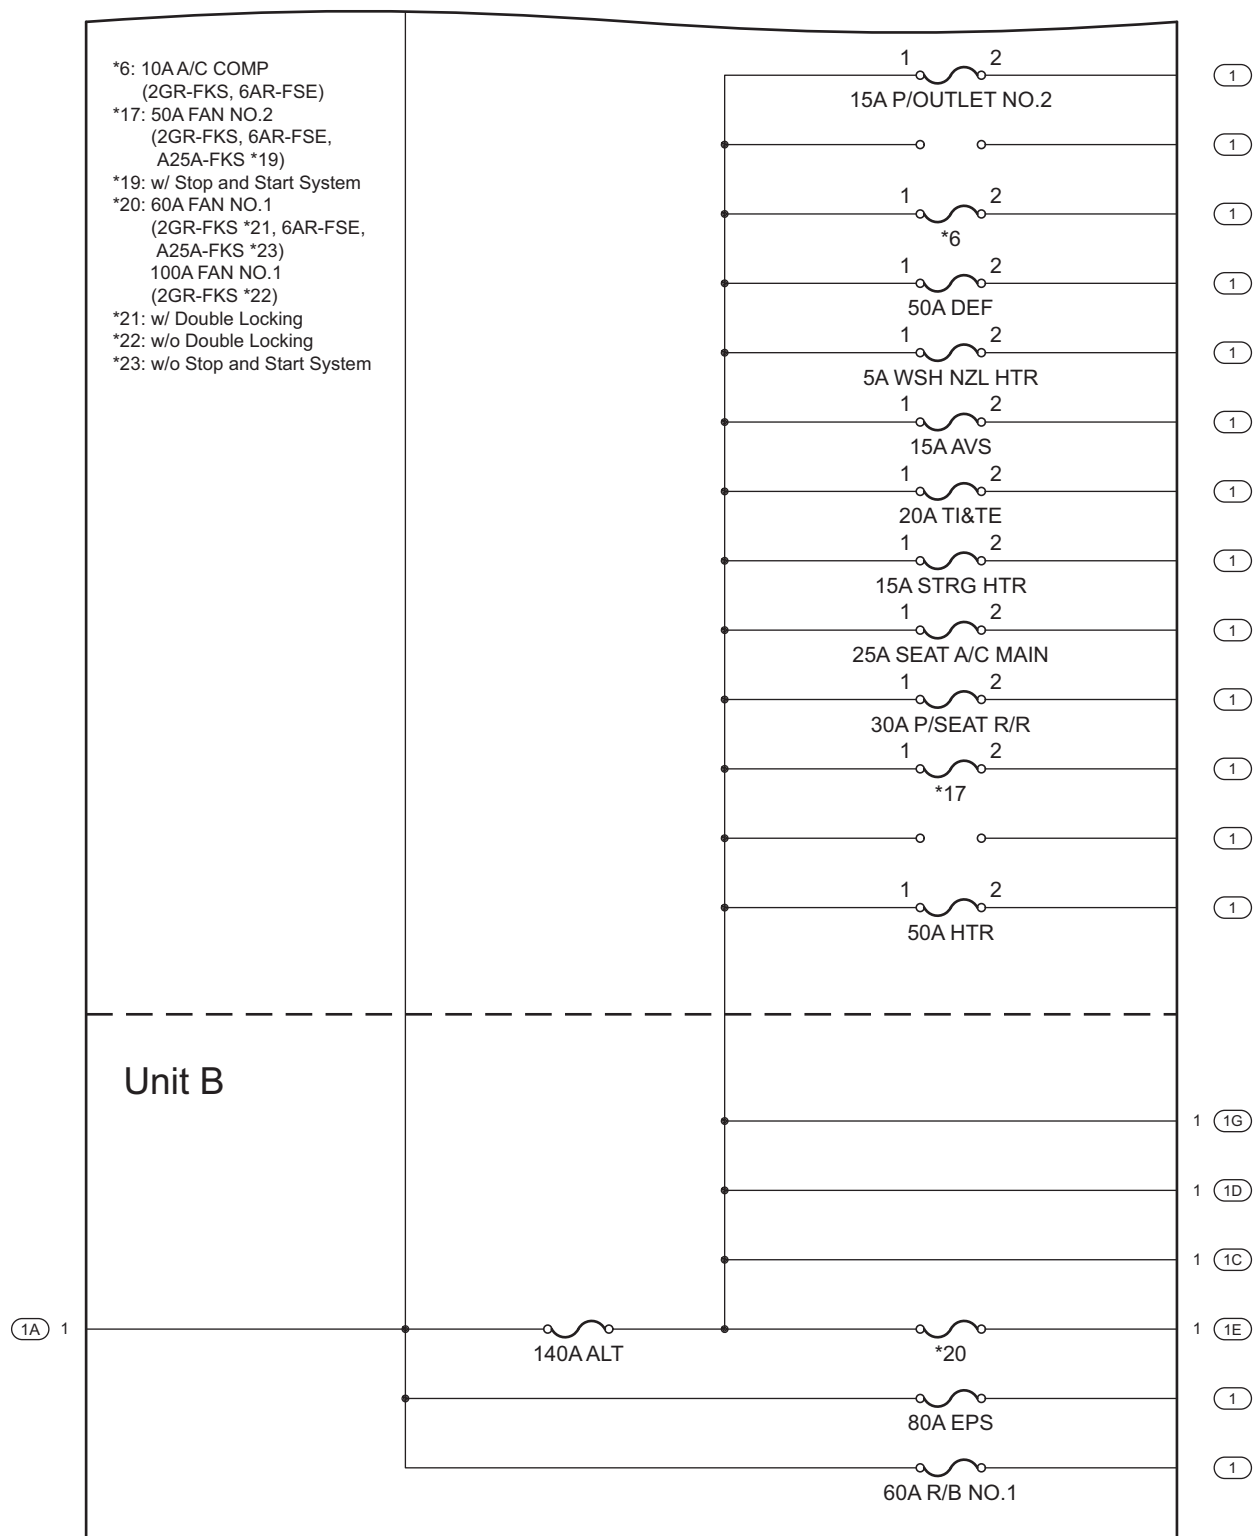


[Engine Room Relay Block Assembly No. 1 and Engine Room Junction Block Assembly No. 1 Inner Circuit (2GR-FKS, 6AR-FSE, A25A-FKS)(4/5)]

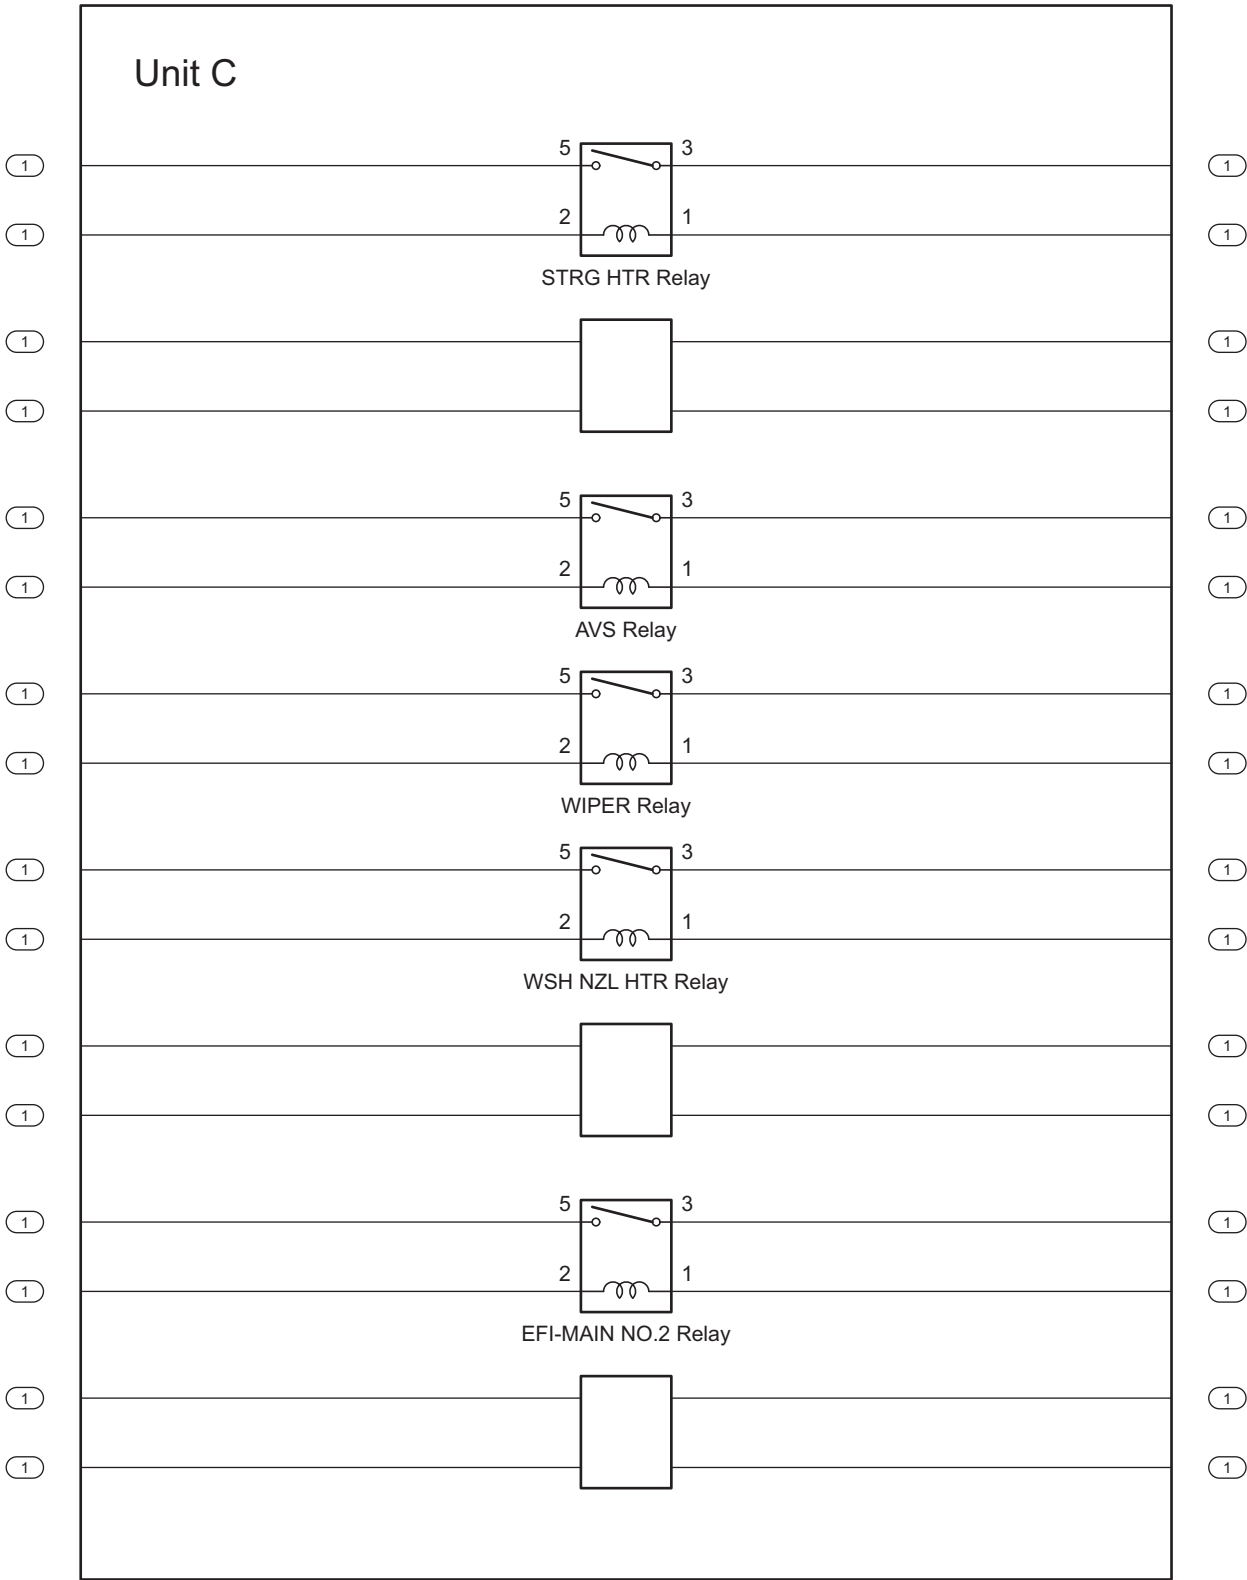


[Engine Room Relay Block Assembly No. 1 and Engine Room Junction Block Assembly No. 1 Inner Circuit (2GR-FKS, 6AR-FSE, A25A-FKS)(5/5)]

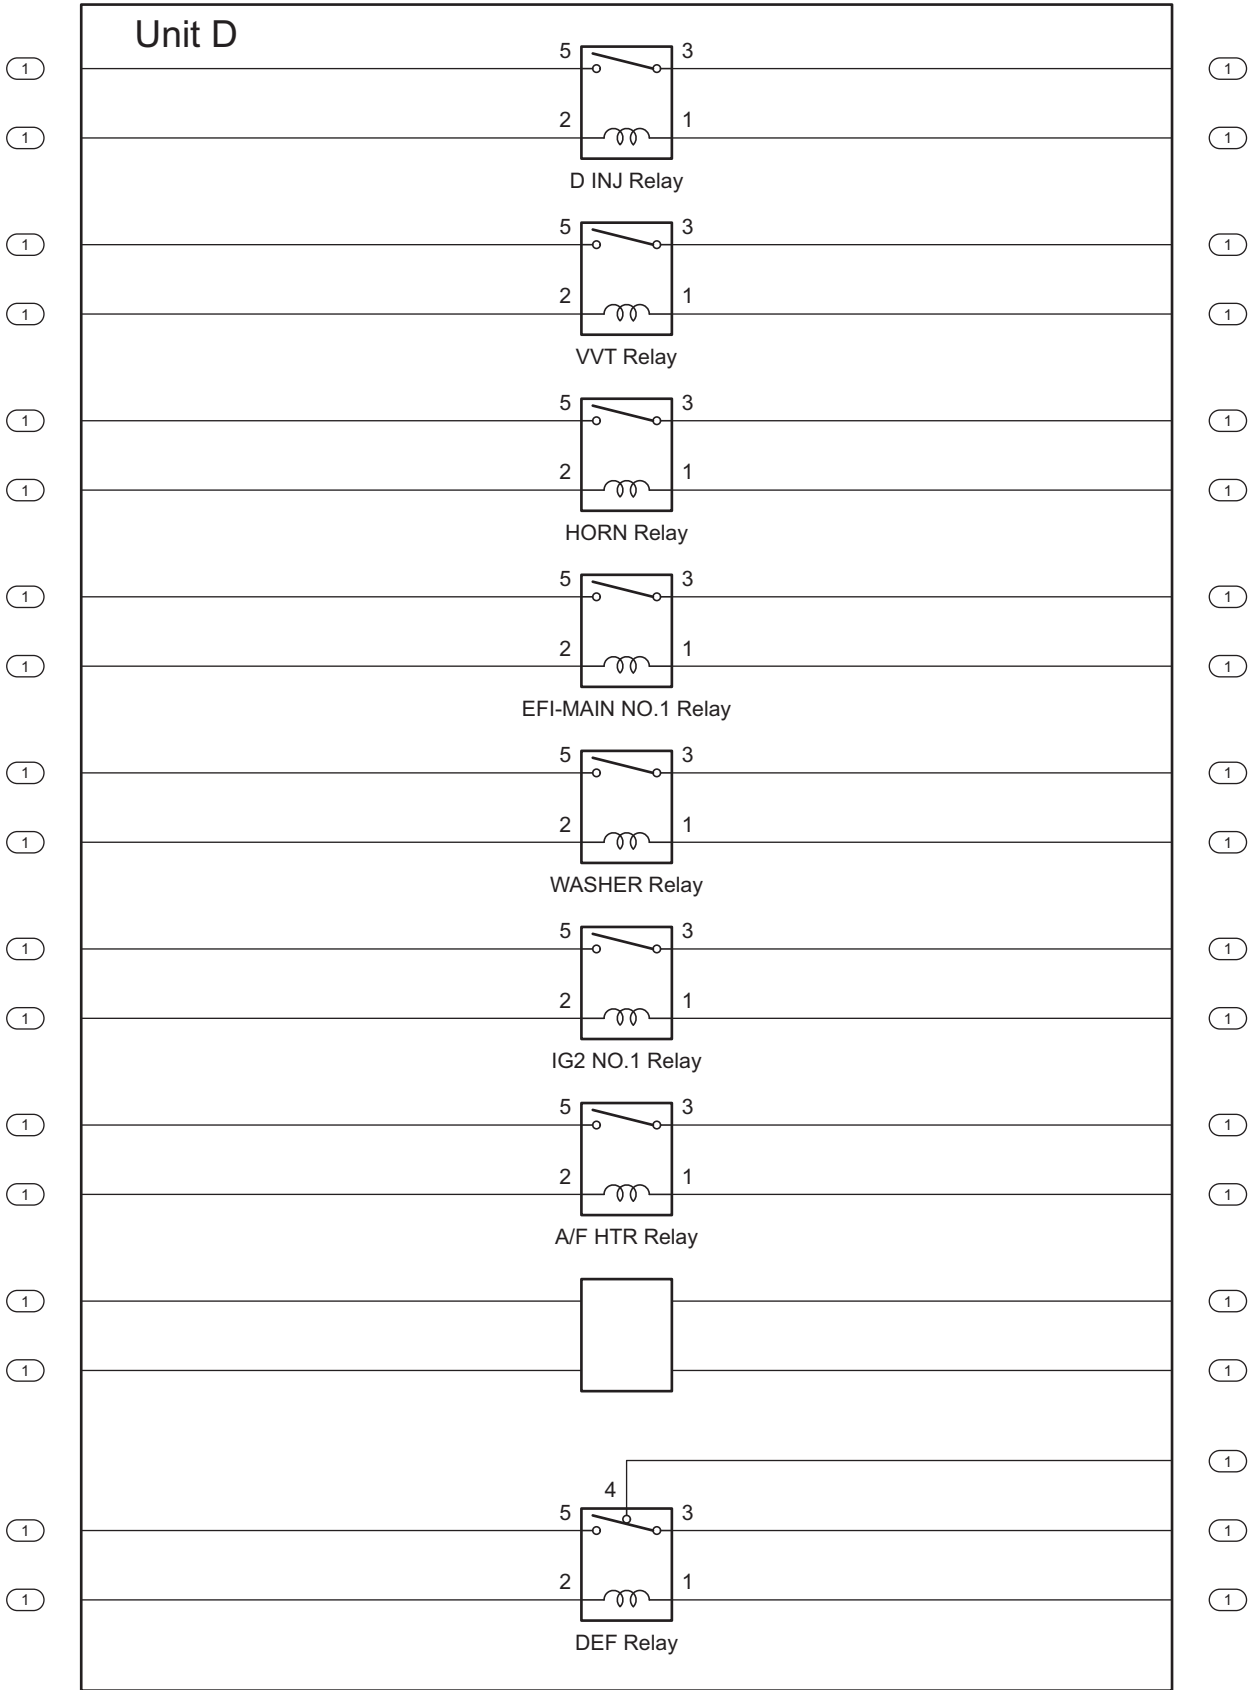


[Engine Room Relay Block Assembly No. 1 and Engine Room Junction
Block Assembly No. 1 Inner Circuit (A25A-FXS)(1/5)]

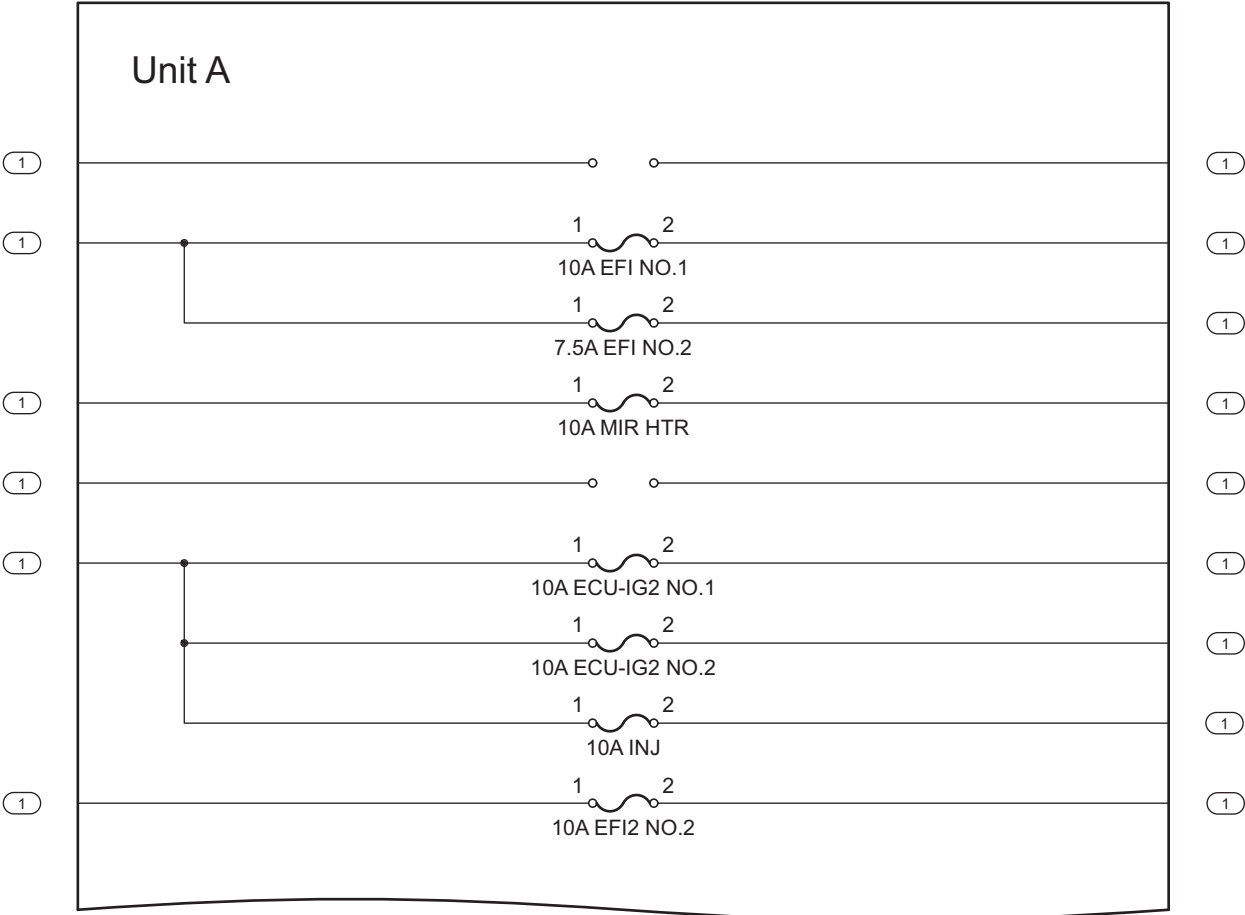


[Engine Room Relay Block Assembly No. 1 and Engine Room Junction Block Assembly No. 1 Inner Circuit (A25A-FXS)(2/5)]

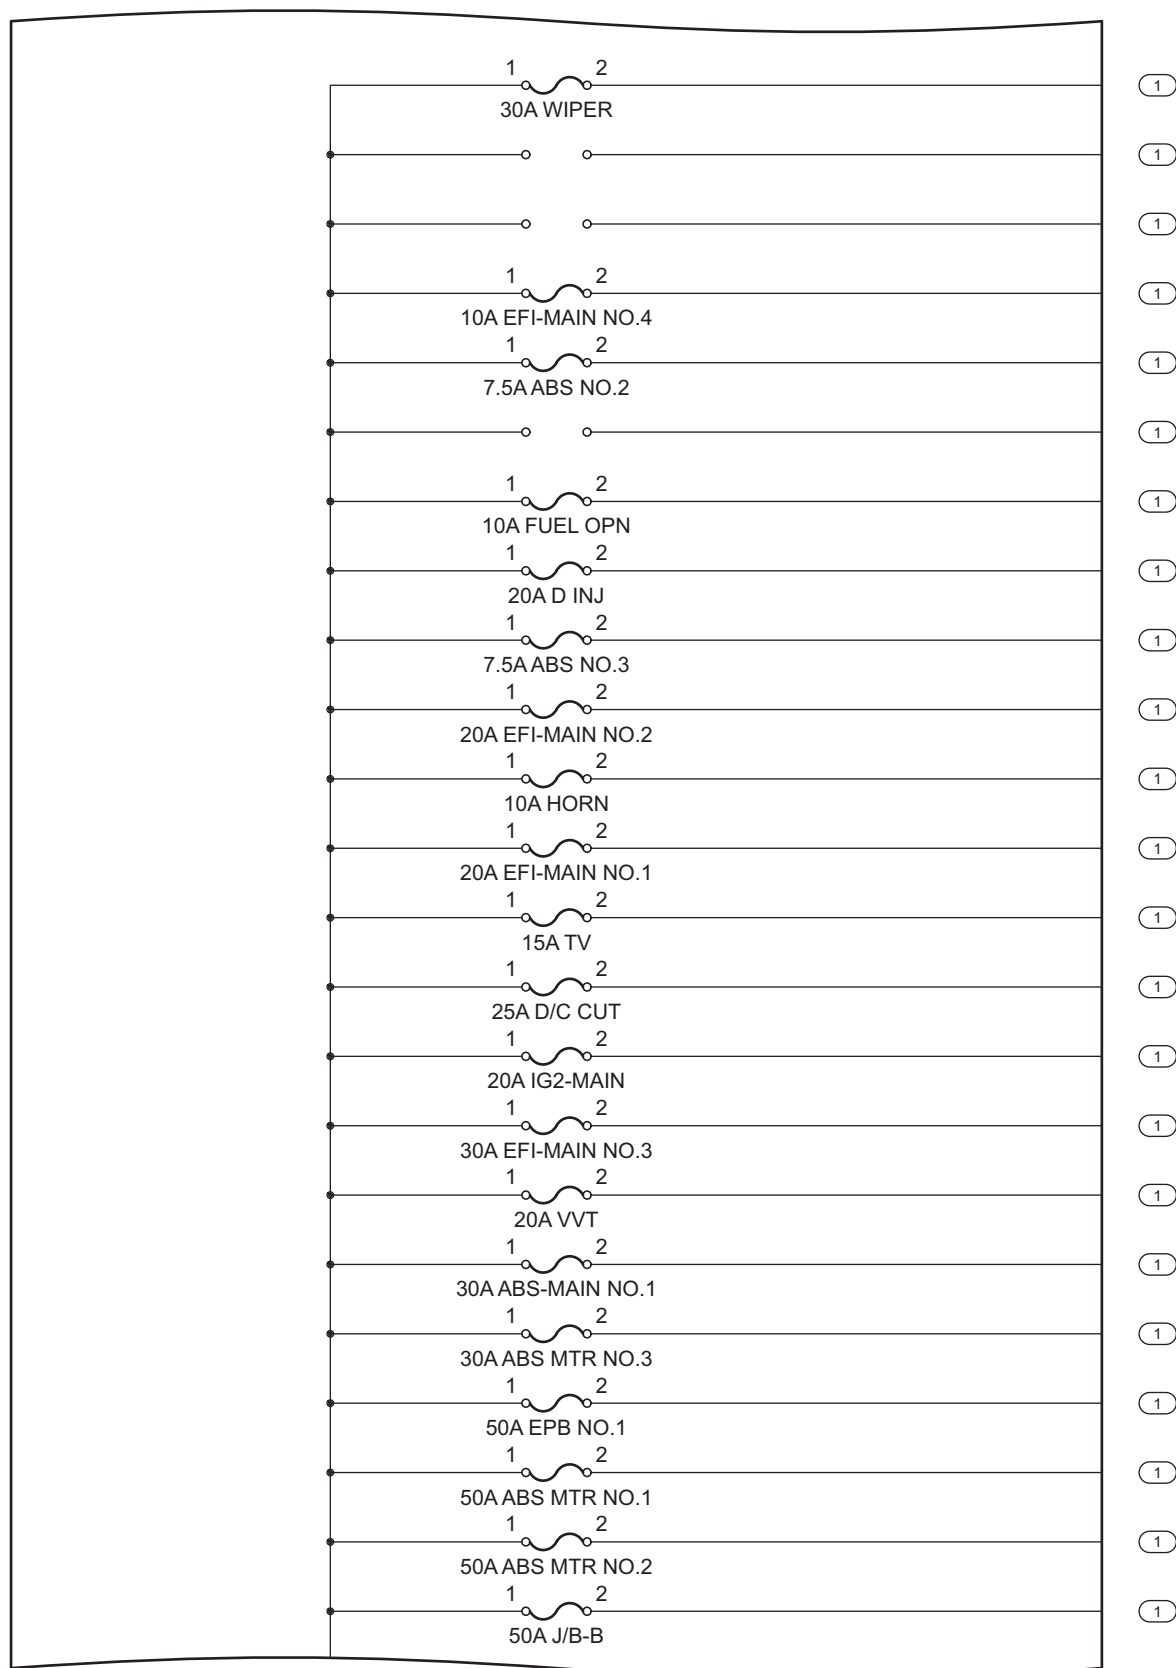

[Engine Room Relay Block Assembly No. 1 and Engine Room Junction Block Assembly No. 1 Inner Circuit (A25A-FXS)(3/5)]

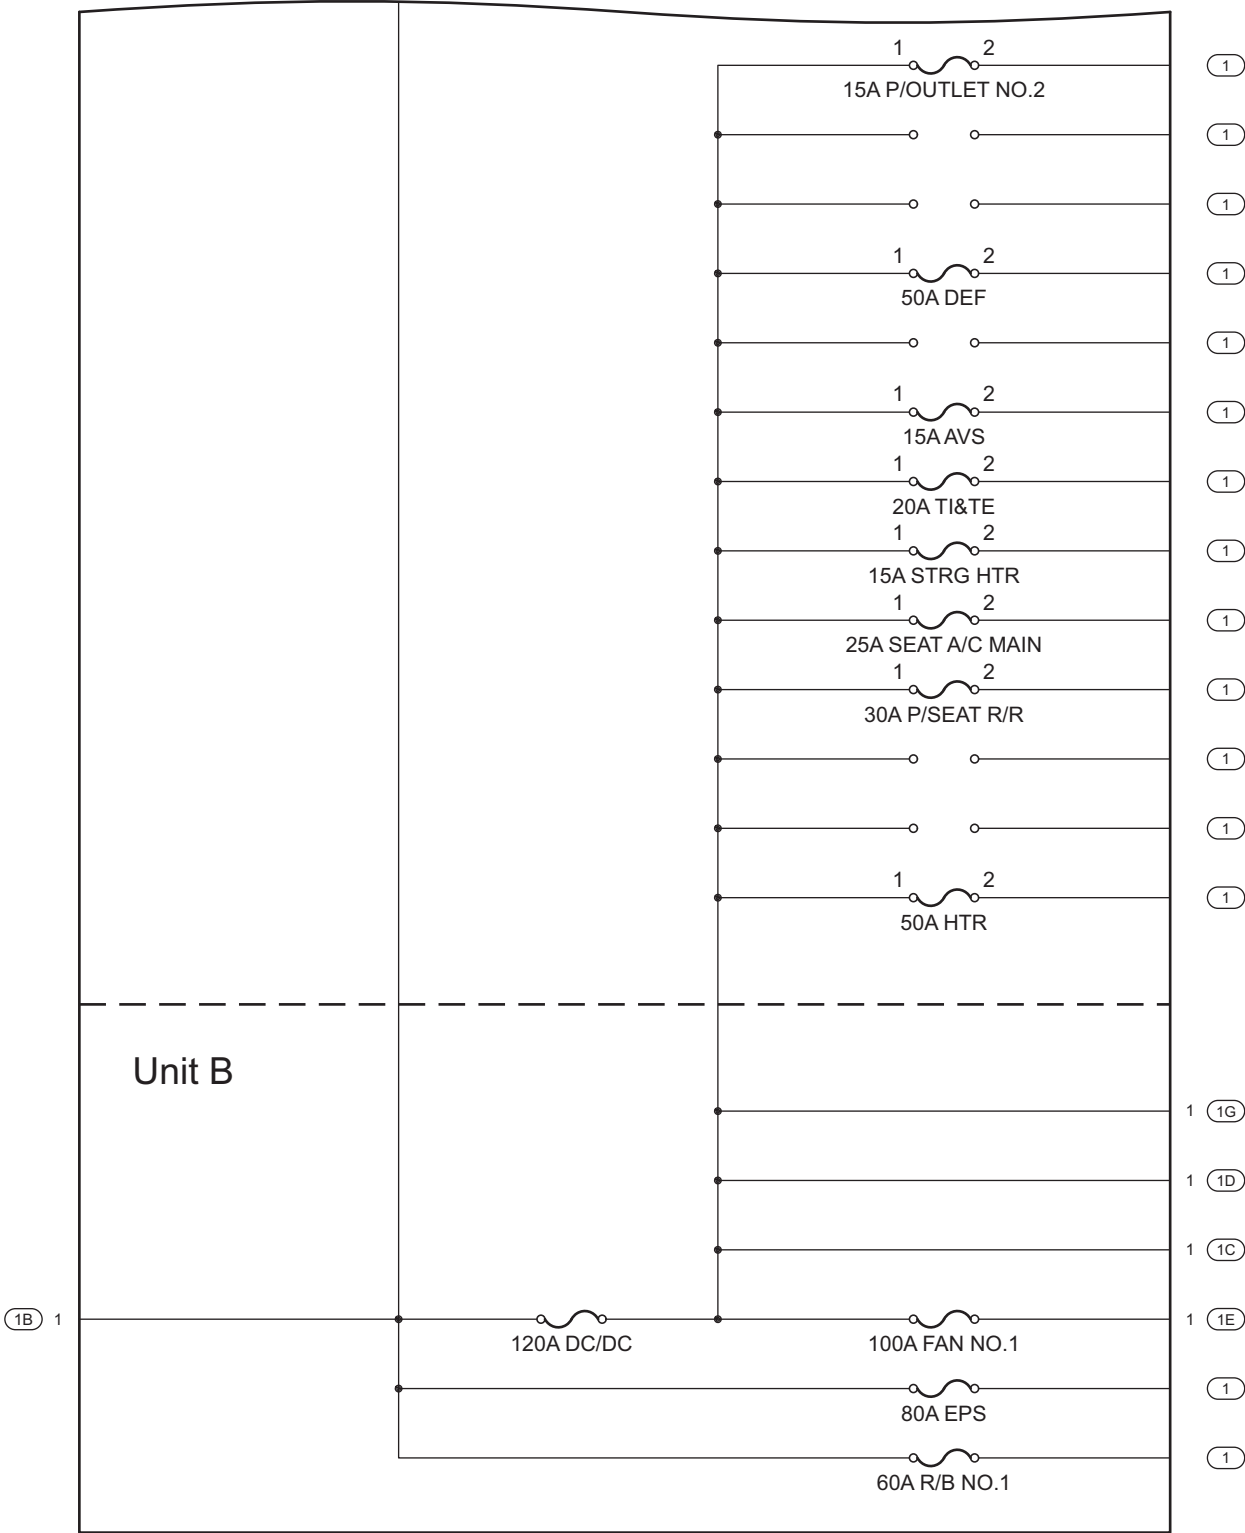

[Engine Room Relay Block Assembly No. 1 and Engine Room Junction Block Assembly No. 1 Inner Circuit (A25A-FXS)(4/5)]

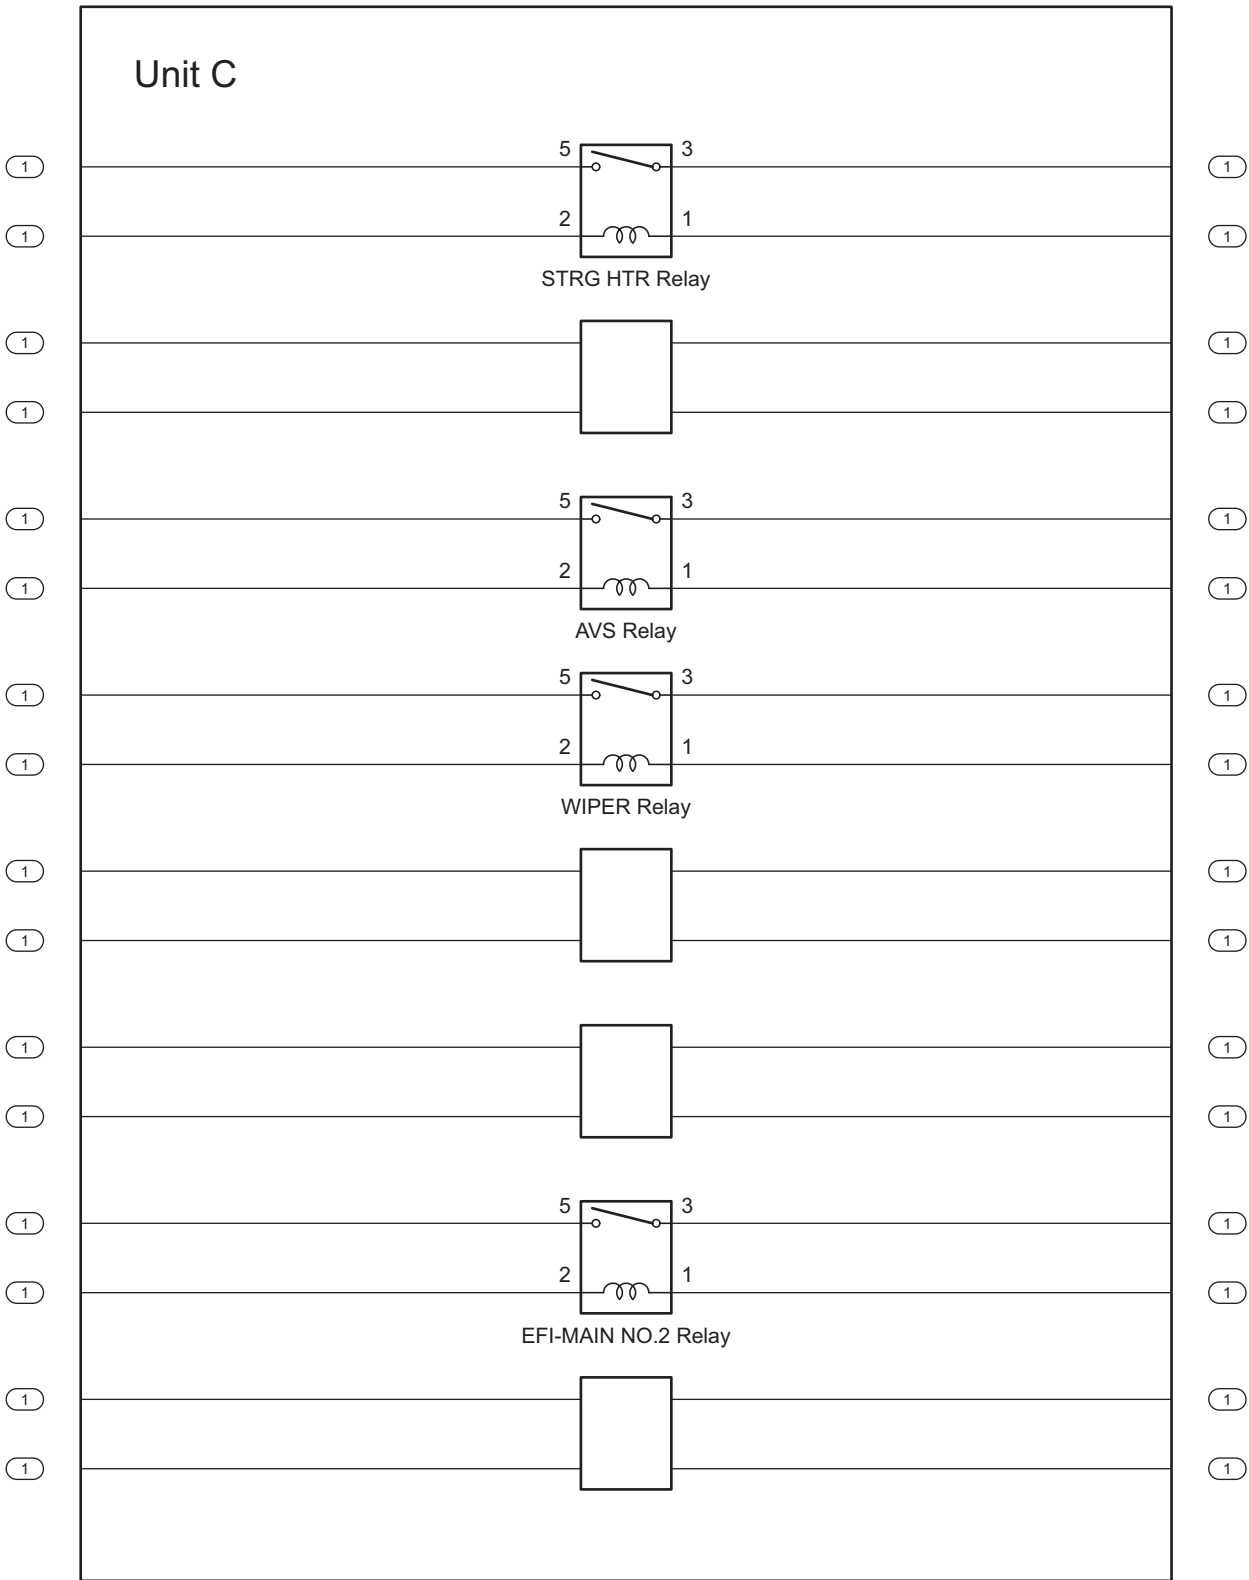

[Engine Room Relay Block Assembly No. 1 and Engine Room Junction Block Assembly No. 1 Inner Circuit (A25A-FXS)(5/5)]

