



**Engine Room Relay Block
Assembly No. 1 and
Engine Room Junction Block
Assembly No. 1
(2GR-FKS, 6AR-FSE, A25A-FKS)**

Front Fender Apron LH

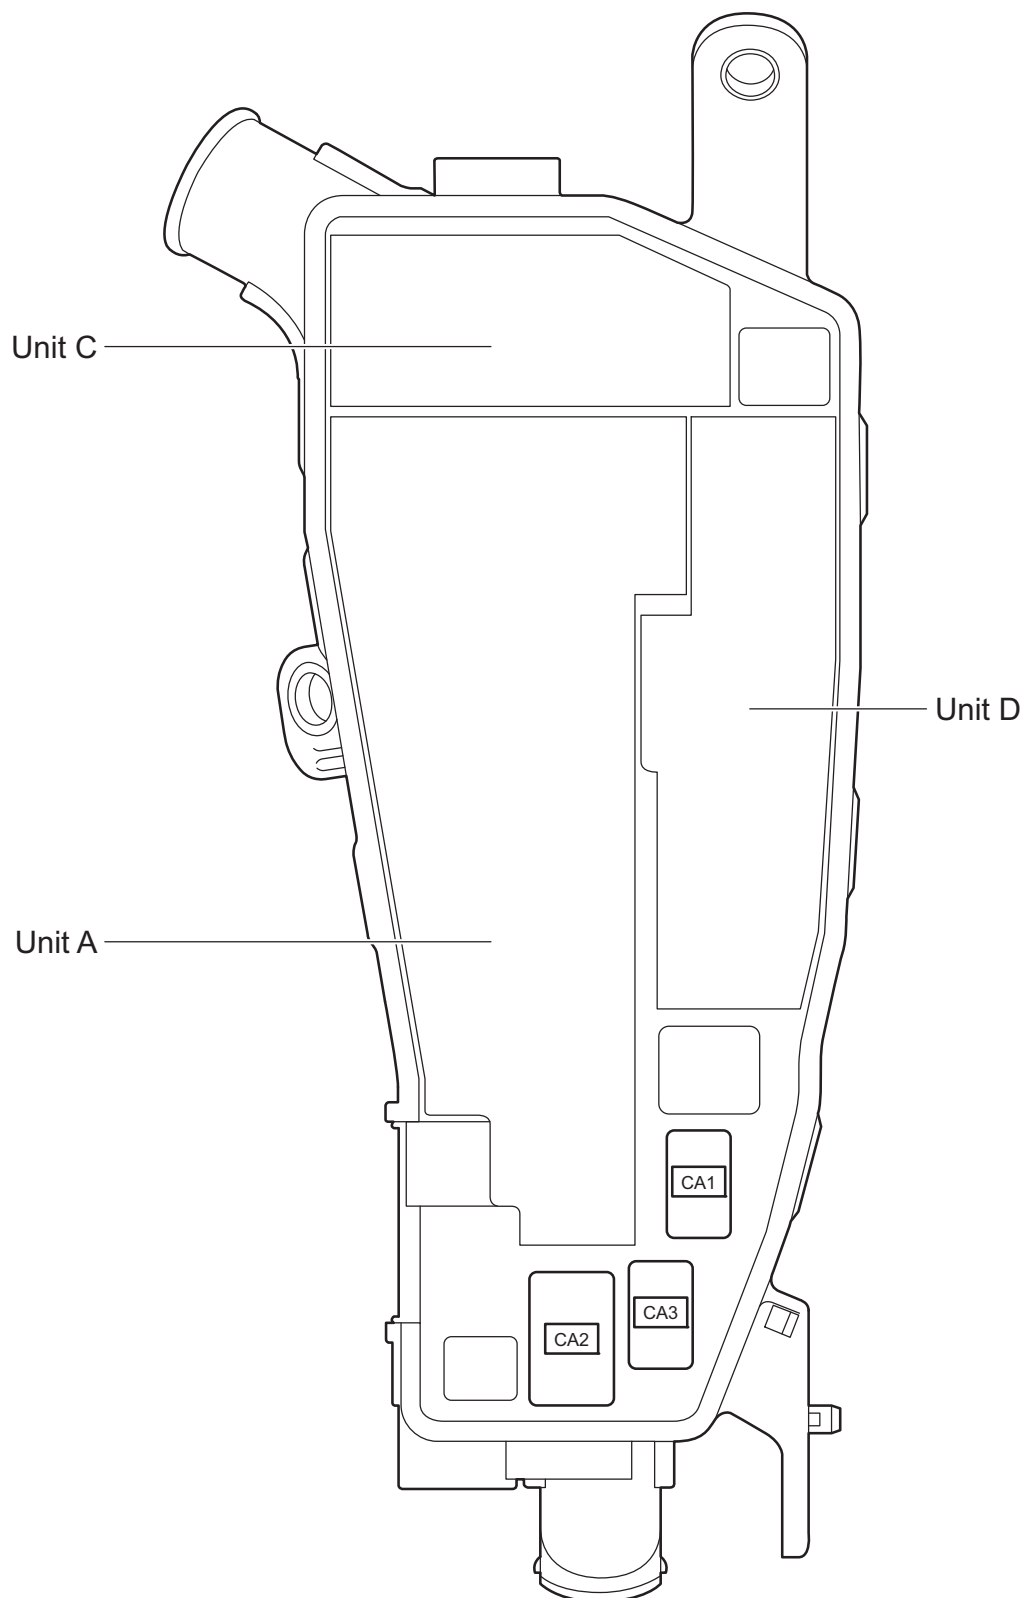


Unit A

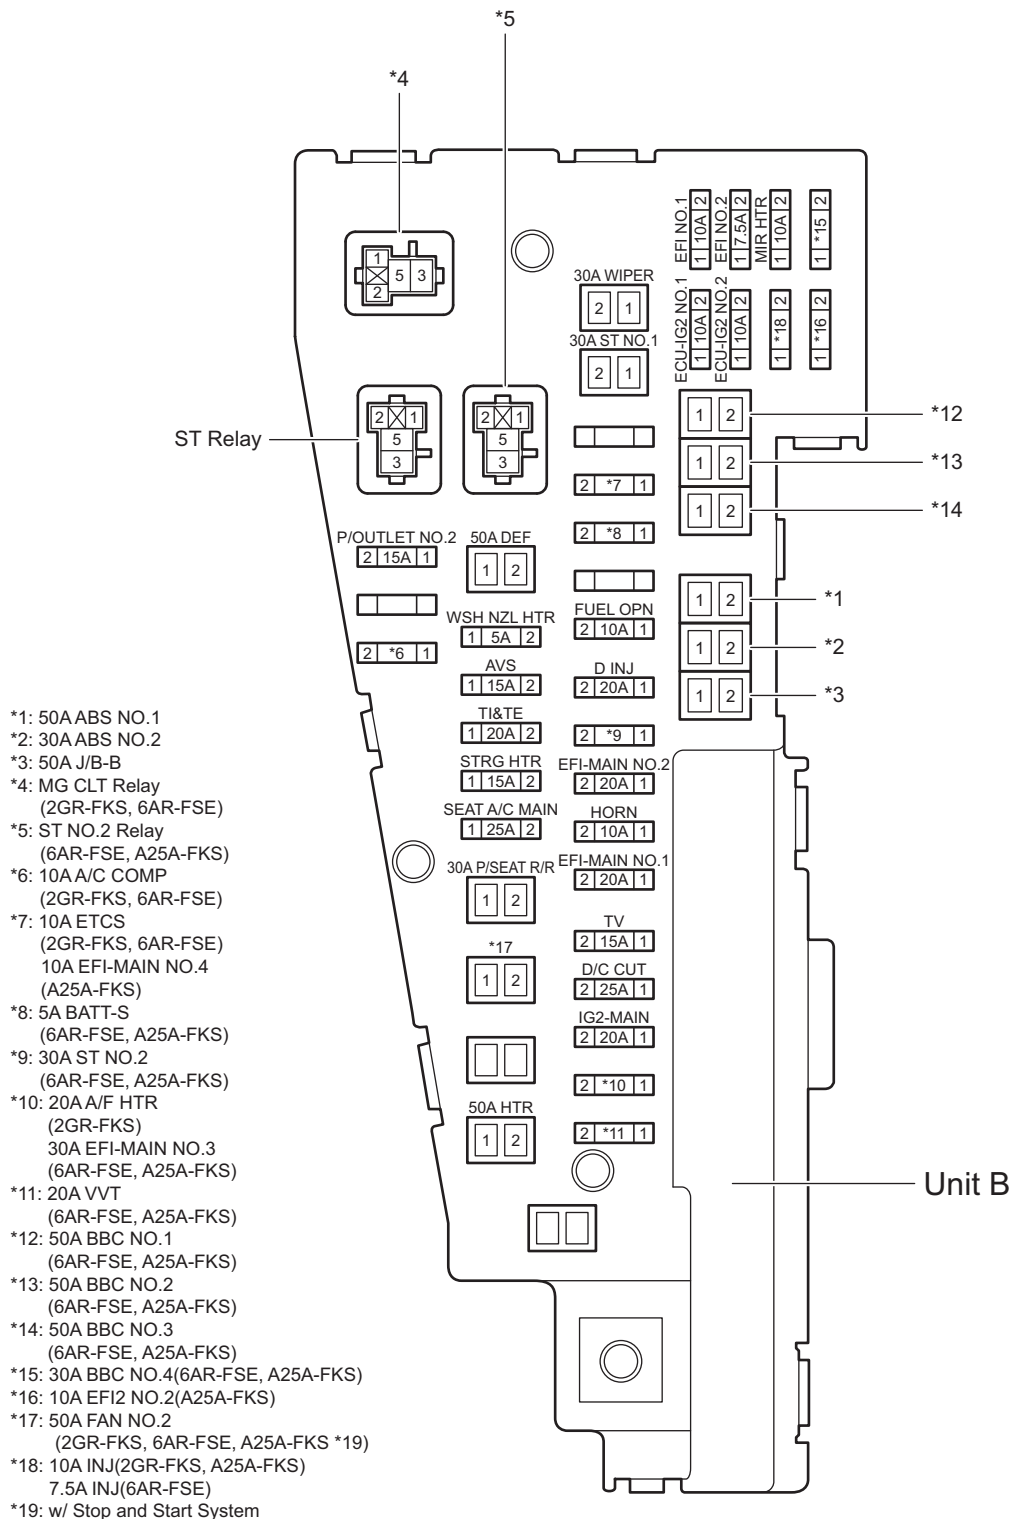


Unit B

Top View

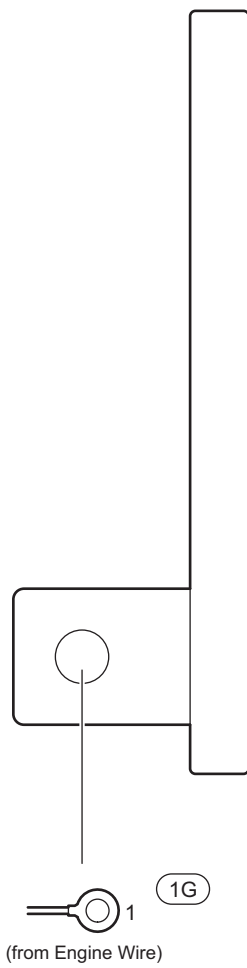


Side View

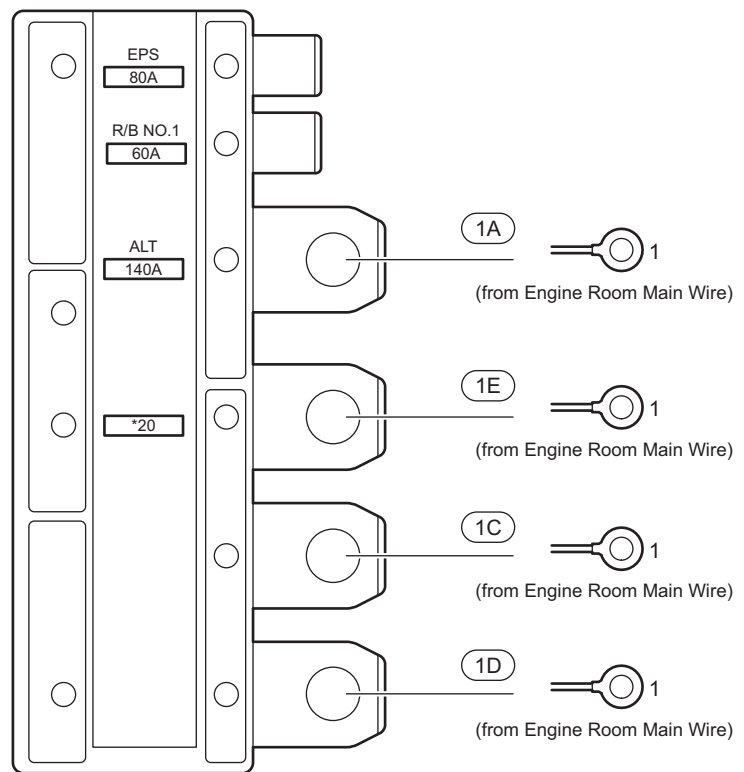


*20: 60A FAN NO.1
(2GR-FKS *21, 6AR-FSE, A25A-FKS *23)
100A FAN NO.1
(2GR-FKS *22)
*21: w/ Double Locking
*22: w/o Double Locking
*23: w/o Stop and Start System

Unit C

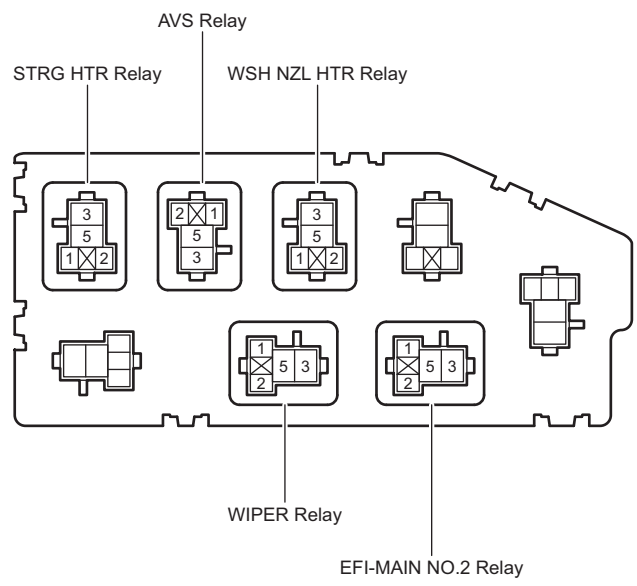


Unit D

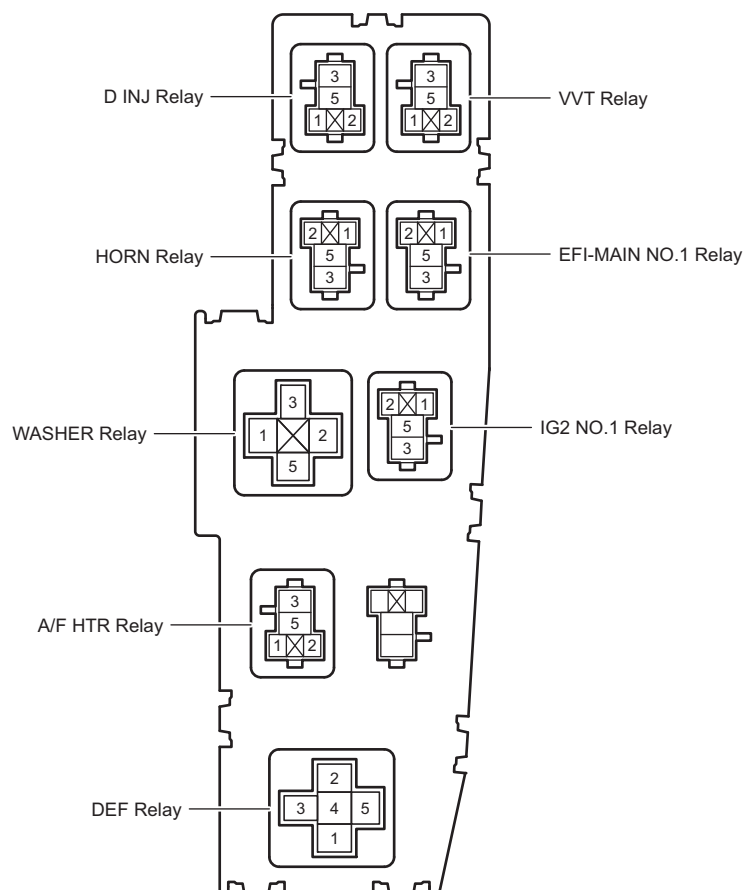


**Engine Room Relay Block
Assembly No. 1 and
Engine Room Junction Block
Assembly No. 1
(A25A-FXS)**

Front Fender Apron LH

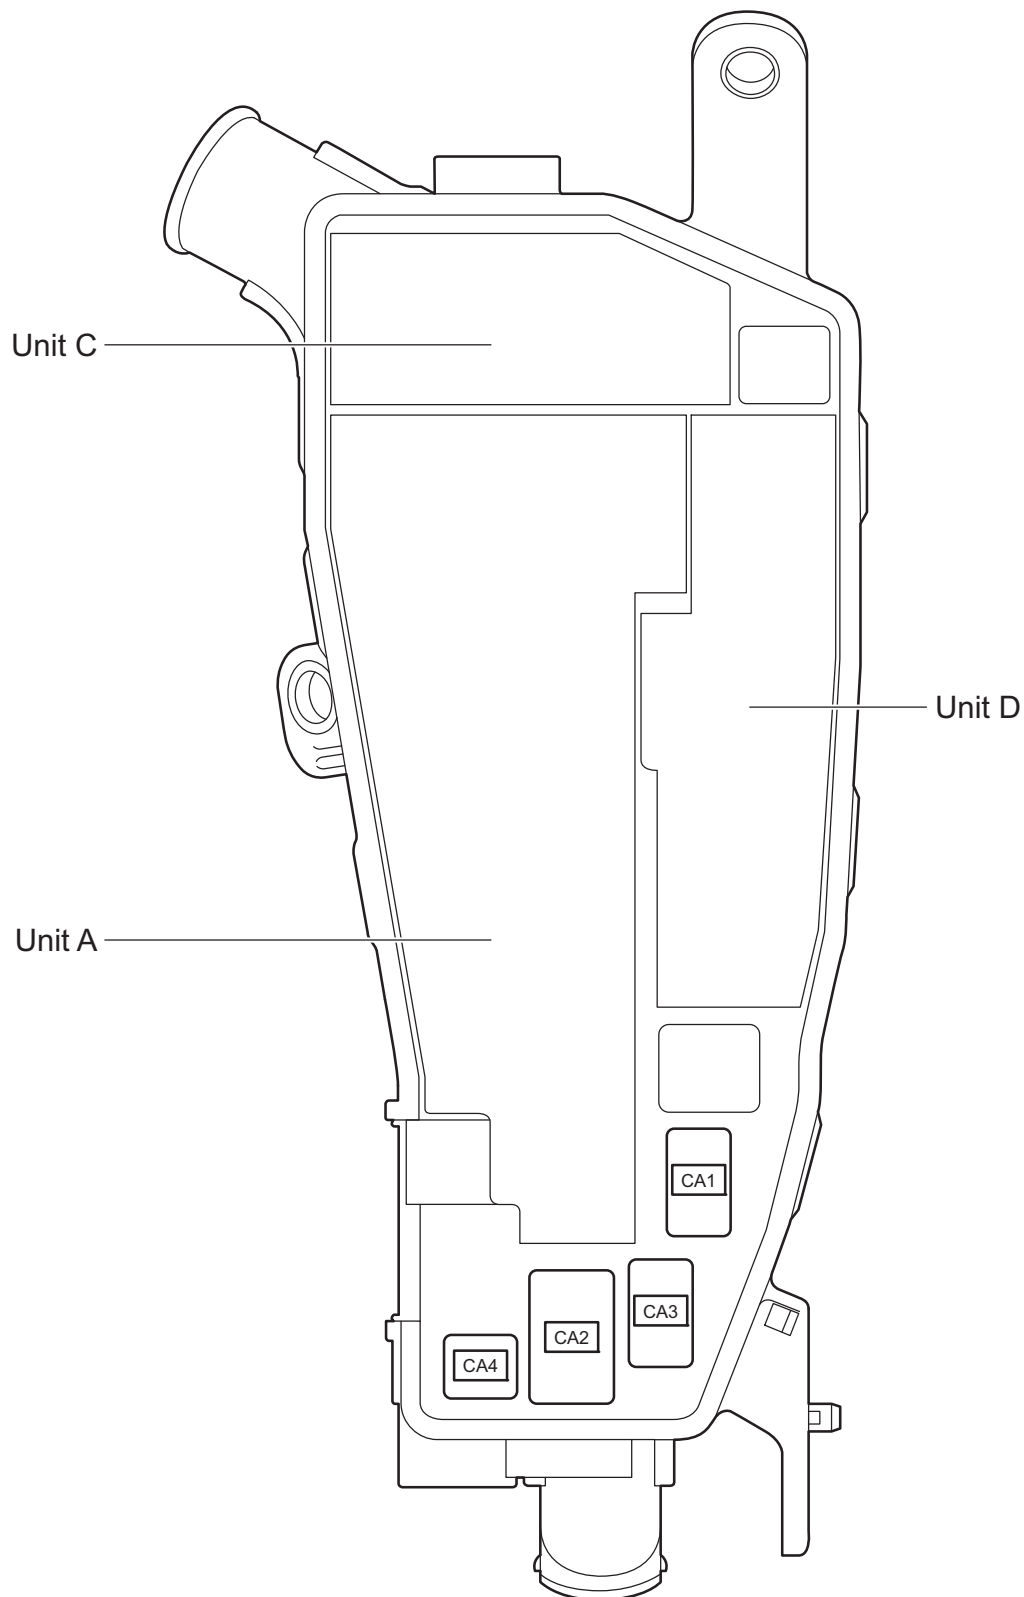


Unit A

- *1: 30A ABS-MAIN NO.1
- *2: 30A ABS MTR NO.3
- *3: 50A EPB NO.1
- *4: 50A ABS MTR NO.1
- *5: 50A ABS MTR NO.2
- *6: 50A J/B-B

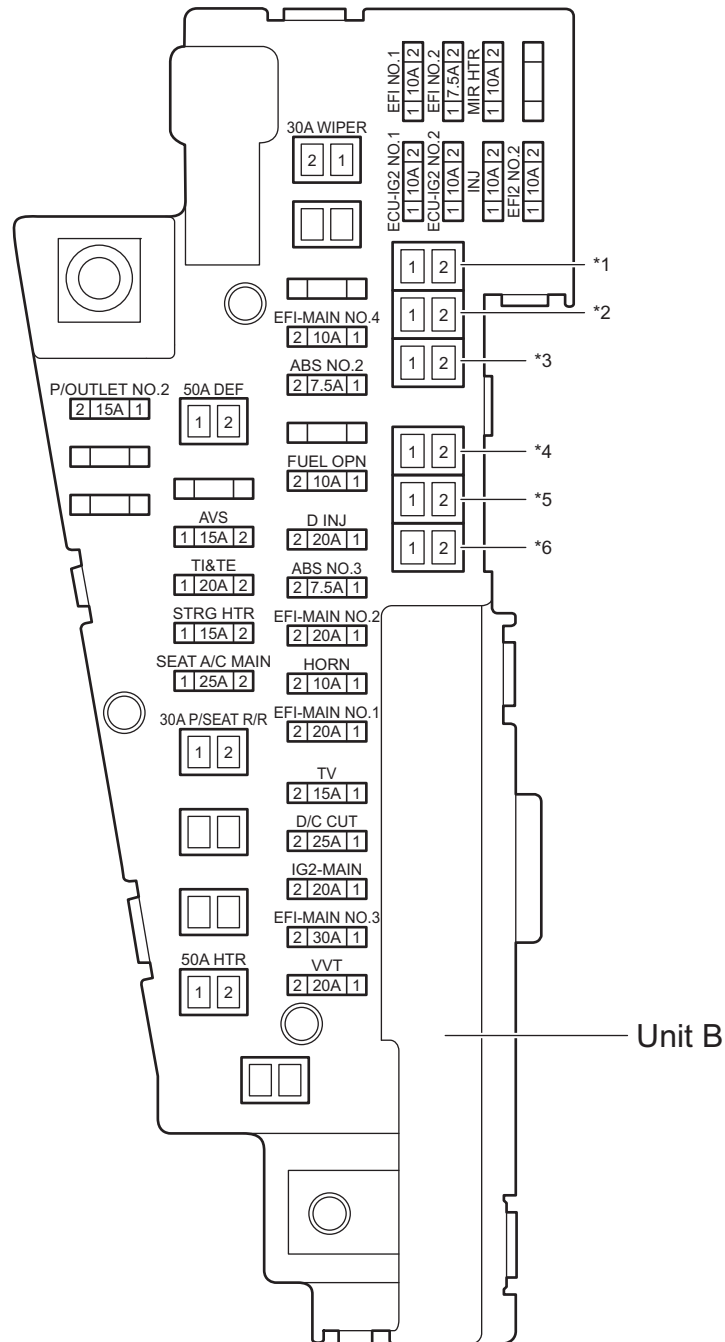


Unit B


Top View

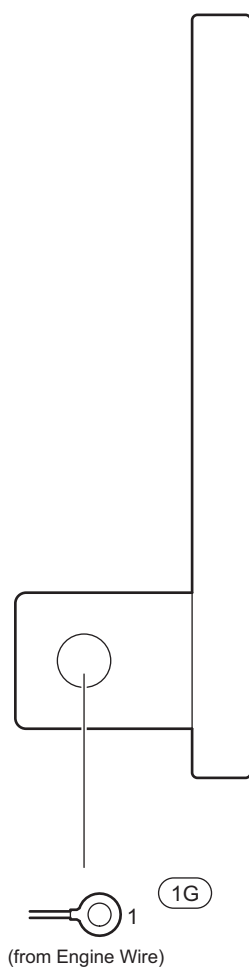

Side View

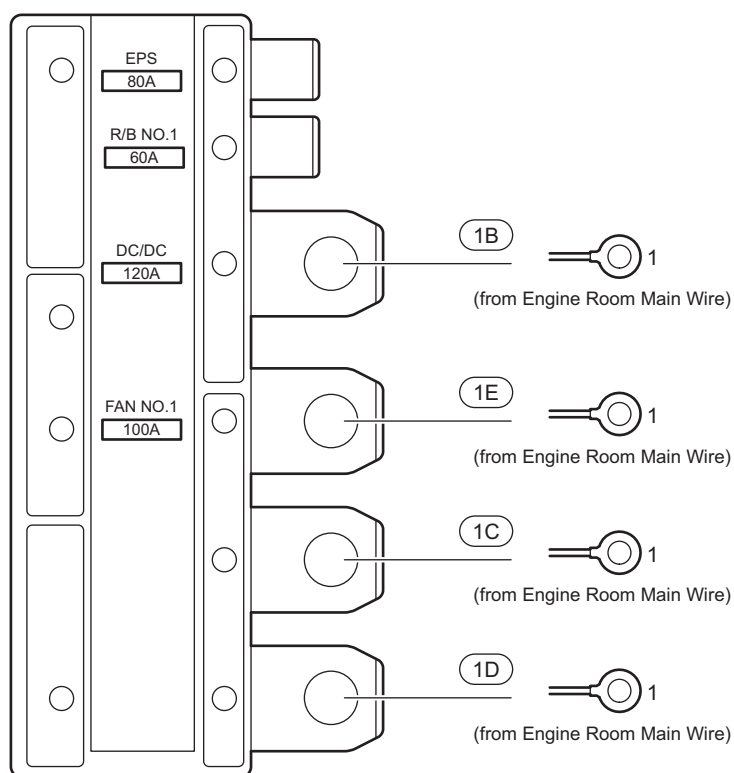

Unit C

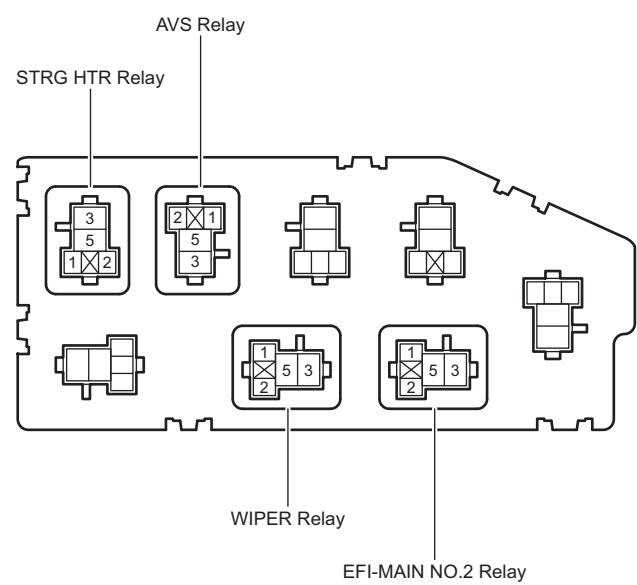

Unit D

