

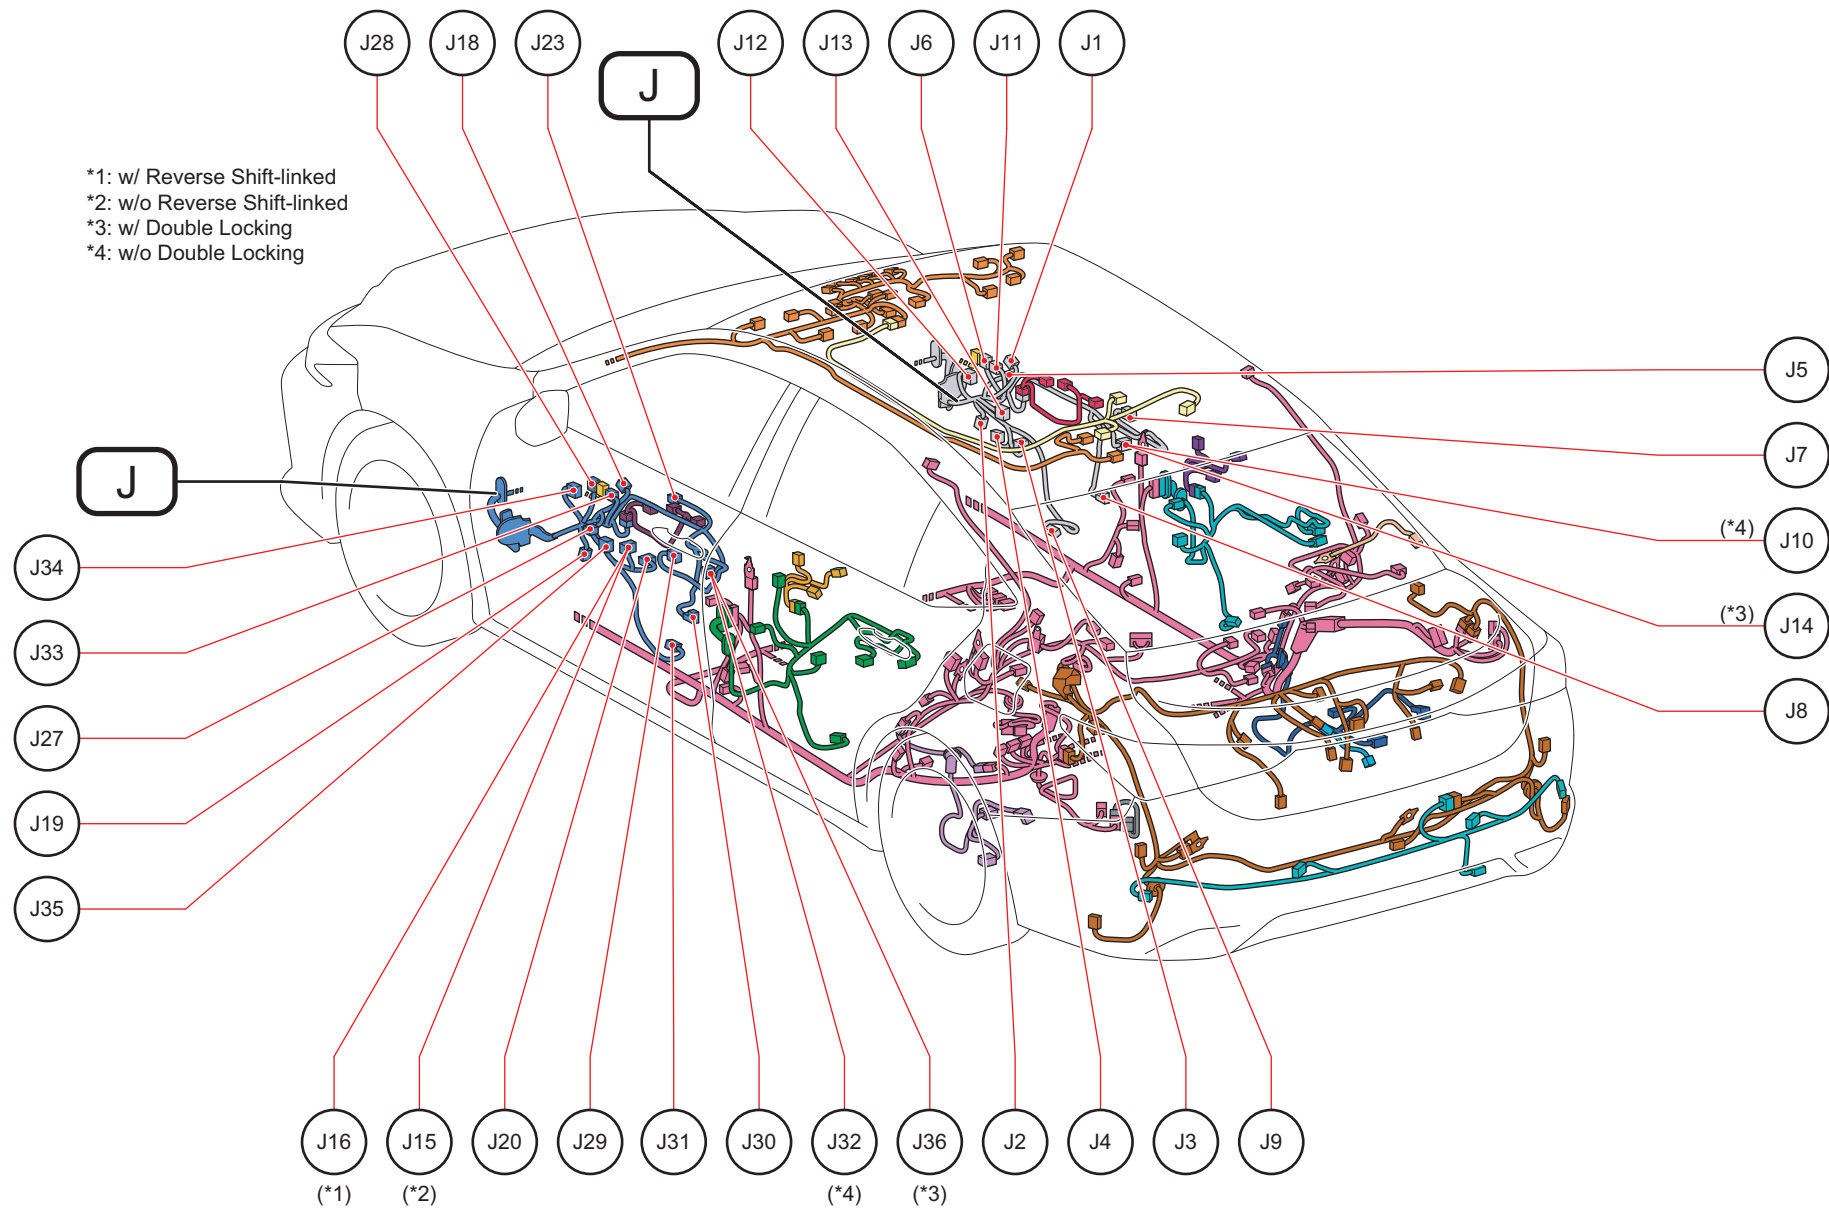
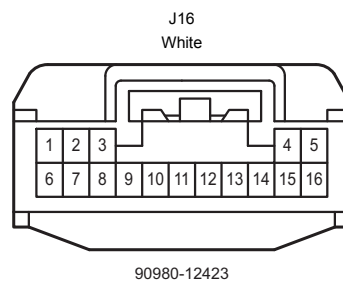
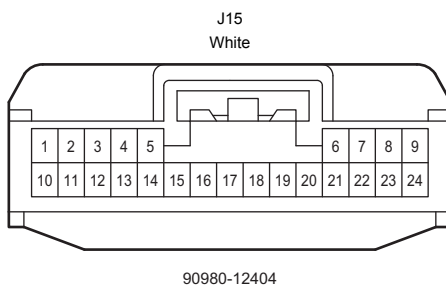
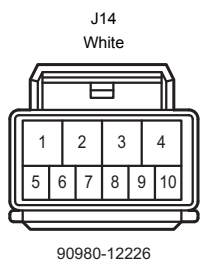
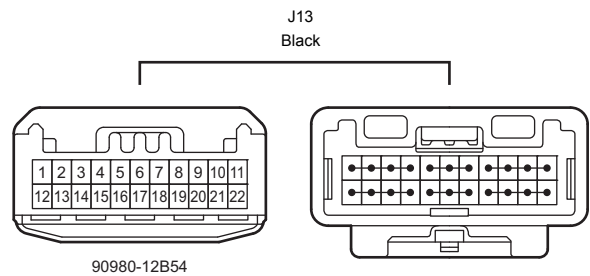
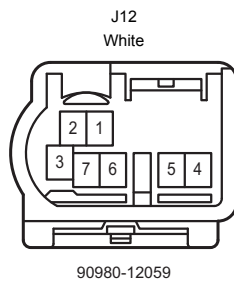
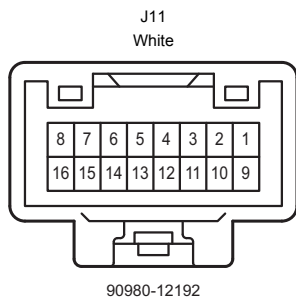
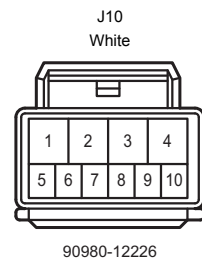
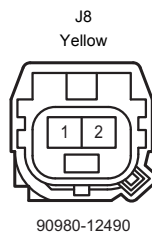
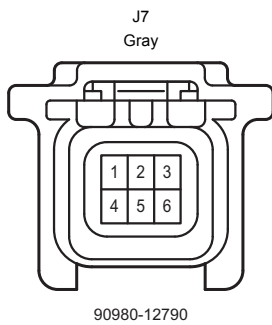
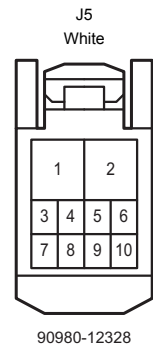
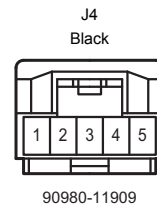
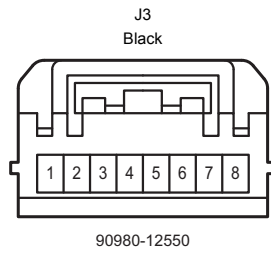


Position of Parts in Body (LHD/2GR-FKS, 6AR-FSE, A25A-FKS)

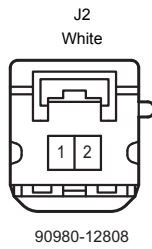

- J 1 Front No. 1 Speaker Assembly RH
- J 2 Front No. 4 Speaker Assembly RH
- J 3 Power Window Regulator Switch Assembly
- J 4 Door Control Switch Assembly
- J 5 Power Window Regulator Motor Assembly RH (for Front Passenger Door)
- J 6 Outer Mirror Control ECU Assembly RH
- J 7 Electrical Key Antenna (Front Door Outside Handle Assembly RH)
- J 8 Door Side Airbag Sensor RH
- J 9 Courtesy Light Assembly (for Front RH Side)
- J 10 Front Door Lock with Motor Assembly RH
- J 11 Outer Rear View Mirror Assembly RH
- J 12 Outer Rear View Mirror Assembly RH
- J 13 No. 18 Junction Connector
- J 14 Front Door Lock with Motor Assembly RH
- J 15 Outer Mirror Switch Assembly
- J 16 Outer Mirror Switch Assembly
- J 18 Front No. 1 Speaker Assembly LH
- J 19 Front No. 4 Speaker Assembly LH
- J 20 Multiplex Network Master Switch Assembly
- J 23 Seat Memory Switch LH
- J 27 Power Window Regulator Motor Assembly LH (for Driver Door)
- J 28 Outer Mirror Control ECU Assembly LH
- J 29 Electrical Key Antenna (Front Door Outside Handle Assembly LH)
- J 30 Door Side Airbag Sensor LH
- J 31 Courtesy Light Assembly (for Front LH Side)
- J 32 Front Door Lock with Motor Assembly LH
- J 33 Outer Rear View Mirror Assembly LH
- J 34 Outer Rear View Mirror Assembly LH
- J 35 No. 19 Junction Connector
- J 36 Front Door Lock with Motor Assembly LH

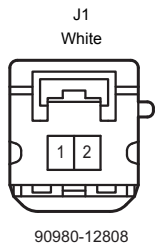

Position of Parts in Body (LHD/2GR-FKS, 6AR-FSE, A25A-FKS)

